

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cecotec](#) /

› [Cecotec Cecofry&Grill Smokin' 11000 BBQ 11L Air Fryer with Grill Instruction Manual](#)

Cecotec A90_EU01_119908

Cecotec Cecofry&Grill Smokin' 11000 BBQ 11L Air Fryer with Grill Instruction Manual

Brand: **Cecotec** | Model: **A90_EU01_119908**

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Cecotec Cecofry&Grill Smokin' 11000 BBQ 11L Air Fryer with Grill. Please read all instructions carefully before first use and retain this manual for future reference.

The Cecofry&Grill Smokin' 11000 BBQ is an advanced air fryer designed for versatile cooking. It features a triple heating element system (top and bottom) for even cooking, an integrated grill, and a unique smoking function. With an 11-liter capacity and 2900W power, it allows for healthy cooking with minimal oil, offering perfect results for a variety of dishes.

Key features include:

- Integrated air fryer, grill, and pizza plate for diverse cooking.
- Smoking function using wood chips for enhanced flavor.
- Triple heating resistance (top and bottom) for homogeneous heat distribution and consistent results without constant food turning.
- Grillin Style plate for perfect meat grilling.
- 11-liter capacity for family meals or individual portions.
- 2900W power for efficient cooking with reduced oil.
- Removable divider to create two 4.5L-6.5L baskets or a single large compartment.
- Adjustable temperature range of 40-200°C.
- Front viewing window with internal light for monitoring cooking progress.
- 10 pre-set menus and Sync function for simultaneous cooking of different dishes.

2. SAFETY INSTRUCTIONS

- Always place the appliance on a stable, heat-resistant surface.
- Ensure adequate ventilation around the appliance during use.
- Do not immerse the main unit in water or any other liquid.
- Keep children and pets away from the appliance during operation.
- Do not touch hot surfaces. Use oven mitts or the handles provided.
- Unplug the appliance when not in use and before cleaning.
- Do not operate the appliance if it is damaged or malfunctioning.
- Only use accessories recommended by the manufacturer.
- Exercise caution when handling hot oil or other hot liquids.

3. PRODUCT COMPONENTS

The Cecofry&Grill Smokin' 11000 BBQ includes the following main components:

- Main Unit with Control Panel and Viewing Window
- Removable Cooking Basket(s)
- Removable Divider (for dual zone cooking)
- Grill Plate
- Smoking Box (for wood chips)
- Power Cord



Figure 1: Overall view of the Cecotec Cecofry&Grill Smokin' 11000 BBQ Air Fryer with Grill.

This image displays the main unit of the Cecotec Cecofry&Grill Smokin' 11000 BBQ Air Fryer. It highlights the sleek black design, the digital control panel on top, and the large front viewing window that allows users to monitor their food as it cooks. The handles for the cooking baskets are visible at the bottom front.



Figure 2: Woman removing the cooking basket from the air fryer.

This image shows a woman carefully removing one of the cooking baskets from the Cecotec air fryer. The basket contains a whole roasted chicken surrounded by vegetables, demonstrating the appliance's capacity and the ease of access to the cooked food. The internal light is visible, illuminating the contents.



Figure 3: Dual cooking zones with the removable divider in place.

This image illustrates the versatility of the Cecotec air fryer with its removable divider. The cooking basket is split into two compartments, allowing different foods (e.g., vegetables and a large cut of meat) to be cooked simultaneously at potentially different settings using the Sync function. The internal light highlights the food.

4. SETUP

- 1. Unpacking:** Carefully remove all packaging materials, including any protective films or stickers.
- 2. Initial Cleaning:** Before first use, clean the cooking basket, grill plate, and removable divider with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
- 3. Placement:** Place the appliance on a stable, level, and heat-resistant surface, ensuring at least 10 cm of clear space around all sides for proper ventilation.
- 4. Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

5.1. Basic Operation

1. Place food in the cooking basket. If using the divider, distribute food evenly in both compartments.
2. Slide the basket(s) back into the main unit until they click into place.
3. Press the power button on the digital control panel to turn on the appliance.
4. Select a pre-set menu or manually adjust the temperature (40-200°C) and time using the touch controls.
5. Press the Start/Pause button to begin cooking.
6. The internal light can be activated via the control panel to check cooking progress through the viewing window.
7. Once cooking is complete, the appliance will beep. Carefully remove the basket(s) and transfer the food.

5.2. Using the Smoking Function

1. Fill the dedicated smoking box with a small amount of wood chips (not included).
2. Place the smoking box in its designated area within the appliance (refer to diagram in full manual).
3. Select a cooking program or manual settings. Activate the smoking function via the control panel.
4. Monitor the smoking process and ensure proper ventilation.

5.3. Using the Grill Function

1. Insert the Grillin Style plate into the cooking basket.
2. Place food directly on the grill plate.
3. Select a grilling pre-set menu or manually set the temperature and time.

5.4. Sync Function

When using the removable divider to create two cooking zones, the Sync function allows both zones to finish cooking simultaneously, even if they have different temperature and time settings. Activate this function on the control panel after setting individual programs for each zone.



Figure 4: Air fryer showcasing smoking and grilling capabilities.

This image provides a comprehensive view of the Cecotec air fryer's multi-functionality. It shows the main unit with a side view of the smoking compartment, a close-up of a steak grilling inside with the triple resistance elements, and a visual representation of the triple grill racks for different foods like pizza, tacos, and steak. Wood chips are also shown, indicating the smoking feature.



Figure 5: Close-up of meat grilling with smoke from wood chips.

This close-up image focuses on the grilling and smoking process within the Cecotec air fryer. A thick cut of meat is shown on the grill plate, with smoke rising from wood chips below, indicating the active smoking function. The heating elements are visible, providing intense heat for grilling.



Figure 6: Internal view of the air fryer showing triple heating resistance.

This image provides an internal view of the Cecotec air fryer, highlighting its triple heating resistance system. Both top and bottom heating elements are visible, glowing red, ensuring even and thorough cooking from all directions. A piece of meat is shown cooking on the grill plate, benefiting from the comprehensive heat distribution.



Figure 7: Steak and potatoes cooked on the grill plate.

This image displays a perfectly grilled steak alongside roasted potatoes, prepared using the Cecotec air fryer's grill function. The food is presented on the grill plate, emphasizing the appliance's ability to achieve excellent grilling results.



Figure 8: Pizza cooked in the air fryer.

This image shows a freshly baked pizza, golden and crispy, prepared using the Cecotec air fryer. The pizza is placed on a wooden paddle next to ingredients like tomato sauce and shredded cheese, illustrating the appliance's capability to cook authentic pizzas.



Figure 9: Users observing food through the viewing window.

This image captures two individuals looking intently at the front viewing window of the Cecotec air fryer, where food is visibly cooking. This highlights the convenience of the transparent window and internal light, allowing users to monitor their meal without interrupting the cooking process.

Your browser does not support the video tag.

Video 1: Product Overview. This video provides a brief summary of the Cecotec Cecofry&Grill Smokin' 11000 BBQ Air Fryer, showcasing its design and key features in action.

6. COOKING TIPS

- For best results, preheat the air fryer before adding food.
- Shake or flip food halfway through cooking for even browning, especially for smaller items like fries.
- Use a small amount of oil (e.g., 1 tablespoon) for crispier results, especially for fresh ingredients.
- Do not overcrowd the basket to ensure proper air circulation and even cooking. Cook in batches if necessary.
- Experiment with different wood chip flavors for the smoking function to find your preferred taste.

7. MAINTENANCE AND CLEANING

- Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.
- Internal Components:** The cooking basket, grill plate, and removable divider are dishwasher-safe or can be washed with warm soapy water and a non-abrasive sponge.
- Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- Smoking Box:** Clean the smoking box after each use to remove ash and residue.
- Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

8. TROUBLESHOOTING

- Appliance not turning on:** Check if the power cord is securely plugged into a working outlet. Ensure the cooking basket is fully inserted.
- Food not cooking evenly:** Ensure the basket is not overcrowded. Shake or flip food halfway through cooking.
- White smoke from appliance:** This may be caused by fatty ingredients. Ensure the basket and grill plate are clean and free of excess oil.
- Food not crispy:** Ensure a small amount of oil is used for fresh ingredients. Do not overcrowd the basket.

For further assistance, please refer to the full product manual or contact customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	Cecotec
Model Number	A90_EU01_119908
Color	Black Window
Product Dimensions (L x W x H)	37 x 39 x 35.5 cm
Capacity	11 Liters
Power Output	2900 Watts
Voltage	240 Volts
Material	Stainless Steel
Special Feature	Timer
Item Weight	8.46 Kilograms

10. WARRANTY AND SUPPORT

This Cecotec appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included in the original packaging for specific terms and conditions.

Spare parts are available for a period of 10 years from the date of purchase.

For technical support, troubleshooting, or warranty claims, please contact Cecotec customer service through their official website or the contact information provided in your product documentation.

© 2025 Cecotec. All rights reserved.