

**WX-3016**

# Generic WX-3016 Lip-Shaped Corded Telephone User Manual

Model: WX-3016

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Generic WX-3016 Lip-Shaped Corded Telephone. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.

## PRODUCT FEATURES

- **Unique Design:** Features a fun lip shape with bright, fashionable colors, offering a distinctive and attractive style.
- **Durable Construction:** Made from high-quality ABS material for robustness and extended service life.
- **Clear Audio:** Provides good sound quality and clear call voice.
- **Number Storage Function:** Supports number storage for convenience.
- **Decorative Element:** Functions as both a telephone and a stylish home decoration piece.

## PACKAGE CONTENTS

Upon unpacking, please verify that all the following items are included:

- 1 x Lip-Shaped Telephone (Model WX-3016)
- 1 x Telephone Handset
- 1 x Handset Coil Cord
- 1 x US Telephone Line Cord
- 1 x UK Telephone Line Cord (color may vary)
- 1 x English Instruction Manual



Image: The Generic WX-3016 Lip-Shaped Corded Telephone shown with its handset, coil cord, and two telephone line cords (US and UK versions).

## SETUP

Follow these steps to set up your telephone:

- 1. Connect the Telephone Line:**

Locate the telephone line cord (either US or UK, depending on your region). Disconnect the telephone connector from the wall socket. Insert the white plug of the telephone line cord into the wall telephone socket. Insert the other end of this cord into the central socket on the base of the telephone.



Image: Bottom view of the telephone, highlighting the telephone line input ports.

**2. Connect the Handset:**

Connect one end of the handset coil cord to the handset socket. Connect the other end of the coil cord to the remaining socket on the telephone base.



Image: The telephone with its handset connected via the coil cord, ready for use.

## OPERATING INSTRUCTIONS

---

### Making a Call

1. Lift the handset.
2. Listen for a dial tone.
3. Dial the desired number.

### Answering a Call

1. When the telephone rings, lift the handset.
2. To end the conversation, hang up the handset.

### Redial Function

The telephone features a redial function for convenience.

1. Lift the handset.
2. Listen for a dial tone.
3. Press the "Redial" button. The last dialed number will be automatically redialed.



Image: A detailed view showing the "Redial" button and the speaker grille on the telephone base.

## Pulse/Tone Dialing

If your home telephone service uses pulse dialing, ensure the dialing mode selector is set to the "PULSE" position. For tone dialing, set it to "TONE". This ensures fast and accurate dialing.

*Note: The location of the Pulse/Tone selector is typically on the underside of the phone. Refer to the image of the bottom of the phone in the Setup section.*

## MAINTENANCE

- **Cleaning:** Wipe the telephone with a soft, dry cloth. Do not use liquid cleaners or abrasive chemicals.
- **Storage:** Store the telephone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the telephone with care to avoid damage to the casing or internal components.

## TROUBLESHOOTING

If you encounter issues with your telephone, please refer to the following common problems and solutions:

- **No Dial Tone:**

- Ensure all telephone line cords are securely connected to both the wall socket and the telephone base.
- Test the wall socket with another working telephone if available.
- Check with your telephone service provider for any line issues.

- **Cannot Make or Receive Calls:**

- Verify the telephone line connection as described above.
- Ensure the handset coil cord is properly connected.
- If using a Pulse/Tone selector, ensure it is set correctly for your service.

- **Poor Sound Quality:**

- Check all cable connections for looseness.
- Environmental interference might be a factor; try moving the phone or other electronic devices.

## SPECIFICATIONS

<b>Model</b>	WX-3016
<b>Material</b>	ABS
<b>Color</b>	Electroplated Pink
<b>Number Storage Function</b>	Yes
<b>Caller ID</b>	No
<b>Visual Function</b>	No
<b>Wiring Compatibility</b>	US and UK Telephone Line Cords included
<b>Weight</b>	Approx. 493g
<b>Dimensions (Packaging)</b>	23 x 13 x 8 cm

## WARRANTY AND SUPPORT

No specific warranty information is provided in the product description. For support or warranty inquiries, please contact the seller or manufacturer directly.

Please retain this information for future reference.