

JOVELL DVD-168

JOVELL DVD-168 Multizone DVD Player User Manual

Model: DVD-168 | Brand: JOVELL

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your JOVELL DVD-168 Multizone DVD Player. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

2. WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- 1 x JOVELL DVD-168 DVD Player
- 1 x Remote Control (Batteries not included)
- 1 x HDMI Cable
- 1 x RCA Cable
- 1 x User Manual (This document)



Image: The JOVELL DVD-168 DVD Player, its remote control, HDMI cable, and RCA cables, as included in the package.

3. PRODUCT OVERVIEW

The JOVELL DVD-168 is a compact multizone DVD player designed for home entertainment. It supports a wide range of disc formats and offers versatile connectivity options.

Key Features:

- **All Region Free Playback:** Plays DVDs from any region (1-6, excluding Japan CPRM Discs).
- **Multi-Format Support:** Compatible with CD, DVD, DVD±R, DVD±RW, CD-R/RW, VCD, SVCD, and discs recorded by DVD recorders. *Note: Does not support Blu-ray discs.*
- **HDMI Upscaling:** Features 1080p output for near-HD picture quality.
- **USB Input:** Built-in USB port for playing digital audio and video files (AVI/MPG/MPEG4/VOB, MP3/WMA). Supports USB 2.0 Flash Drives up to 32GB. *Note: Does not support USB 3.0 and MP4 file playback via USB.*
- **Connectivity:** Includes both HDMI and RCA outputs for broad compatibility with various televisions and audio systems.
- **Special Features:** Anti-Shock, Multi-Language Support, Noise Reduction Technology, Progressive-scan, Anti-Skip, and Resume-Play Function.

Multi-Function DVD Player



DVD Player



CD Player



USB Player



MP3 Player



Image: Front view of the DVD player highlighting its multi-function capabilities including DVD, CD, USB, and MP3 playback.

Immersive Video Experience

- ✓ 1080P Upscaling
- ✓ HDMI Connection
- ✓ Progressive-scan
- ✓ Noise Reduction
- ✓ Anti-Skip



Image: The DVD player connected to a television, illustrating its immersive video experience features like 1080p upscaling and noise reduction.

4. SETUP

Follow these steps to connect your DVD player to your television or audio system.

4.1 Power Connection

1. Ensure the DVD player and your TV are powered off.
2. Connect the power cable to the DVD player and then plug it into a wall outlet.

4.2 Video and Audio Connections

You have two primary options for connecting the DVD player to your display:

Option A: HDMI Connection (Recommended for modern TVs)

1. Locate the HDMI output port on the back of the DVD player.
2. Connect one end of the provided HDMI cable to the HDMI output port on the DVD player.
3. Connect the other end of the HDMI cable to an available HDMI input port on your TV or projector. Note the HDMI input number (e.g., HDMI 1, HDMI 2).

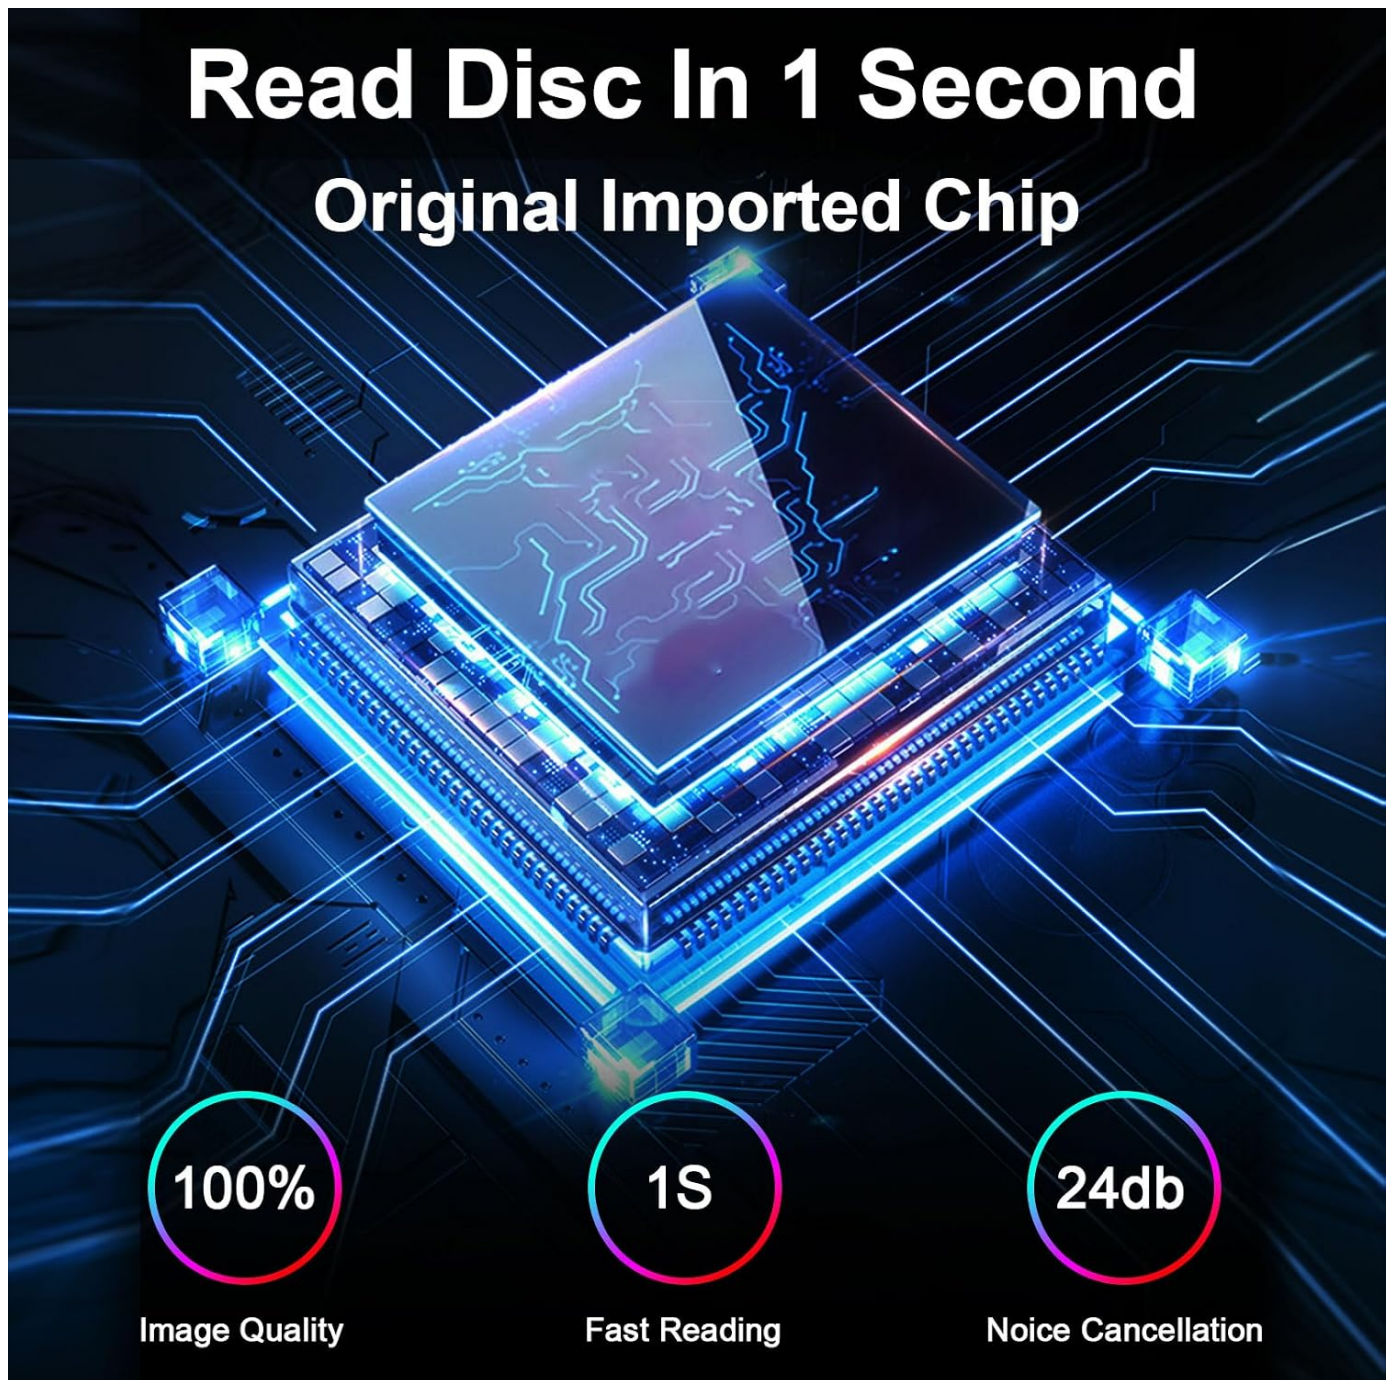


Image: Rear view of the DVD player illustrating HDMI and RCA connection options for various display types.

Option B: RCA Connection (For older TVs)

1. Locate the RCA output ports (Yellow for Video, White for Left Audio, Red for Right Audio) on the back of the DVD player.
2. Connect the corresponding colored plugs of the RCA cable to the RCA output ports on the DVD player.
3. Connect the other end of the RCA cable to the matching colored RCA input ports on your TV.
4. **Important:** Ensure correct color matching (Yellow to Yellow, White to White, Red to Red). Incorrect connections may result in a black and white picture or no sound.

Your browser does not support the video tag.

Video: A step-by-step guide on setting up the DVD player using RCA cables, demonstrating proper connection to both the player and the television.

4.3 Initial Power On

1. Power on your TV and the DVD player.
2. Using your TV remote, select the correct input source (e.g., HDMI 1, AV) that corresponds to the connection you made.
3. The DVD player's main menu or a "No Disc" message should appear on your TV screen.

5. OPERATING INSTRUCTIONS

This section covers basic operation of your DVD player.

5.1 Inserting and Playing a Disc

1. Press the **OPEN/CLOSE** button on the front panel or remote control to open the disc tray.
2. Place a DVD or CD onto the disc tray with the label side facing up.
3. Press the **OPEN/CLOSE** button again to close the tray. The player will automatically begin reading the disc.
4. If the disc does not start automatically, press the **PLAY/PAUSE** button on the remote or front panel.



Multi-format Playback

Support Discs Format: CD,DVD,DVD-R/+R,DVD-RW/+RW, CD-R/-RW,VCD,SVCD.

Note: Not Support Blu-ray Discs!



Image: A disc being inserted into the DVD player, illustrating its multi-format playback capability.

5.2 USB Playback

1. Insert a USB 2.0 Flash Drive (up to 32GB) containing compatible media files (AVI/MPG/MPEG4/VOB for video, MP3/WMA for audio) into the USB port on the front of the player.
2. Press the **DVD/USB** button on the remote or front panel to switch to USB mode.
3. Navigate through your files using the arrow keys on the remote and press **ENTER** to select and play.

Support USB Input

Video: AVI, DIVX, VOB, MPG, MPEG4, FLV

Audio: MP3, WMA, MPEG1



Don't Support USB 3.0 and MP4 file playback via USB.

Image: A USB flash drive connected to the DVD player, indicating support for various digital media files.

5.3 Remote Control Functions

The remote control provides full functionality for the DVD player:

- **POWER:** Turns the player on/off.
- **OPEN/CLOSE:** Opens and closes the disc tray.
- **PLAY/PAUSE:** Starts or pauses playback.
- **STOP:** Stops playback.
- **PREV/NEXT:** Skips to the previous or next track/chapter.
- **REV/FWD:** Rewinds or fast-forwards playback.
- **VOL+/-:** Adjusts the volume.
- **SETUP:** Accesses the player's settings menu.
- **DVD/USB:** Toggles between DVD and USB input sources.
- **REPEAT:** Repeats the current track/chapter or entire disc.

- **SUBTITLE:** Selects subtitle language (if available on disc).
- **AUDIO:** Selects audio track (if available on disc).
- **ZOOM:** Zooms in on the video.
- **ANGLE:** Changes camera angle (if available on disc).

HDMI and AV Connections



Image: The remote control for the DVD player, showing all available buttons for navigation and control.

6. MAINTENANCE

Proper care and maintenance will extend the life of your DVD player.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Store them in their cases to prevent scratches and dust accumulation. Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.
- **Ventilation:** Ensure the player has adequate ventilation. Do not block any ventilation openings.
- **Storage:** When not in use for extended periods, disconnect the power cable and store the player in a cool, dry

place.

7. TROUBLESHOOTING

If you encounter issues with your DVD player, refer to the following common solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected or outlet not working.	Check power cable connection. Try a different outlet.
No picture/sound	Incorrect input source selected on TV; loose video/audio cables.	Select correct TV input (HDMI/AV). Ensure cables are securely connected.
Disc not playing	Disc is dirty, scratched, or incompatible format.	Clean disc. Try a different disc. Ensure disc format is supported (not Blu-ray).
Remote control not working	Batteries are dead or inserted incorrectly; obstruction between remote and player.	Replace batteries. Ensure clear line of sight to the player's IR sensor.
USB playback issues	USB drive incompatible (e.g., USB 3.0), file format not supported, or drive size too large.	Ensure USB 2.0 (max 32GB) and supported file formats. Try reformatting USB drive to FAT32.

8. SPECIFICATIONS

Feature	Detail
Brand	JOVELL
Model Name	DVD-168
Scanner Resolution	1920x1080 (1080p Upscaling)
Compatible Devices	Television
Special Features	Anti-Shock, Multi-Format Playback, Multi-Language Support, Noise Reduction Technology, Region Free
Audio Output Mode	Stereo
Supported Audio Formats	MP3, WMA
Connector Type	HDMI, RCA
Media Type (Discs)	CD, DVD, DVD±R, DVD±RW, CD-R/RW, VCD, SVCD (Non-Blu-ray)
Media Type (USB)	Video: AVI/MPG/MPEG4/VOB; Audio: MP3/WMA (USB 2.0, max 32GB)
Parcel Dimensions	26.9 x 25.2 x 8.4 cm; 1.03 kg

9. WARRANTY AND SUPPORT

Your JOVELL DVD-168 DVD Player comes with an 18-Month Warranty. For any questions or support needs, please contact our 24/7 Friendly Customer Support.

Please refer to the contact information provided on the product packaging or the official JOVELL website for customer service details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FKS7KK4J>

More documents and user manuals: <https://manuals.plus/>