

DEXSO Zi8kvyDMD--FEwo0HK9K0Q1Ajz1s

DEXSO 15ft Rectangle Patio Umbrella User Manual

Model: Zi8kvyDMD--FEwo0HK9K0Q1Ajz1s

INTRODUCTION

Welcome to your new DEXSO 15ft Rectangle Patio Umbrella. This manual provides essential information for the safe assembly, operation, and maintenance of your umbrella. Please read these instructions thoroughly before initial use and retain for future reference.

SAFETY INFORMATION

- Always close the umbrella during high winds, heavy rain, thunderstorms, or any inclement weather conditions to prevent damage to the umbrella or potential injury.
- Ensure the umbrella base is properly weighted and stable on a level surface before opening the umbrella. An unstable base can lead to tipping.
- Keep children and pets away from the umbrella during opening and closing operations to avoid pinching or entanglement.
- Do not hang objects from the umbrella ribs or pole, as this can compromise stability and structural integrity.
- Periodically check all connections, bolts, and fasteners to ensure they are secure. Tighten any loose components immediately.
- Do not attempt to modify the umbrella's structure or components. Use only original replacement parts if needed.

PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly:

- 15ft Rectangle Umbrella Canopy (with integrated ribs)
- Main Steel Pole (48mm diameter)

- Crank Lift System Mechanism (pre-attached to pole)
- Umbrella Base (Sandbag Base Included)
- Instruction Manual (this document)

SETUP INSTRUCTIONS

1. Unpack all components from the packaging and lay them out on a clean, flat, and stable surface.
2. Insert the main steel pole into the umbrella base. Ensure the pole is fully seated and secured according to the base's specific locking mechanism.
3. Position the assembled umbrella base in your desired outdoor location, ensuring it is on a completely level surface to prevent leaning.
4. For optimal stability, fill the included sandbag base with sand or other suitable weighting material. Ensure the base is sufficiently heavy to withstand moderate wind conditions.
5. Carefully lift the umbrella canopy assembly and insert it onto the top of the main steel pole. Align any locking pins or buttons to secure the canopy to the pole.
6. Ensure all connections are tight and secure before attempting to open the umbrella.



Figure 1: Key Features - Crank Lift System, Double Layer Vent, and Included Base. This image highlights the crank mechanism for easy opening and closing, the double-layer vent design for improved wind resistance and air circulation,

and the stable sandbag base provided for support.



Figure 2: Umbrella in use, providing extra large coverage. The umbrella is shown fully open, effectively shading a large outdoor dining table and chairs on a wooden deck, demonstrating its extensive coverage area.

OPERATING INSTRUCTIONS

Opening the Umbrella:

1. Ensure the umbrella canopy and ribs are clear of any obstructions, such as furniture or overhead structures.
2. Locate the crank handle on the main pole of the umbrella.
3. Turn the crank handle clockwise to slowly extend and open the umbrella canopy. Continue cranking until the canopy is fully open and taut. Do not over-crank, as this can damage the mechanism.

Closing the Umbrella:

1. Turn the crank handle counter-clockwise to slowly retract and close the umbrella canopy.
2. Continue cranking until the canopy is fully closed and secured against the pole.
3. For prolonged periods of non-use or during adverse weather, it is highly recommended to secure the closed umbrella with a tie strap (if provided) or an umbrella cover to prevent accidental opening or

damage.

MAINTENANCE

Canopy Care:

- Clean the polyester canopy regularly with a solution of mild soap and lukewarm water. Use a soft brush or cloth to gently scrub away dirt, dust, and stains.
- Rinse the canopy thoroughly with clean water to remove all soap residue. Allow the canopy to air dry completely before closing or storing to prevent mildew and odors.
- Avoid using harsh chemicals, bleach, or abrasive cleaners, as these can damage the fabric's UV protection and fade its color.

Frame Care:

- Wipe down the steel pole and ribs with a damp cloth to remove dust, dirt, and environmental debris.
- Inspect the frame periodically for any signs of rust, scratches, or structural damage. Touch up any scratches on the powder-coated finish with appropriate paint to prevent rust.
- Lubricate the crank mechanism annually with a silicone-based spray to ensure smooth and effortless operation.

Storage:

- When not in use for extended periods, especially during off-season or severe weather forecasts, store the umbrella in a dry, protected area.
- Consider using a protective umbrella cover to shield it from dust, dirt, moisture, and harsh weather conditions, prolonging its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Umbrella does not open or close smoothly.	Crank mechanism is stiff, obstructed, or requires lubrication.	Check for any debris or foreign objects in the mechanism. Apply a silicone-based lubricant to moving parts. Do not force the crank.
Umbrella is unstable or wobbles excessively.	Base is not adequately weighted, or the pole is not fully secured. Uneven ground.	Ensure the base is filled with sand/water or weighted sufficiently. Verify the pole is securely inserted and tightened in the base. Move to a level surface.
Canopy appears faded or dirty.	Prolonged exposure to sun and elements; accumulated dirt and grime.	Clean the canopy with mild soap and water as per maintenance instructions. Consider using an umbrella cover when not in use to protect from UV and dirt.
Ribs appear bent or damaged.	Exposure to strong winds or impact.	Close the umbrella during high winds. If damage is severe, contact customer support for potential replacement parts.

SPECIFICATIONS

Model: Zi8kvyDMD--FEwo0HK9K0Q1Ajz1s

Dimensions (Overall): 15 ft (Length) x 9 ft (Width) x 7.9 ft (Height)

Canopy Material: 100% Polyester (Waterproof, Breathable, Fade-resistant, UV-protective)

Pole Material: 48mm (1.9") Powder-Coated Steel

Ribs: 12 Rust-Proof Steel Ribs

Lift System: Crank Lift

Base: Included (Sandbag Base)

Item Weight: Approximately 40.26 Pounds

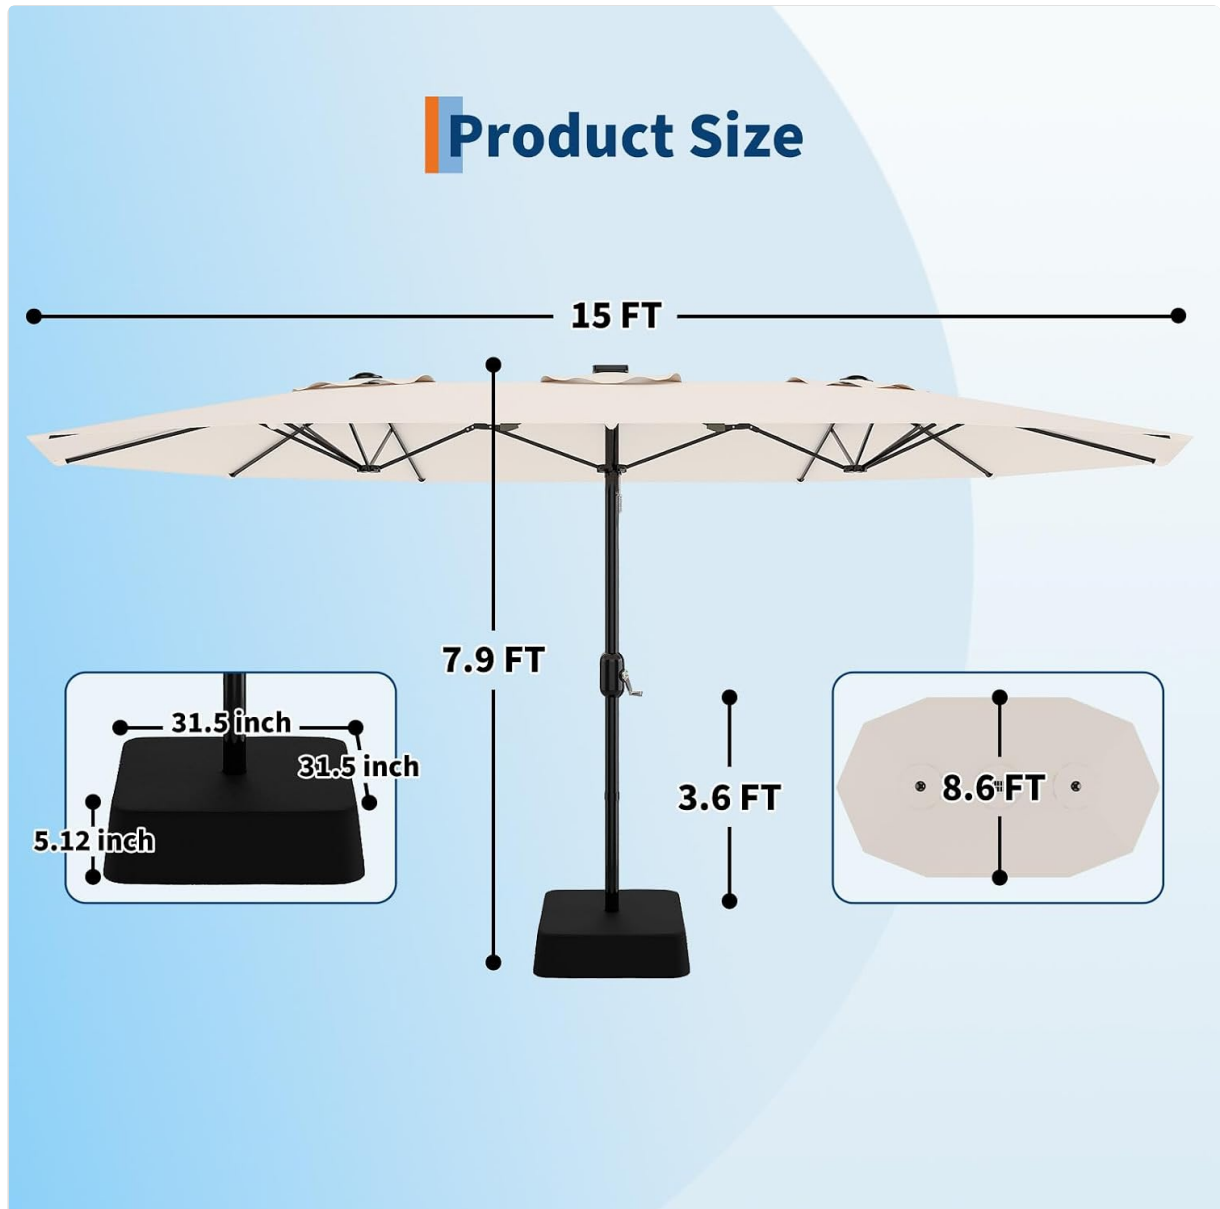


Figure 3: Product Dimensions. This diagram illustrates the overall dimensions of the umbrella, including its 15ft length, 7.9ft height, and the base measurements of 31.5 inches by 31.5 inches by 5.12 inches.

5+2+5 Steel Ribs

Ultra-Durable Construction



Thickened by 30%



100% Breathable



Solution dyed for long-lasting bright colors

Figure 4: Ultra-Durable Construction Details. A detailed view of the umbrella's internal structure, emphasizing the 5+2+5 steel ribs for strength and the quality of the canopy fabric, which is thickened, 100% breathable, and solution-dyed for long-lasting color retention.

WARRANTY AND SUPPORT

For specific warranty information, details on product support, or to inquire about replacement parts, please refer to your purchase documentation or contact DEXSO customer service directly. You can also visit the official DEXSO store on Amazon for additional resources and contact options:

[Visit the DEXSO Store on Amazon](#)