

[Manuals.plus](#) /

› [BODACIOUS](#) /

› BODACIOUS Portable Washing Machine XQB201B-GREY9-NEW User Manual

BODACIOUS XQB201B-GREY9-NEW

BODACIOUS Portable Washing Machine User Manual

Model: XQB201B-GREY9-NEW

INTRODUCTION

Thank you for choosing the BODACIOUS Portable Washing Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before use and retain it for future reference.



Image: The BODACIOUS Portable Washing Machine in grey, featuring a top-load design and control panel.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before cleaning, performing maintenance, or servicing.
- Ensure the power cord is not damaged. If damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This appliance is equipped with an IPX4 waterproof rating, making it safe for use in humid environments. However, avoid direct water spray on the control panel.

SETUP AND INSTALLATION

Unpacking

Before using the washing machine, it is crucial to remove all packaging materials, including internal protective components.



Image: Diagram illustrating the removal of the bottom foam and plastic bracket from the washing machine base. These components are for shipping protection and must be removed before operation.

Warm tip: Before using the washing machine, please remove the bottom foam and plastic holder from the base of the unit.

Placement

The BODACIOUS Portable Washing Machine is designed for compact spaces, making it suitable for apartments, dorms, and homes. Ensure the machine is placed on a stable, level surface to prevent vibrations during operation. Maintain adequate clearance around the unit for ventilation and hose connections.

- **Dimensions:** 22.04"D x 22.04"W x 37"H.

- **Weight:** Approximately 61 pounds.



Image: The washing machine shown with its dimensions (22.04 inches width, 22.04 inches depth, 37 inches height) and an IPX4 waterproof rating icon, indicating suitability for various indoor environments.

Water and Drain Connections

1. Connect the water inlet hose to a suitable water source (e.g., a sink faucet using an adapter, if necessary). Ensure connections are secure to prevent leaks.

2. Position the drain hose into a sink or drain. The machine features a built-in drain pump. Ensure the drain hose is properly secured to prevent it from dislodging during the drain cycle.

Power Connection

Plug the power cord into a grounded 110V outlet. Ensure the voltage matches the machine's requirements (110V~120V/60Hz).

Initial Use Note

It is normal to find residual water inside the machine. This is due to factory performance testing and does not indicate a used product.

OPERATING INSTRUCTIONS

Control Panel Overview

The washing machine features an intuitive digital LED display and push-button controls for easy operation.



Image: A detailed view of the control panel, highlighting the workflow sequence reference, water level and detergent dosage indicators, program selection area, and digital display area.

Loading Laundry

Open the top lid and load clothes into the stainless steel inner tub. Do not overload the machine. The capacity is 2.4 cubic feet (approximately 25 lbs of dry laundry).

Stainless Steel Roller



360° enhanced unique washing design,
deep and efficient cleaning

Image: A close-up view of the washing machine's stainless steel inner tub, featuring a unique wave wheel convex design for enhanced cleaning efficiency.

Selecting a Wash Cycle

The machine offers 10 selectable wash cycles to accommodate various fabric types and soil levels:

10 Cycle Programs



Image: The control panel displaying the icons and names for the 10 available wash cycle programs: Standard, Soft, Quick wash, Heavy duty, Soak wash, Wash only, Spin only, Tub clean, Tub air dry, and Water recycle.

- **Standard:** For daily laundry.
- **Soft:** For delicate items.
- **Quick Wash:** For lightly soiled items or small loads.
- **Heavy Duty:** For heavily soiled or bulky items.
- **Soak Wash:** For items requiring pre-soaking.

- **Wash Only:** Performs only the wash phase.
- **Spin Only:** Performs only the spin phase to remove excess water.
- **Tub Clean:** For cleaning the washing machine tub.
- **Tub Air Dry:** For drying the inside of the tub to prevent mildew.
- **Water Recycle:** (Consult manual for specific use, typically for reusing water for subsequent loads if applicable).

Use the 'Program' button to cycle through and select your desired wash cycle. The LED display will show the selected program and remaining time.

Water Level Selection

Choose from 4 cold water levels: High, Middle, Low, or Minimum, depending on your load size. The machine will automatically fill to the selected level.

Delayed Start Function

The 24-hour delayed washing feature allows you to set a start time for your wash cycle. This is useful for running loads during off-peak hours or having laundry ready at a specific time.



Image: A visual representation of the 24-hour delayed start feature, showing how to set the machine to start later, for example, putting clothes in at night and having them ready by morning.

Child Lock

Activate the child lock feature to prevent accidental changes to settings or operation by children. Refer to the control panel diagram for the specific button combination or sequence to engage/disengage the child lock.

Dynamic Unbalance Detection

The machine is equipped with a dynamic unbalance detection system that helps maintain stability during operation, reducing vibrations and extending the appliance's lifespan. If an unbalanced load is detected, the machine may pause or redistribute the laundry.

Dynamic Automatic Unbalance Detection



117 kWh
Estimated Yearly
Electricity Use



\$14.04

*Estimated Yearly Energy Cost (when used with an electric water heater)

Image: The washing machine with text highlighting its 'Dynamic Automatic Unbalance Detection' feature, alongside an estimated yearly electricity use of 117 kWh and an estimated yearly energy cost of \$14.04.

Quiet Operation

The BODACIOUS washing machine operates at a low noise level of approximately 55dB, ensuring a peaceful laundry experience. The transparent quiet-close lid allows monitoring without excessive noise.

Light Sound Washing

The image shows a modern, grey top-loading washing machine in a bright, clean laundry room. To the left of the machine is a wooden shelving unit with several shelves. The top shelf holds a small potted plant and a basket. The middle shelves are filled with neatly folded towels in various colors (pink, blue, green). The bottom shelf has two large white bottles of laundry detergent. The machine is positioned in front of a window with white horizontal blinds. Below the machine, a dark overlay contains two line graphs comparing sound levels.

Machine Type	Sound Level (dB)
Bodacious - Full One	55dB*
Other Machine	75dB*

*Test conducted by Bodacious.

Image: The washing machine in a laundry setting, with text indicating 'Light Sound Washing'. A graph compares its 55dB operation to other machines at 75dB, emphasizing its quiet performance.

MAINTENANCE

Tub Cleaning

Regularly use the 'Tub Clean' cycle to maintain the cleanliness and hygiene of the washing machine's inner tub. This helps prevent odor and residue buildup.

Tub Air Dry

After use, especially in humid conditions, select the 'Tub Air Dry' cycle to help dry the interior of the tub. This minimizes moisture and helps prevent mildew formation.

Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

- **Machine not starting:** Ensure the power cord is securely plugged in and the power button is pressed. Check if the lid is properly closed.
- **Water not filling:** Verify that the water inlet hose is correctly connected and the water supply is turned on. Check for kinks in the hose.
- **Water not draining:** Ensure the drain hose is positioned correctly and not kinked or blocked. If water gets stuck, lower the drain hose to the floor (into a bucket) to initiate drainage, then reposition it into the sink. The built-in pump requires initial flow to build pressure.
- **Excessive vibration/noise:** Ensure the machine is on a level surface. Redistribute the laundry inside the tub to balance the load. The dynamic unbalance detection system will attempt to correct this, but manual adjustment may be necessary for very unbalanced loads.
- **Error codes:** If an error code appears on the LED display, consult the full product manual (if provided separately) or contact customer support for specific guidance.

SPECIFICATIONS



Image: A graphic displaying key product specifications including model number, rated voltage, inlet pressure, rated input power, weight, IPX level, and dimensions.

Feature	Specification
Brand	BODACIOUS

Feature	Specification
Model	XQB201B-GREY9-NEW
Capacity	2.4 Cubic Feet (approx. 25 lbs)
Dimensions (D x W x H)	22.04" x 22.04" x 37"
Item Weight	61 pounds
Noise Level	55 dB
Installation Type	Freestanding
Voltage	110V~120V/60Hz
Rated Input Power (Wash/Spin)	450W
Material (Exterior)	Plastic
Material (Inner Tub)	Stainless Steel
Control Type	Push Button
Access Location	Top Load
Waterproof Rating	IPX4
Special Features	Time Remaining Display, Automatic, Compact, LED Display, Portable, Child Lock, Dynamic Unbalance Detection, Energy Efficient Motor
Inlet Pressure	0.03MPa-0.8MPa

WARRANTY AND SUPPORT

Warranty Information

The BODACIOUS Portable Washing Machine comes with a 2-year warranty. Please retain your proof of purchase for warranty claims.



Image: A graphic featuring a shield icon with the text '2 YEAR WARRANTY', indicating the product's warranty period.

Customer Support

For any questions, concerns, or assistance with your BODACIOUS Portable Washing Machine, please contact our customer support team. Our professional team is available to help with both pre-purchase inquiries and post-purchase issues.

You can find contact information on the official BODACIOUS website or through your purchase platform.

© 2025 BODACIOUS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FKSGRKNX>

More documents and user manuals: <https://manuals.plus/>