



Manuals.plus /

› findtime /

› findtime SD6252 Men's Sport Waterproof Digital Analog Wrist Watch Instruction Manual

findtime SD6252

findtime SD6252 Men's Sport Watch Instruction Manual

Model: SD6252

1. INTRODUCTION

Thank you for choosing the findtime SD6252 Men's Sport Watch. This timepiece combines both digital and analog displays with a robust design, making it suitable for various activities. It features a range of functions including LED backlight, stopwatch, countdown timer, alarm, and calendar. This manual provides detailed instructions to help you set up and operate your watch effectively.

Package Contents:

- 1 x findtime SD6252 Men's Sport Watch
- 1 x Instruction Manual (this document)
- 1 x Metal Watch Box

2. WATCH COMPONENTS AND BUTTON FUNCTIONS

Familiarize yourself with the watch's buttons and their primary functions:

Function analysis



Figure 2.1: Watch button layout. This diagram illustrates the location and primary function of each button on the watch: LIGHT, MODE, START, and RESET, along with indicators for DATE, TIME, and WEEK.

- **LIGHT Button (Top Left):** Activates the LED backlight for visibility in low-light conditions.
- **MODE Button (Bottom Left):** Cycles through different operational modes: Normal Time, Stopwatch, Alarm, and Countdown Timer.
- **START Button (Top Right):** Used to start/stop functions in Stopwatch and Countdown modes. Also used to increase numerical values during setting.
- **RESET Button (Bottom Right):** Used to reset values in Stopwatch and Countdown modes.
- **SET Button (Crown, Right Side):** Used to enter setting mode and confirm selections. During setting, it can be used to convert or adjust hours, minutes, weeks, months, and days.

3. SETUP AND TIME SETTING

3.1. Setting Analog Time

The analog hands are typically synchronized with the digital time. If they are not, or if you need to adjust them independently:

1. Gently pull out the **SET Button (Crown)** on the right side of the watch.
2. Rotate the **SET Button (Crown)** to adjust the analog hands to the correct time.
3. Once set, push the **SET Button (Crown)** back in to secure the time.

3.2. Setting Digital Time and Date

To set the digital time, date, and other parameters:

1. From the Normal Time display, press the **MODE Button** repeatedly until the seconds begin to flash, indicating you are in setting mode.
2. Press the **RESET Button** to cycle through the settings: Seconds → Hours → Minutes → Year → Month → Day → 12/24H Format.
3. While a value is flashing, press the **START Button** to increase the numerical value. Hold the **START Button** to rapidly advance the numbers.
4. Once all settings are adjusted, press the **MODE Button** again to exit the setting mode and return to the Normal Time display.

4. OPERATING INSTRUCTIONS

4.1. Normal Time Display

In this mode, the watch displays the current time (digital and analog), day of the week, and date. Use the **LIGHT Button** to illuminate the display in dark environments.



Figure 4.1: Luminous Display. A close-up of the watch face with its green LED backlight illuminated, making the digital and analog displays visible in low light.

4.2. Stopwatch Mode

The stopwatch measures elapsed time.

1. Press the **MODE Button** until 'STW' or 'STOPWATCH' appears on the digital display.
2. Press the **START Button** to begin timing.
3. Press the **START Button** again to pause timing.
4. Press the **RESET Button** to clear the stopwatch to zero.
5. To resume timing after pausing, press the **START Button**.

4.3. Alarm Mode

Set an alarm to sound at a specific time.

1. Press the **MODE Button** until 'ALM' or 'ALARM' appears on the digital display.
2. Press the **RESET Button** to select the hour or minute setting. The selected value will flash.
3. Press the **START Button** to adjust the flashing hour or minute.
4. Press the **MODE Button** to exit alarm setting.
5. To activate/deactivate the alarm, press the **START Button** while in Alarm Mode (without any value flashing). An alarm icon will appear/disappear.
6. To activate/deactivate the hourly chime, press the **RESET Button** while in Alarm Mode (without any value flashing). A chime icon will appear/disappear.

4.4. Countdown Timer Mode

Set a timer to count down from a specified time.

1. Press the **MODE Button** until 'TMR' or 'TIMER' appears on the digital display.
2. Press the **RESET Button** to select the hour or minute setting. The selected value will flash.
3. Press the **START Button** to adjust the flashing hour or minute.
4. Press the **MODE Button** to exit countdown setting.
5. Press the **START Button** to begin the countdown.
6. Press the **START Button** again to pause the countdown.
7. Press the **RESET Button** to reset the countdown to its initial set time.

5. MAINTENANCE AND CARE

5.1. Water Resistance

Your findtime SD6252 watch is designed with 5ATM water resistance, suitable for:

- Washing hands
- Cold showering
- Swimming

Important Notes:

- **DO NOT** press any buttons while the watch is underwater.
- After swimming, gently shake off excess water and wipe the watch dry.
- Avoid exposure to hot water and steam, as this can compromise the watch's water resistance seals.



Figure 5.1: Water Resistance. The watch is shown with water droplets, demonstrating its 5ATM water resistance suitable for splashes and swimming.

5.2. Cleaning

To maintain the appearance of your watch, wipe it regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying.

5.3. Battery Information

The watch is powered by one nonstandard battery (included). When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have battery replacement performed by a qualified watch technician to ensure water resistance is maintained.

6. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low. Replace the battery as described in Section 5.3.
- **Time is inaccurate:** Ensure the digital and analog times are set correctly as per Section 3. If the issue persists, the battery may be weak.
- **Buttons are unresponsive:** Ensure the watch is not wet when pressing buttons. If the issue continues, contact customer support.
- **Water inside the watch:** Immediately stop using the watch and seek professional service. Avoid exposing the watch to extreme temperature changes.

7. SPECIFICATIONS

Key technical specifications for the findtime SD6252 watch:



parameter

Model	6252
Bottom cover	Stainless steel bottom cover
Case diameter	Width 5.3cm * Height 4.9cm Width 2.08in * Height 1.92in
Case Thickness	1.7cm/0.66in
Band Width	2.2-2.8cm/0.86-1.10in

 Movement: Electronic+Quartz

 Buckle: Stainless steel buckle

 Battery: Imported original battery

 Weight: 64G

 Mirror: Acrylic mirror

 Perimeter: 16.5-22cm/6.49-8.66in

 Strap: TPU

 Total length: 26cm/10.23in

Figure 7.1: Product Specifications. Detailed technical specifications of the watch, including case width, thickness, band width, movement type, battery, mirror material, strap material, and total length.

Feature	Detail
Model Number	SD6252
Product Dimensions	10 x 2 x 0.67 inches (254 x 51 x 17 mm)
Weight	2.26 ounces (64 grams)
Case Width	2 inches (51 mm)
Case Thickness	0.67 inches (17 mm)
Band Width	0.86 - 1.10 inches (22 - 28 mm)
Max Wrist Circumference	8.66 inches (220 mm)
Min Wrist Circumference	6.5 inches (165 mm)
Movement	Electronic + Quartz
Mirror Material	Acrylic
Case Material	ABS
Strap Material	TPU
Clasp Type	Buckle
Water Resistance	5 ATM
Battery	1 Nonstandard Battery (included)

8. CUSTOMER SUPPORT

If you have any questions, encounter issues not covered in this manual, or require further assistance with your findtime SD6252 watch, please do not hesitate to contact our customer support. We are committed to providing you with the best possible experience.