

[Manuals.plus](#) /

› [Cecotec](#) /

› Cecotec AirGlisse 14in1 Flex Hair Styler User Manual - Model A01_EU01_114727

Cecotec A01_EU01_114727

Cecotec AirGlisse 14in1 Flex Hair Styler

Model: A01_EU01_114727
User Instruction Manual

1. INTRODUCTION

Thank you for choosing the Cecotec AirGlisse 14in1 Flex Hair Styler. This versatile styling tool is designed to help you achieve a variety of hairstyles with ease, featuring advanced Coanda Technology, a powerful brushless motor, and 14 interchangeable attachments. Please read this manual carefully before first use to ensure safe and optimal performance of your device. Keep this manual for future reference.



Figure 1: Cecotec AirGlisse 14in1 Flex Hair Styler with a curling attachment.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, burns, fire, or injury, always follow these basic safety precautions:

- **Read all instructions** before using this appliance.
- **Keep away from water:** Do not use this appliance near bathtubs, showers, basins, or other vessels containing water. Never immerse the appliance in water or any other liquid.
- **Do not use on surfaces other than hair:** This appliance is designed exclusively for styling human hair. Do not use it on wigs, animal hair, or any other materials.
- **Unplug after use:** Always unplug the appliance immediately after use and before cleaning.
- **Supervision:** Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- **Avoid contact with hot surfaces:** The styling attachments become hot during use. Allow them to cool before handling or storing.

- **Do not operate with a damaged cord or plug:** If the appliance has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, return it to a service center for examination and repair.
- **Keep cord away from heated surfaces.**
- **Do not block air openings:** Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- **Do not use an extension cord** with this appliance.

3. WHAT'S IN THE BOX

Your Cecotec AirGlisse 14in1 Flex Hair Styler package includes the following components:

- 1 x Main Air Styler Unit (Handle)
- 1 x Air Brush Attachment
- 2 x CoandaTech 32 mm Curling Heads
- 2 x CoandaTech 35 mm Curling Heads
- 1 x DrySleek Head (Drying/Smoothing)
- 1 x TangleFree Head (Detangling)
- 1 x FrizzFree Head (Anti-frizz)
- 1 x AirPrecision Head (Concentrator)
- Additional styling attachments (total of 14 heads)
- 1 x User Manual
- 1 x Storage Case (may vary by model)

4. PRODUCT OVERVIEW

4.1 Main Unit

The main unit features an ergonomic, flexible handle for comfortable use and easy attachment changes. It houses the powerful brushless motor and intuitive controls.

- **TFT Digital Display:** Provides clear visual feedback on temperature and speed settings.
- **Control Buttons:** For power on/off, temperature adjustment, and speed settings.
- **Attachment Release Mechanism:** Allows for quick and secure changing of styling heads.



Figure 2: Digital TFT Display and Control Buttons.

4.2 Interchangeable Attachments

Your styler comes with a variety of heads for different styling needs:

- **CoandaTech Curling Heads (32mm & 35mm):** Utilize the Coanda effect to wrap hair around the barrel for effortless curls and waves.
- **DrySleek Head:** For efficient drying and smoothing of hair.
- **Air Brush:** A round brush attachment for adding volume and shape.
- **FrizzFree Head:** Designed to reduce frizz and enhance shine.
- **AirPrecision Head:** A concentrator nozzle for precise drying and styling.
- **Other specialized heads:** Including detangling, volumizing, and straightening combs.

5. SETUP AND FIRST USE

5.1 Attaching and Detaching Heads

1. Ensure the main unit is unplugged and cool.
2. Align the desired attachment with the main unit's connection point.
3. Push the attachment firmly onto the main unit until you hear a click, indicating it is securely locked.
4. To detach, press the release button (if present) or twist the attachment gently and pull it off. Always ensure the unit is cool before changing attachments.

5.2 Before First Use

Unpack all components and remove any packaging materials. Inspect the appliance and accessories for any damage. If any damage is found, do not use the appliance and contact customer support.

6. OPERATING INSTRUCTIONS

6.1 General Operation

1. Plug the appliance into a suitable power outlet.
2. Press the Power button to turn on the styler. The digital display will illuminate.
3. Use the temperature and speed control buttons to select your desired settings. Start with lower settings and adjust as needed for your hair type.
4. After styling, press the Power button to turn off the appliance and unplug it from the outlet.

6.2 Styling with Attachments

Always ensure hair is clean and towel-dried before styling, unless using a specific drying attachment.

6.2.1 Curling with CoandaTech Heads

1. Attach the desired CoandaTech curling head (32mm for tighter curls, 35mm for looser waves).
2. Take a section of hair and bring the styler close to the ends. The Coanda effect will automatically wrap the hair around the barrel.
3. Hold for a few seconds until the curl forms, then release. For best results, use a cool shot function (if available) to set the curl.



Figure 3: Curling hair using the CoandaTech attachment.

6.2.2 Straightening with Comb Attachments

1. Attach the straightening comb head.
2. Work with small sections of hair. Glide the comb slowly from roots to ends.
3. Repeat until desired straightness is achieved.



Figure 4: Straightening hair with the comb attachment.

6.2.3 Volumizing and Smoothing with Air Brush

1. Attach the Air Brush.
2. For volume, lift hair at the roots and brush upwards.
3. For smoothing, brush downwards, rotating the brush slightly to create soft ends.



Figure 5: Volumizing hair with the Air Brush attachment.

6.2.4 Drying and Pre-styling with DrySleek/Paddle Brush

1. Attach the DrySleek head or a paddle brush attachment.
2. Use on damp hair to quickly dry and prepare it for further styling, or to achieve a smooth, natural finish.



Figure 6: Pre-styling and drying with the paddle brush.

6.2.5 Diffusing with Diffuser Attachment

1. Attach the diffuser head.
2. Use on wavy or curly hair to enhance natural texture and reduce frizz. Gently cup sections of hair in the diffuser.

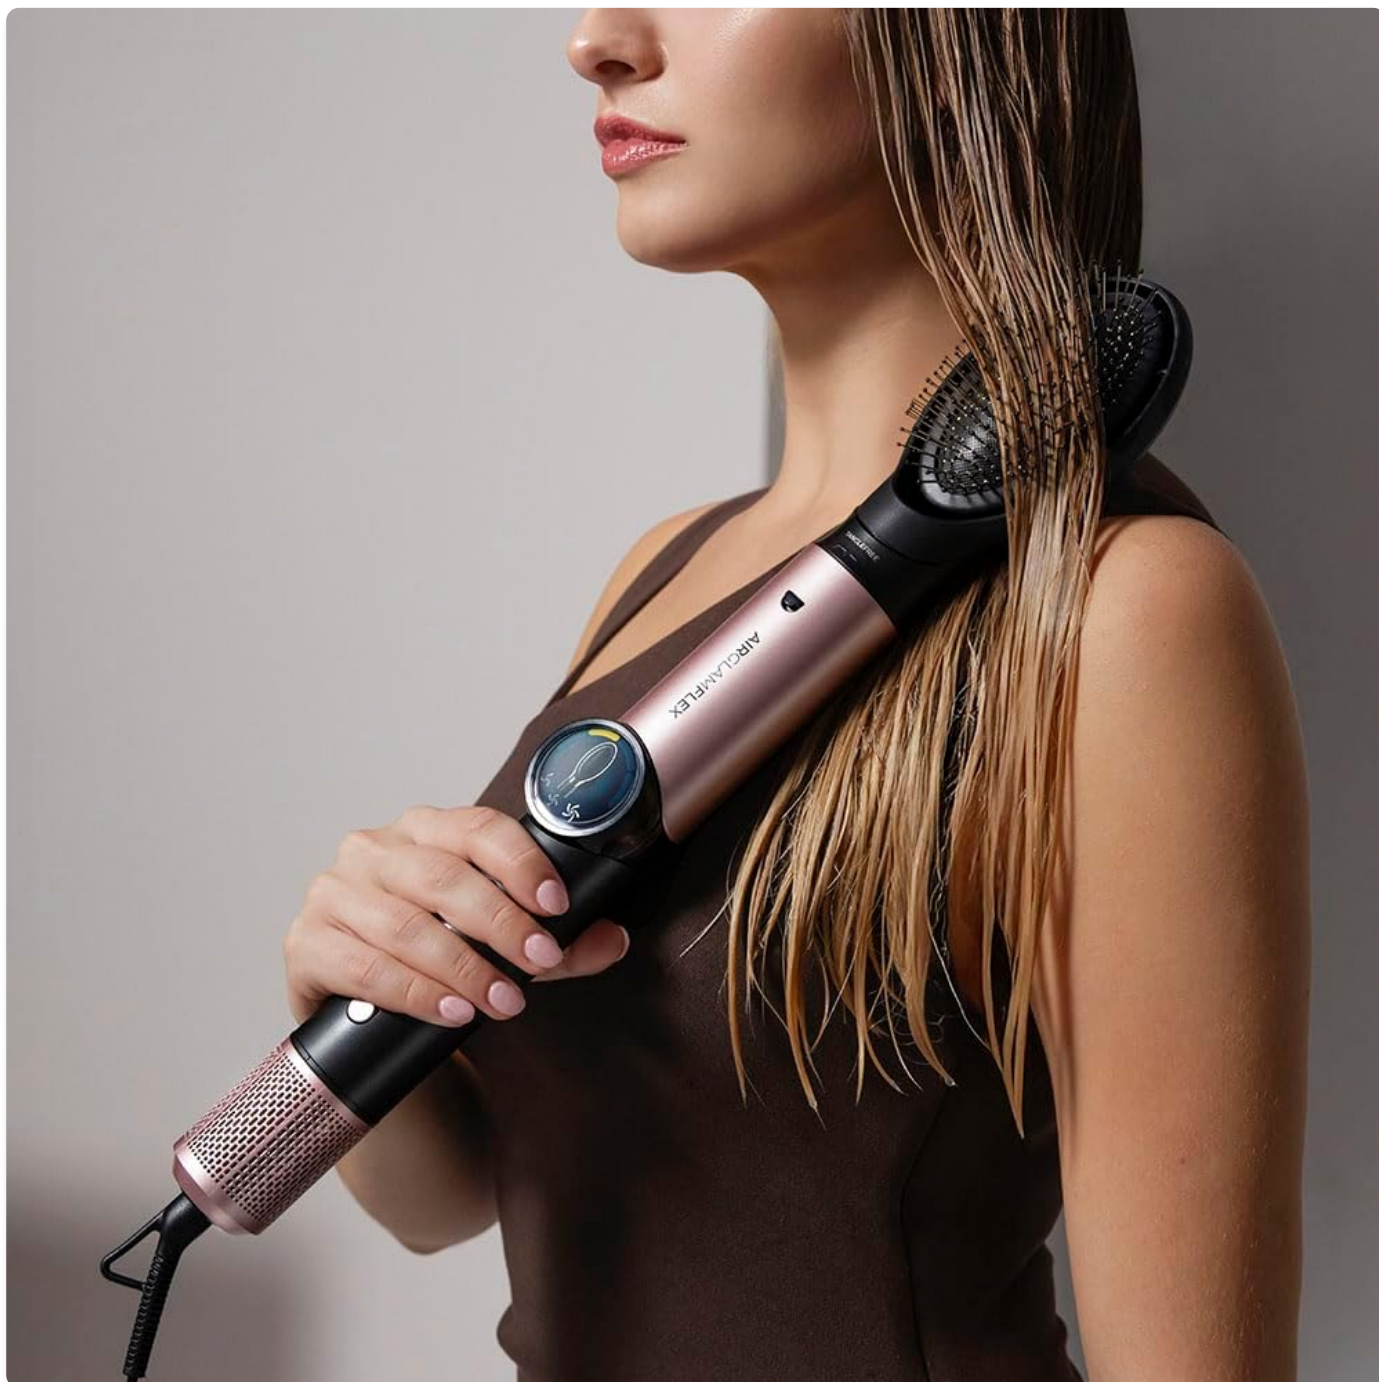


Figure 7: Diffusing curly hair.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

1. **Always unplug** the appliance and allow it to cool completely before cleaning.
2. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. **Attachments:** Remove any hair or debris from the styling attachments. For brushes and combs, you can use a small brush or comb cleaner. Wipe them with a damp cloth. Ensure all attachments are completely dry before reattaching or storing.
4. **Air Inlet Filter:** Periodically check and clean the air inlet filter at the back of the main unit to prevent blockages. Use a soft brush or a dry cloth to remove dust and lint.
5. **Storage:** Store the appliance and its attachments in the provided storage case or a safe, dry place, away from direct sunlight and moisture. Do not wrap the power cord around the appliance.

8. TROUBLESHOOTING

If you encounter any issues with your Cecotec AirGlisse, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly; Power outlet not working; Appliance fault.	Check power connection; Try a different outlet; Contact customer support.
No heat or insufficient heat.	Temperature setting too low; Air inlet/outlet blocked; Appliance fault.	Increase temperature setting; Clean air inlet filter; Contact customer support.
Attachments do not stay on.	Attachment not fully engaged; Release mechanism faulty; Attachment damaged.	Ensure attachment clicks into place; Inspect attachment and main unit for damage; Contact customer support.
Appliance makes unusual noise.	Air inlet blocked; Internal component issue.	Clean air inlet filter; Discontinue use and contact customer support.

If the problem persists after trying these solutions, please contact Cecotec customer support.

9. SPECIFICATIONS

Feature	Detail
Model Number	A01_EU01_114727
Power	1200 Watts (as per specifications, product title mentions 1400W, refer to product label for exact value)
Motor Speed	Up to 110,000 RPM (Brushless Motor)
Voltage	220 Volts
Material	Ceramic (coating)
Product Dimensions	34 x 5.3 x 5 cm
Weight	1.64 kg
Special Features	360 Degree Swivel Cord, Air Multiplier Technology, Digital Display, Coanda Technology
Number of Settings	2 (Speed/Temperature)
Hair Type	All Hair Types

10. WARRANTY AND SUPPORT

10.1 Manufacturer's Warranty

This Cecotec AirGlisse 14in1 Flex Hair Styler comes with a**2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

10.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your product, please contact Cecotec customer support through their official website or the retailer from whom you purchased the product.

You can find more information and contact details on the official Cecotec website: www.cecotec.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FKT6BGTY>

More documents and user manuals: <https://manuals.plus/>