

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Cecotec](#) /

> [Cecotec IoniCare Dry&Keratin Cotton Candy Compact Hair Dryer - Instruction Manual](#)

Cecotec A01_EU01_112896

Cecotec IoniCare Dry&Keratin Cotton Candy Compact Hair Dryer - Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and effective use of your Cecotec IoniCare Dry&Keratin Cotton Candy compact hair dryer. Please read these instructions carefully before first use and keep them for future reference.

The Cecotec IoniCare Dry&Keratin hair dryer features a powerful 1200W brushless motor with 107,000 RPM, ionic function, and NutriEssence technology for hair care. Its compact and lightweight design makes it suitable for daily use and travel.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, or injury, always follow basic safety precautions when using electrical appliances.

- Keep the appliance away from children.
- Do not rinse or immerse the appliance in water or other liquids.
- Keep the power outlet and cord away from hot surfaces.
- Do not use the hair dryer while bathing or near water.
- Always unplug the appliance after use and before cleaning.
- Do not operate the appliance with a damaged cord or plug.
- Do not block the air inlets or outlets during operation.

PACKAGE CONTENTS

Verify that all components are present and in good condition:

- 1 x Cecotec IoniCare Dry&Keratin Hair Dryer
- 1 x Concentrator Nozzle
- 1 x NutriEssence Head
- 1 x Replacement Serum Ring
- 1 x User Manual



Image: The Cecotec IoniCare Dry&Keratin hair dryer in two colors, Cotton Candy pink and Olive green, displayed with its included accessories: the NutriEssence head, concentrator nozzle, and replacement serum rings.

PRODUCT OVERVIEW

Familiarize yourself with the main parts of your hair dryer:

1. **Hair Dryer Body:** Contains the motor and controls.
2. **Air Inlet:** Located at the rear of the handle. Ensure it is clear of obstructions.
3. **Air Outlet:** Front opening where air exits.
4. **Power Button:** To turn the device on or off.
5. **Temperature/Speed Control Buttons:** To adjust heat and airflow settings.
6. **NutriEssence Head:** Attachment with hard bristles and a serum ring for distributing nourishing serum.
7. **Concentrator Nozzle:** Attachment for precise airflow.



Image: The main unit of the Cecotec IoniCare Dry&Keratin Cotton Candy hair dryer, showcasing its compact design and the primary air outlet.

SETUP AND FIRST USE

Before using your hair dryer for the first time, ensure it is properly assembled and connected.

1. **Unpacking:** Carefully remove all packaging materials and check for any damage.
2. **Attaching Accessories:**
 - To attach the **NutriEssence Head** or **Concentrator Nozzle**, align the attachment with the air outlet of the hair dryer and push it firmly until it clicks into place.
 - For the NutriEssence Head, ensure the serum ring is correctly inserted. A replacement serum ring is included for future use.
3. **Power Connection:** Plug the power cord into a suitable electrical outlet. Ensure your hands are dry before handling the plug.



Image: A user demonstrating the attachment of the NutriEssence head to the hair dryer, showing the two-step process of inserting the serum ring and then attaching the head.

OPERATING THE HAIR DRYER

Follow these steps for effective and safe hair drying:

1. **Power On:** Press the power button to turn on the hair dryer.
2. **Adjust Settings:** Use the temperature and speed control buttons to select your desired heat and airflow settings. The hair dryer offers multiple settings for different hair types and styling needs.
3. **Using the Concentrator Nozzle:** For precise drying and styling, attach the concentrator nozzle. Direct the airflow to specific sections of your hair.
4. **Using the NutriEssence Head:** Attach the NutriEssence head to distribute the nourishing serum while drying. The hard bristles help to detangle and spread the serum evenly. The heat from the dryer activates the serum for optimal results.
5. **Ionic Function:** The integrated ionic function helps reduce frizz and static, leaving your hair smoother and shinier. This function operates automatically during use.
6. **Power Off:** After use, press the power button to turn off the hair dryer and unplug it from the electrical outlet.



Image: A visual representation of the ionic function, showing negative ions being emitted from the hair dryer's nozzle to reduce frizz and enhance shine.



Image: A close-up view of the NutriEssence head, highlighting its hard bristles and the integrated serum ring designed to evenly distribute nourishing ingredients during drying.

CARE AND MAINTENANCE

Proper maintenance ensures the longevity and performance of your hair dryer.

- Cleaning the Air Inlet Filter:** Regularly check and clean the air inlet filter at the back of the hair dryer to prevent dust and hair buildup, which can affect performance. Gently remove any debris using a soft brush or cloth.
- Cleaning the Exterior:** Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Replacing the Serum Ring:** When the serum in the NutriEssence head is depleted, replace the serum ring with the provided spare. Follow the instructions for attaching the NutriEssence head.
- Storage:** Store the hair dryer in a cool, dry place, away from direct sunlight and moisture. Do not wrap the power cord tightly around the appliance, as this can damage the cord.

TROUBLESHOOTING

If you encounter any issues with your hair dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hair dryer does not turn on.	No power supply; power cord damaged.	Check if the plug is securely inserted into the outlet. Test the outlet with another device. Inspect the power cord for damage. If damaged, do not use and contact customer support.
Weak airflow or overheating.	Air inlet filter is blocked; air outlet is obstructed.	Clean the air inlet filter. Ensure the air outlet is not blocked by hair or other objects. Allow the device to cool down if it has overheated.

Problem	Possible Cause	Solution
Hair is still frizzy after drying.	Ionic function not effective; improper drying technique.	Ensure the ionic function is active (it usually is by default). Try using the NutriEssence head for added conditioning. Dry hair in sections, directing airflow downwards.
NutriEssence head not dispensing serum.	Serum ring is empty or incorrectly inserted.	Check if the serum ring needs replacement. Ensure it is correctly seated in the NutriEssence head.

TECHNICAL SPECIFICATIONS

Feature	Detail
Model Name	IoniCare Dry&Keratin Cotton Candy
Model Number	A01_EU01_112896
Brand	Cecotec
Power (Wattage)	1200 W
Motor Speed	107,000 RPM (Brushless Motor)
Special Functions	Ionic Technology, NutriEssence Technology, Air Multiplier Technology
Color	Cotton Candy
Material	Plastic
Power Source	Corded Electric
Product Dimensions (L x W x H)	6.5 x 7 x 23 cm
Product Weight	440 g
Number of Settings	2 (Adjustable)

WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical assistance, or any questions regarding your Cecotec IoniCare Dry&Keratin hair dryer, please refer to the official Cecotec website or contact their customer support directly. Keep your purchase receipt as proof of purchase for warranty claims.

You can find more information and contact details on the official [Cecotec Brand Store](#).