

Defy DBF300

Defy DBF300 Bladeless Fan User Manual

Model: DBF300 | Brand: Defy

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Defy DBF300 Bladeless Fan. Retain this manual for future reference.

- Always ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not operate the fan with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Keep hands, fingers, hair, and loose clothing away from the fan's air inlet and outlet openings.
- Do not immerse the fan, cord, or plug in water or other liquids.
- Unplug the fan from the power outlet when not in use, before cleaning, or before moving it.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the fan outdoors or in wet conditions.
- Do not block air openings or operate near curtains or other objects that could block airflow.



Figure 1: The bladeless design ensures safety, allowing a hand to pass through the air loop without obstruction.

2. PRODUCT OVERVIEW

The Defy DBF300 is a bladeless fan designed for efficient and quiet air circulation. It features multiple speed settings, various wind modes, and convenient remote control operation.





Figure 2: Front view of the Defy DBF300 Bladeless Fan.

Key Features:

- Bladeless design for enhanced safety and easy cleaning.
- Up to 20 wind speed settings for precise airflow control.
- Multiple wind modes: Strong, Natural, Sleep, and Smart adaptive wind.
- Oscillation function with 4 modes for wide area coverage.
- Wireless remote control for convenient operation.
- Integrated touch-sensitive control panel on the unit.
- Timer function for automatic shut-off, adjustable up to 8 hours.
- Whisper-quiet operation.

3. SETUP

3.1 Unpacking

1. Carefully remove the fan from its packaging.
2. Check for any signs of damage during transit. If damaged, do not operate and contact customer support.
3. Ensure all components are present: the main fan unit and the remote control.

3.2 Placement

- Place the fan on a firm, level, and stable surface.
- Ensure there is adequate space around the fan for optimal airflow, avoiding obstructions like walls, furniture, or curtains.
- Do not place the fan in direct sunlight or near heat sources.
- Keep the fan away from areas where it might be exposed to water or high humidity.

3.3 Power Connection

- Before plugging in, ensure the power supply voltage matches the rating label on the fan.
- Insert the power plug firmly into a suitable electrical outlet.

4. OPERATING INSTRUCTIONS

The Defy DBF300 Bladeless Fan can be operated using the touch control panel on the unit or the provided remote control.

4.1 Control Panel Overview

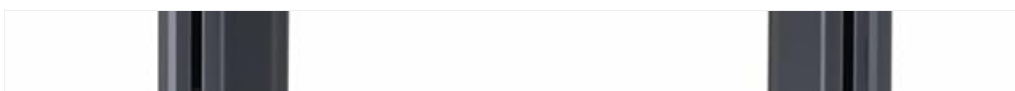






Figure 3: The fan's touch control panel and digital display.

- **Power Button (①):** Turns the fan On or Off.
- **Speed Adjustment (②):** Increases or decreases wind speed.
- **Mode Selection (③):** Cycles through Strong, Natural, Sleep, and Smart adaptive wind modes.
- **Oscillation (④):** Activates or deactivates the oscillation function.
- **Timer (⑤):** Sets the auto shut-off timer.
- **Digital Display:** Shows current speed, mode, or timer setting.

4.2 Remote Control



Figure 4: The remote control for the Defy DBF300 Bladeless Fan.

The remote control duplicates all functions available on the fan's control panel. Ensure the remote has working batteries (typically 2x AAA, not included) and is pointed towards the fan's receiver for optimal operation.

- **Power Button:** Turns the fan On or Off.
- **Speed +/- Buttons:** Adjusts the wind speed (1-20).
- **Mode Button:** Cycles through Strong, Natural, Sleep, and Smart modes.
- **Oscillation Button:** Toggles oscillation On/Off.
- **Timer Button:** Sets the auto shut-off timer (1-8 hours).

4.3 General Operation

1. **Power On/Off:** Press the Power button on the control panel or remote. The digital display will illuminate.
2. **Adjusting Wind Speed:** Use the Speed adjustment buttons on the control panel or the +/- buttons on the

remote. The display will show the current speed level (1-20).

3. **Selecting Wind Mode:** Press the Mode button to cycle through the available modes:

- **Strong Mode:** Provides a consistent, powerful airflow.
- **Natural Mode:** Simulates natural breezes by varying wind speed.
- **Sleep Mode:** Operates at a lower, quieter speed, gradually decreasing over time for comfortable sleep.
- **Smart Adaptive Wind:** Adjusts airflow based on ambient conditions (if sensor equipped, otherwise maintains a gentle flow).

4. **Activating Oscillation:** Press the Oscillation button. The fan will begin to rotate horizontally. Press again to stop oscillation. There are 4 oscillation modes, which can be cycled through by repeatedly pressing the oscillation button.

5. **Setting the Timer:** Press the Timer button. Each press will increase the timer setting by 1 hour, up to a maximum of 8 hours. The fan will automatically turn off after the set time. To cancel the timer, cycle through until '00' or 'OFF' is displayed, or turn the fan off.

5. MAINTENANCE

Regular cleaning and proper storage will ensure the longevity and optimal performance of your Defy DBF300 Bladeless Fan.

5.1 Cleaning

1. **Always unplug the fan** from the power outlet before cleaning.
2. Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. For the air inlet and outlet, use a soft brush or a vacuum cleaner with a brush attachment to remove dust and debris. The bladeless design makes these areas easily accessible for cleaning.
4. Ensure no water or liquid enters the internal components of the fan.
5. Allow the fan to dry completely before plugging it back in and operating.

5.2 Storage

- If storing the fan for an extended period, clean it thoroughly as per the instructions above.
- Store the fan in its original packaging or cover it to protect it from dust.
- Keep the fan in a cool, dry place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Before contacting customer support, please refer to the following troubleshooting guide for common issues.

| Problem | Possible Cause | Solution |
|-----------------------------|--|--|
| Fan does not turn on. | No power supply. Power cord not properly plugged in. | Ensure the fan is plugged into a live electrical outlet. Check the power cord connection. |
| Weak or no airflow. | Air inlet/outlet blocked. Fan speed set too low. | Check for obstructions and clear them. Increase the fan speed setting. |
| Remote control not working. | Batteries are dead or incorrectly inserted. Obstruction between remote and fan. | Replace batteries (2x AAA). Ensure correct polarity. Remove any objects blocking the signal path. Point remote directly at the fan. |

| Problem | Possible Cause | Solution |
|--------------------------|--|---|
| Fan makes unusual noise. | Fan not on a level surface. Internal obstruction or damage. | Place the fan on a stable, level surface. If noise persists, discontinue use and contact customer support. |

7. SPECIFICATIONS

| | |
|---------------------------------------|---|
| Model | DBF300 |
| Brand | Defy |
| Colour | Metallic Grey |
| Power / Wattage | 36 watts |
| Product Dimensions (D x W x H) | 28D x 25W x 97H centimetres |
| Item Weight | 6.7 kg |
| Special Feature | Bladeless, Oscillation, Remote Control, Timer |
| Power Source | Corded Electric |



8. WARRANTY AND SUPPORT





For detailed warranty information, please refer to the warranty card included with your product or visit the official Defy website. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual or require further assistance, please contact Defy customer support. Contact details can typically be found on the Defy website or your product packaging.

You can visit the Defy Store for more information: [Defy Store on Amazon](#).

Related Documents - DBF300

| | |
|---|--|
|  | <p>Defy DTL165 Top Loader Washing Machine User Manual</p> <p>Comprehensive user manual for the Defy DTL165 top loader washing machine. Includes installation, operation, maintenance, troubleshooting, safety instructions, and technical specifications.</p> |
|  | <p>Defy Slimline 600 MSE & 600 MSU Multifunction Built-in Oven Owner's Manual</p> <p>Comprehensive owner's manual for Defy Slimline 600 MSE and 600 MSU multifunction built-in ovens. Covers installation, operation, safety, maintenance, and warranty.</p> |

| | |
|---|--|
|  | <p>DEFY DTD230-DTD258-DTD259 Tumble Dryer: User Instruction Manual</p> <p>Comprehensive user manual for the DEFY DTD230, DTD258, and DTD259 Tumble Dryer. Learn about installation, operation, safety, maintenance, and troubleshooting for your Defy laundry appliance.</p> |
|  | <p>Defy Gemini Petit Chef Plus Multifunction Oven DBO474/DBO475 Instruction Manual</p> <p>Comprehensive instruction manual for the Defy Gemini Petit Chef Plus Multifunction Oven (models DBO474-Black, DBO475-Mirror). Covers installation, operation, safety, maintenance, and troubleshooting.</p> |
|  | <p>Defy DUALMASTER DGS679 Electric Oven: Instruction Manual</p> <p>Comprehensive instruction manual for the Defy DUALMASTER DGS679 600 GE 3B 1S Electric Oven, covering safe operation, installation, maintenance, and troubleshooting.</p> |
|  | <p>DEFY DBO767/DBO768 Gemini Gourmet Multifunction Double Oven Instruction Manual</p> <p>User guide for the DEFY DBO767-Black and DBO768-Mirror Gemini Gourmet Multifunction Double Oven. Provides essential safety instructions, operating procedures, maintenance tips, and troubleshooting for optimal use.</p> |