



[Manuals.plus](#) /

> [TYUIHJGH](#) /

> Refrigerator Control Board BCD-518WYX/HC4 HG2126844-A-V03 Circuit PCB 2126844 Fridge Motherboard Freezer Parts Compatible with Hisense User Manual

TYUIHJGH BCD-518WYX/HC4 HG2126844-A-V03

Refrigerator Control Board BCD-518WYX/HC4 HG2126844-A-V03 User Manual

Model: BCD-518WYX/HC4 HG2126844-A-V03 | Brand: TYUIHJGH

PRODUCT OVERVIEW

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of the **Refrigerator Control Board BCD-518WYX/HC4 HG2126844-A-V03**. This high-quality replacement part is designed to ensure the stable and efficient operation of compatible Hisense refrigerators and freezers.

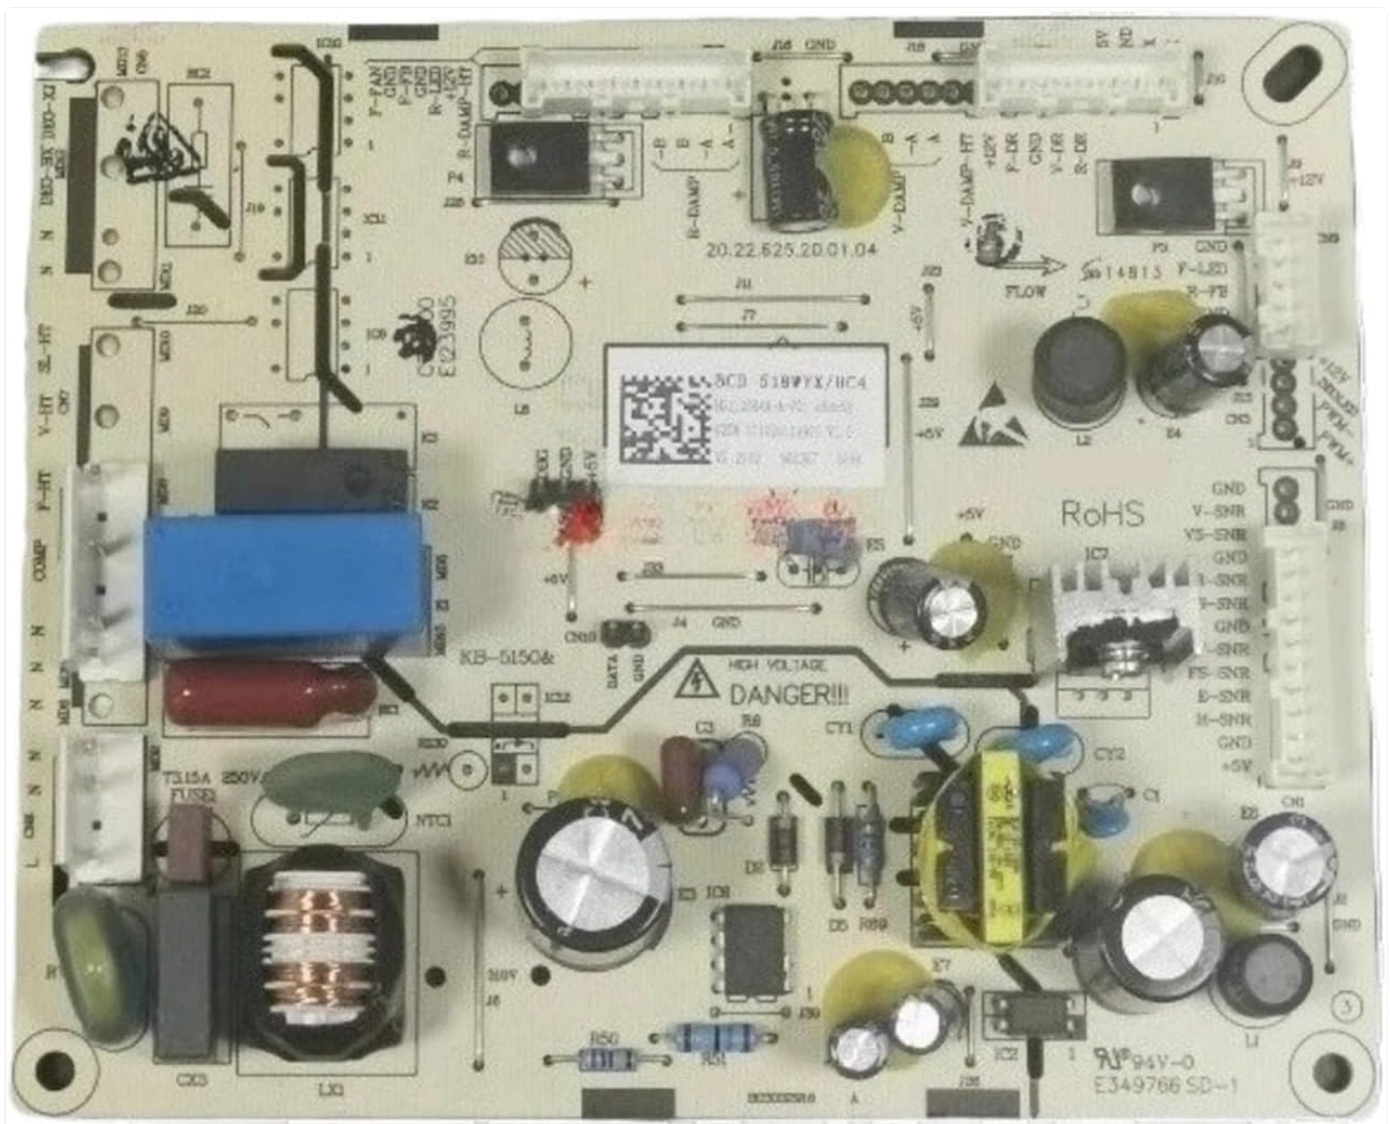


Figure 1: A detailed view of the BCD-518WYX/HC4 HG2126844-A-V03 Refrigerator Control Board, showing its various components, circuits, and connectors. The board is light-colored with various electronic components including capacitors, resistors, and integrated circuits. A QR code and model number 'BCD 518WYX/HC4' are visible on the board. There are also labels like 'HIGH VOLTAGE DANGER!!!' and 'RoHS'.

KEY FEATURES

- **Enhanced Signal Transmission:** Utilizes precision etching technology to reduce signal transmission loss by 60%, ensuring stable equipment operation.
- **Superior Conductivity:** Rigorously tested components provide excellent conductivity, ideal for maintenance and upgrade needs.
- **High Reliability:** Each circuit board undergoes testing with a defect rate controlled below 0.1%, matching the quality of original accessories.
- **Durability:** Manufactured with industrial-grade processes, offering high temperature resistance, aging resistance, and extended service life.
- **Perfect Compatibility:** Standardized interface strictly matches original factory specifications for seamless integration and performance recovery.

SAFETY INFORMATION

WARNING: This product involves electrical components and high voltage. Installation and replacement should only be performed by qualified personnel. Disconnect power to the appliance before attempting any installation or maintenance.

Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Always disconnect the refrigerator from the power supply before beginning any work.
- Wear appropriate personal protective equipment (PPE), such as insulated gloves.
- Handle the control board by its edges to avoid damaging components or static discharge.
- Ensure all connections are secure and correctly oriented before restoring power.

SETUP AND INSTALLATION

1. Preparation:

- Ensure the refrigerator is unplugged from the wall outlet.
- Locate the existing control board within the refrigerator or freezer compartment. Refer to your appliance's specific service manual for exact location.
- Gather necessary tools, which may include screwdrivers (Phillips and flathead), pliers, and a multimeter.

2. Removal of Old Board:

- Carefully disconnect all wiring harnesses and connectors from the old control board. Note the position and orientation of each connector, perhaps by taking photos.
- Unscrew or unclip the old control board from its mounting brackets.

3. Installation of New Board:

- Align the new BCD-518WYX/HC4 HG2126844-A-V03 control board with the mounting points.
- Secure the board using the original screws or clips.
- Reconnect all wiring harnesses and connectors to their corresponding ports on the new board. Ensure each connection is firm and correctly seated.

4. Final Checks:

- Double-check all connections for proper seating and orientation.
- Ensure no loose wires are present that could interfere with other components.

OPERATING INSTRUCTIONS

Once the control board is correctly installed, restore power to the refrigerator. The appliance should power on and resume normal operation. Monitor the refrigerator's performance for the first few hours to ensure all functions (cooling, defrost, lighting) are working as expected.

- Plug the refrigerator back into a grounded electrical outlet.
- Listen for the compressor to start and observe if the internal lights function.
- Allow several hours for the refrigerator to reach its set temperature.
- If the refrigerator has a display panel, check for any error codes or unusual readings.

MAINTENANCE

The BCD-518WYX/HC4 HG2126844-A-V03 control board is designed for long-term reliability and typically requires no routine maintenance. However, periodic inspection of the board and its connections can help ensure continued optimal performance.

- **Annual Inspection:** Annually, with the power disconnected, visually inspect the control board for any signs of dust accumulation, corrosion, or loose connections.
- **Cleaning:** If dust is present, gently remove it using a soft brush or compressed air. Do not use liquids or abrasive cleaners.
- **Connection Check:** Ensure all wire harnesses remain securely seated.

TROUBLESHOOTING

If your refrigerator experiences issues after replacing the control board, refer to the following common troubleshooting steps. Always disconnect power before performing any checks involving the control board.

Problem	Possible Cause	Solution
Refrigerator not powering on after installation.	Loose power connection, incorrect wiring, faulty power outlet.	<p>Verify the refrigerator is securely plugged into a working outlet.</p> <p>Check all connections to the control board for proper seating.</p> <p>Inspect the household circuit breaker.</p>
Refrigerator not cooling properly.	Sensor issue, compressor not engaging, fan malfunction.	<p>Ensure temperature settings are correct.</p> <p>Check if the compressor is running.</p> <p>Verify fan operation (evaporator and condenser fans).</p> <p>Consult the refrigerator's service manual for specific diagnostic codes.</p>
Error codes displayed on refrigerator panel.	Component failure, communication error.	<p>Refer to your refrigerator's user manual for the meaning of specific error codes.</p> <p>Verify all connections to the control board are secure.</p> <p>If the issue persists, professional assistance may be required.</p>

If troubleshooting steps do not resolve the issue, it is recommended to contact a certified appliance technician or the refrigerator manufacturer's support.

SPECIFICATIONS

Attribute	Value
Brand	TYUIHJGH
Model Number	BCD-518WYX/HC4 HG2126844-A-V03
Compatibility	Compatible with Hisense refrigerators (verify specific model compatibility)
Item Weight	50 g

Attribute	Value
Parcel Dimensions	1 x 1 x 1 cm (approximate)
Technology	Precision etching technology
Defect Rate	Controlled below 0.1%

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for this product, please refer to the seller's return policy or contact the seller directly through the platform where the purchase was made. Keep your purchase receipt as proof of purchase.

- **Return Policy:** Typically 30 days for refund/replacement (as per Amazon Buy Box information).
- **Contact Seller:** For specific product inquiries or support, reach out to "zhaodongliangl" via the Amazon platform.