



Manuals.plus /

› HBFEYSZY /

› HBFEYSZY Replacement Roller Brush and Filter Instruction Manual for Bissell Crosswave Hydrosteam Models

HBFEYSZY Bissell Crosswave Hydrosteam 3528N, 35151, 3515, 35152, 3513, 3518, B0440 (Compatible)

HBFEYSZY Replacement Roller Brush and Filter Instruction Manual

For Bissell Crosswave Hydrosteam Models

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your HBFEYSZY replacement roller brushes and filters. These accessories are designed to restore and maintain the cleaning efficiency of your compatible Bissell Crosswave Hydrosteam vacuum cleaner.

2. COMPATIBILITY

These replacement parts are compatible with the following Bissell Crosswave Hydrosteam models:

- Bissell Crosswave Hydrosteam Pet Pro 3528N
- Bissell Crosswave Hydrosteam 35151
- Bissell Crosswave Hydrosteam 35152
- Bissell Crosswave Hydrosteam 3515
- Bissell Crosswave Hydrosteam 3513
- Bissell Crosswave Hydrosteam 3518
- Bissell Crosswave Hydrosteam B0440

Ensure your model number matches one of the listed compatible models for proper fit and function.

3. PRODUCT COMPONENTS

Your package includes the following components:

- Replacement Roller Brushes (Carpet Rollers)
- Replacement Filters



Figure 3.1: Overview of replacement filters and roller brushes.



Figure 3.2: Two carpet roller brushes designed for dry and wet messes.



Figure 3.3: A single replacement filter, crucial for maintaining suction.

4. INSTALLATION

Before installing any replacement parts, ensure your Bissell Crosswave Hydrosteam is turned off and unplugged from the power outlet.

4.1. Replacing the Roller Brush

1. Locate the brush roll window on the foot of your vacuum cleaner.
2. Open the brush roll window by lifting the tab or releasing the latch, depending on your specific model.
3. Carefully remove the old roller brush. Note its orientation for correct installation of the new brush.
4. Insert the new roller brush, ensuring it fits securely into the designated slots. The brush should rotate freely.
5. Close the brush roll window, ensuring it latches firmly into place.



Figure 4.1: Detail of the roller brush attachment point for secure fitting.

4.2. Replacing the Filter

1. Locate the dirty water tank on your vacuum cleaner.
2. Remove the dirty water tank from the unit.
3. Twist or pull to open the filter housing, typically found at the top of the dirty water tank.
4. Remove the old filter and discard it.
5. Insert the new filter into the housing, ensuring it is seated correctly to maintain a tight seal.
6. Close the filter housing and reattach the dirty water tank to the vacuum cleaner.



Figure 4.2: Filter dimensions (95mm x 75mm x 32mm) for verifying proper fit.

5. OPERATING CONSIDERATIONS

Once installed, the replacement roller brush and filter are designed to function identically to the original parts.

- **Roller Brush Function:** The roller brush is engineered to effectively tackle both dry debris and wet spills. Its durable bristles rotate steadily to lift dirt from carpets and scrub stains from hard floors, ensuring thorough cleaning.
- **Filter Function:** The filter is crucial for maintaining consistent suction power. Its design allows for steady airflow, preventing loss of suction whether you are cleaning dry crumbs or liquid spills.

Ensure the parts are securely fitted before operating the vacuum to prevent any disruption to cleaning patterns or potential damage.

6. MAINTENANCE

Regular maintenance of your replacement parts will extend their lifespan and ensure optimal performance of your vacuum cleaner.

6.1. Cleaning the Roller Brush

- After each use, remove the roller brush and rinse it under running water to remove hair, debris, and cleaning solution residue.
- The brush's bristles are designed to resist matting from water, maintaining their shape.
- Allow the roller brush to air dry completely before reinstalling it in the vacuum cleaner.

6.2. Cleaning the Filter

- After each use, remove the filter from the dirty water tank.
- Rinse the filter under running water until it is clean.
- Allow the filter to air dry completely for at least 24 hours before reinstalling. Do not use the vacuum with a wet filter.

6.3. Replacement Frequency

It is recommended to replace the roller brush and filter every 3 to 6 months, or as needed, depending on usage frequency and cleaning habits. Swapping out worn parts ensures continued cleaning efficiency and suction power.

7. TROUBLESHOOTING

If you experience issues after installing the replacement parts, consider the following:

- **Reduced Suction:** Ensure the filter is clean and completely dry. Check that the filter is correctly seated in its housing, creating a tight seal.
- **Poor Cleaning Performance:** Verify that the roller brush is free of tangled hair or debris. Ensure the brush is properly installed and rotating freely.
- **Parts Not Fitting:** Double-check the compatibility list in Section 2 to confirm your vacuum model is supported. Ensure the parts are oriented correctly during installation.

8. SPECIFICATIONS

Feature	Detail
Brand Name	HBFEYSZY
Compatible Models	Bissell Crosswave Hydrosteam 3528N, 35151, 3515, 35152, 3513, 3518, B0440
Item Weight	1.76 ounces (approximate, for 2 carpet rollers)
Package Dimensions	0.39 x 0.39 x 0.39 inches (approximate)
Color	2 Carpet Rollers (design as shown in images)
Batteries Required?	No

9. WARRANTY AND SUPPORT

For any questions regarding the installation, operation, or maintenance of your HBFEYSZY replacement parts, please contact the manufacturer or seller directly through your purchase platform. Please refer to your original product documentation for specific warranty information.