

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hermitlux](#) /

› [Hermitlux Countertop Dishwasher \(Model US-HDW5CW02\) Instruction Manual](#)

Hermitlux US-HDW5CW02

Hermitlux Countertop Dishwasher Instruction Manual

Model: US-HDW5CW02

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Hermitlux Countertop Dishwasher. Please read all instructions carefully before first use and retain this manual for future reference.



Image: Front view of the Hermitlux Countertop Dishwasher.

SETUP

1. Unboxing and Components

Carefully remove the dishwasher and all accessories from its packaging. Ensure all components listed below are present:

- Hermitlux Countertop Dishwasher
- Dish Rack
- Cutlery Holder
- Inlet Pipe
- Drain Pipe
- Water Pitcher
- User Manual

List for packing

1×hermitlux Countertop Dishwasher 220V	
1×Cutlery basket	1×Fruit basket
1×Tableware basket	1×Water pitcher
1×Inlet pipe	1×User manual
1×Drain pipe	



Image: Hermitlux Countertop Dishwasher with all included accessories laid out.

2. Placement

Place the dishwasher on a stable, level countertop near a water source and drain. The slim design (14.6 inches wide) is suitable for various kitchen layouts including U-shaped, L-shaped, or linear designs.



Image: Dimensions of the dishwasher (14.61" W x 20.08" D x 17.83" H) and suggested placement on a countertop next to a sink.

3. Water Supply Connection

Your dishwasher offers two methods for water supply:

- **Manual Tank Fill:** Open the water inlet cover on top of the unit and pour water using the provided pitcher until the dishwasher beeps, indicating the tank is full.
- **Direct Faucet Connection:** Connect the inlet pipe to a kitchen faucet (G3/4" compatibility). Ensure the connection is secure to prevent leaks.

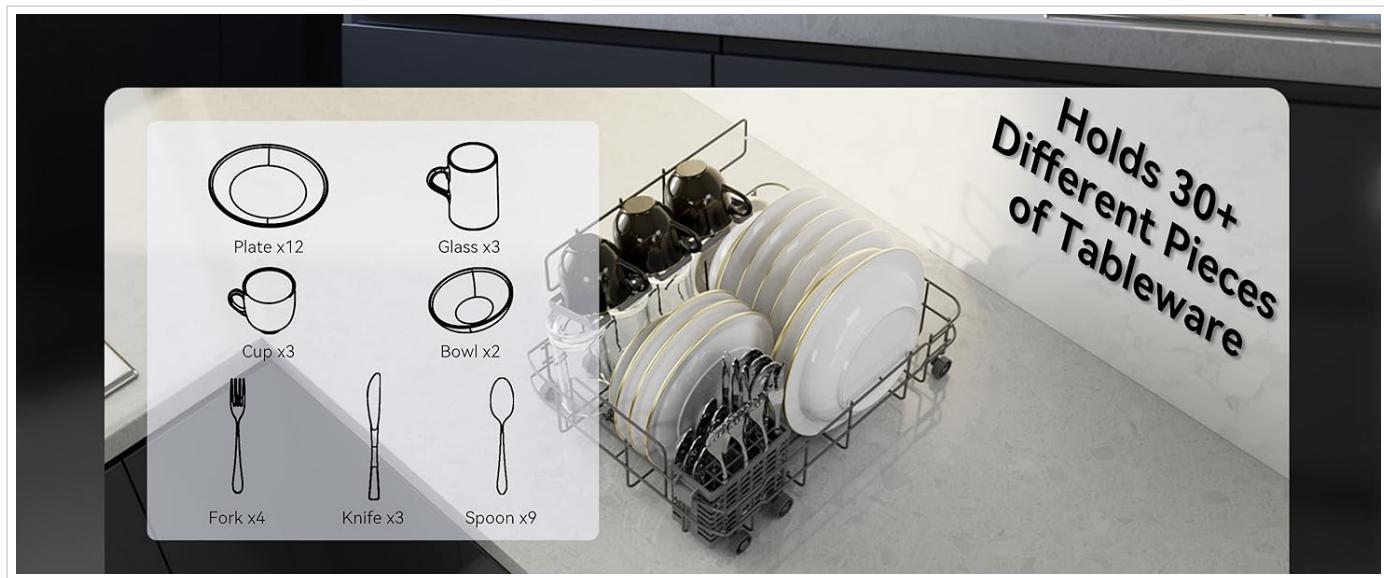


Image: Illustration showing both manual tank fill and direct faucet connection methods for water supply.

4. Drainage

Connect the drain pipe to the designated outlet on the back of the dishwasher. Route the drain pipe to a sink or a suitable drainage area. Ensure the drain hose is properly secured to prevent spills.

OPERATING INSTRUCTIONS

1. Loading the Dishwasher Basket

Arrange dishes in the basket, ensuring they do not block the spray arms. The dishwasher can hold up to 5 full place settings and 10.25" dishes at an angle. The adjustable shelf creates extra space for taller items.

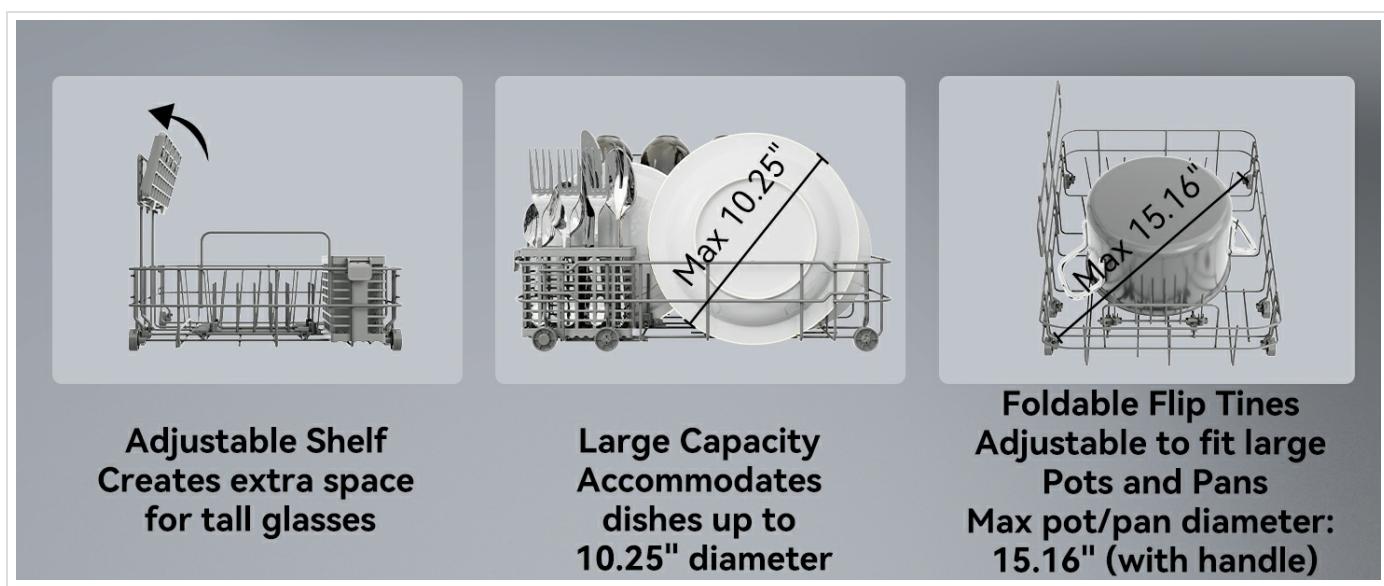


Image: Diagram illustrating optimal loading of dishes, cups, and cutlery in the dishwasher basket.

2. Adding Detergent

Add the recommended amount of dishwasher detergent (powder or liquid) to the dispenser located inside the door. Do not use hand dish soap.

3. Control Panel and Wash Programs

The LED control panel allows selection of various wash programs:

- **Normal:** Standard wash for everyday dishes.
- **ECO:** Energy-saving cycle.
- **Strong:** For heavily soiled items.
- **Fast:** Quick wash for lightly soiled dishes.
- **Fruit:** Dedicated program for washing fruits and vegetables.
- **Super Strong:** Enhanced cleaning for stubborn stains.
- **Dry:** An extra function for drying dishes and preventing odors.

PIONEERING DUAL Y-HEAD SPRAY ARMS

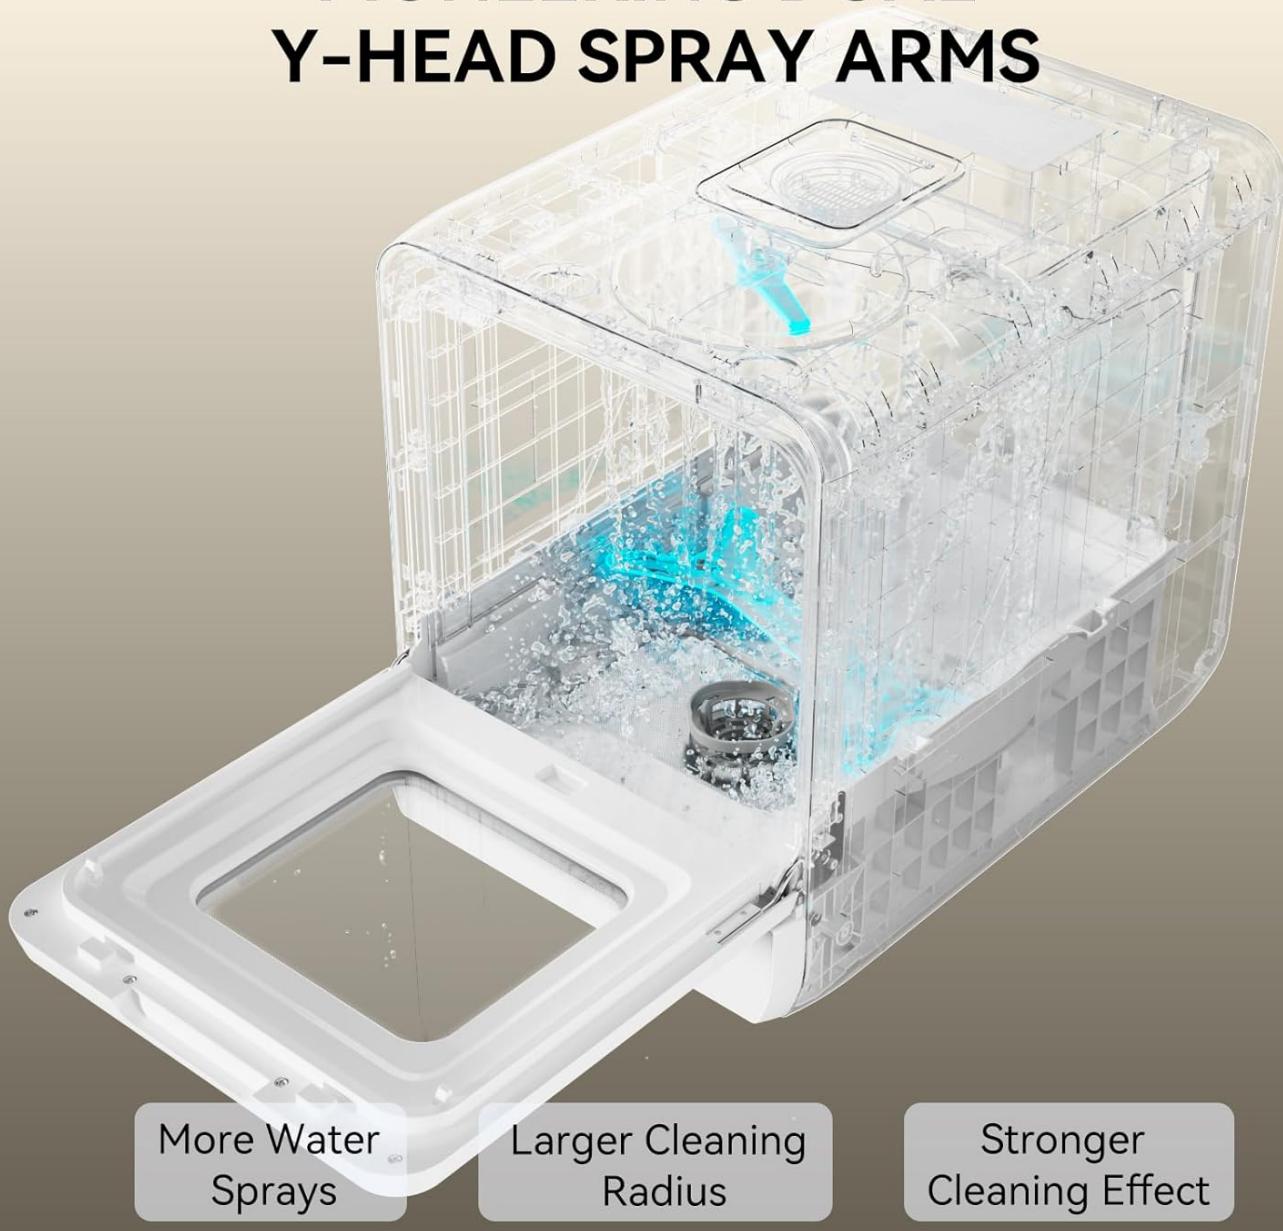


Image: Overview of the dishwasher's control panel displaying the 6 wash programs and 1 extra function (Dry).

4. Starting a Cycle

Press the Power button to turn on the dishwasher. Select your desired wash program. Press the Start/Pause button to begin the cycle. The dishwasher will beep when the water tank is full (if using manual fill).

5. Special Features

- **Dual Y-Head Spray Arms:** Provide 360-degree coverage and enhanced cleaning with double spray nozzles.
- **Drying Mode:** Reaches up to 167°F to ensure dishes are dry and free from odors. A 72-hour keep-fresh mode can be activated after washing.
- **Water Saving:** Uses approximately 5L of water per cycle, saving up to 83% compared to handwashing.



Image: Diagram illustrating the dual Y-head spray arms providing cross-washing and multi-angle coverage.

MAINTENANCE

1. Cleaning the Filter

Regularly clean the food debris filter located at the bottom of the dishwasher. Twist and pull up the filter to remove it, rinse under running water, and reinsert securely.

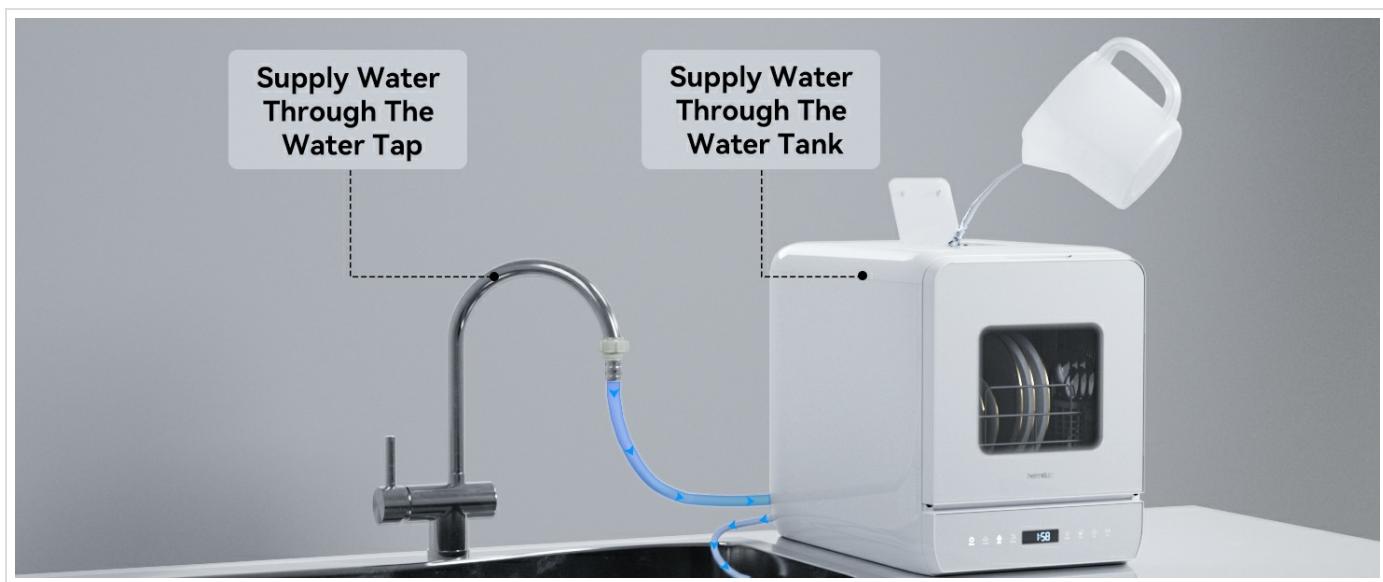


Image: Close-up of the dishwasher's interior, highlighting the efficient food debris filter and G3/4" water inlet connection.

2. General Care

Wipe down the interior and exterior of the dishwasher regularly with a damp cloth. Do not use abrasive cleaners. Ensure the air vent on the right side of the dishwasher is not blocked to prevent steam burns.

TROUBLESHOOTING

- **Dishwasher not starting:** Ensure the power cord is securely plugged in and the door is fully closed. Check if the water tank is filled or the inlet hose is properly connected.
- **Dishes not clean:** Verify that dishes are loaded correctly and not blocking spray arms. Ensure sufficient detergent is used. Select a stronger wash program if needed.
- **Water leakage:** Check all hose connections for tightness. Ensure the drain hose is properly positioned in the sink or drainage area.
- **Error codes:** Refer to the user manual for specific error code meanings and solutions.

SPECIFICATIONS

Feature	Specification
Model Number	US-HDW5CW02
Dimensions (D x W x H)	20.08" x 14.61" x 17.83"
Item Weight	33 pounds (15 Kilograms)
Capacity	5 Liters (Water Tank)
Voltage	120 Volts
Energy Consumption	0.38 Kilowatt Hours
Water Consumption	1.32 Gallons per Minute
Noise Level	50 Decibels
Wash Programs	6 + 1 Dry Function
Special Features	Compact, Portable, Slim-Size, Super Strong Washing Mode, Y-Head Spray Arms
Certification	ETL

OFFICIAL PRODUCT VIDEOS

The following video provides additional guidance on using your Hermitlux Countertop Dishwasher:

Hermitlux Countertop Dishwasher, 6 Wash

Your browser does not support the video tag.

Video: A brief overview of the Hermitlux Countertop Dishwasher, highlighting its 6 wash programs. This video is a 7-second preview.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in your product's user manual or visit the official Hermitlux website.