

vSeeBox V5 Pro Bluetooth Voice Remote

vSeeBox Bluetooth Voice Remote Control User Manual

Model: V5 Pro Bluetooth Voice Remote

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Genuine vSeeBox Bluetooth Voice Remote Control. This remote is designed for seamless compatibility with vSeeBox V5 Pro, V3 Plus, V3 Pro, Elite Ultra, and Elite Mini models, offering enhanced convenience and control over your streaming device.

For optimal performance and to ensure proper functionality, please read this manual thoroughly before using the remote control.

2. PRODUCT FEATURES

- **Genuine vSeeBox Compatibility:** Official replacement remote for vSeeBox V5 Pro, V3 Plus, V3 Pro, Elite Ultra, and Elite Mini.
- **Effortless Control:** Navigate your vSeeBox with Bluetooth for a fast, lag-free experience, or use infrared (IR) mode for direct control.
- **Voice Command Feature:** Supports voice search and commands for hands-free browsing and content discovery.
- **Ergonomic & User-Friendly Design:** Features a comfortable grip, intuitive button layout, and responsive buttons for ease of use.
- **Multi-Device Control:** Program the remote to adjust your TV's power and volume, reducing the need for multiple remotes.
- **Battery-Powered Reliability:** Operates on 2 AAA batteries (not included).

3. PACKAGE CONTENTS

The package includes the following item:

- 1x vSeeBox V5 Pro Bluetooth Voice Remote Control

Note: AAA batteries are not included and must be purchased separately.

4. SETUP AND PAIRING

Follow these steps to pair your new vSeeBox Bluetooth Voice Remote Control with your vSeeBox device:

1. Ensure your vSeeBox device is powered on and you are on the home screen.

2. Navigate to **System Settings** (typically found in the third row of icons on your vSeeBox home screen).
3. Select **Remotes & Accessories**.
4. If a remote is currently paired, select it and choose the option to **Unpair** the current remote.
5. Once prompted on the screen, press and hold the **OK** button and the **Volume Down (-)** button simultaneously on your new vSeeBox remote control.
6. Hold the buttons until the pairing process is complete and the remote is successfully connected.
7. If you accidentally exit the pairing prompt without successfully pairing the remote, restart your vSeeBox device to bring up the prompt again.





Figure 4.1: Front view of the vSeeBox Bluetooth Voice Remote Control.

5. OPERATING INSTRUCTIONS

5.1. Button Functions

The vSeeBox remote control features an intuitive layout for easy navigation and control:

- **TV Control Section (Top Left):** Includes TV Power, TV Input, Volume Up/Down for your television.
- **STB Power (Top Right):** Power button for your vSeeBox streaming device.
- **Number Pad (0-9):** For direct channel input or other numerical functions.
- **Navigation Pad (OK, Up, Down, Left, Right):** For menu navigation and selection.
- **Menu/Exit:** Access menus and exit current screens.
- **EPG/Info:** Electronic Program Guide and information display.
- **SUB.T/Home/Audio:** Subtitle, Home screen access, and audio track selection.
- **Voice Command Button (Microphone icon):** Activates voice search and commands.
- **Channel Up/Down (Ch Pg):** Navigate through channels or pages.
- **Volume Mute:** Mute/unmute audio.
- **Quick Access Buttons:** Dedicated buttons for popular streaming services like YouTube, Netflix, Prime Video, and Disney+.

5.2. Voice Command Usage

To use the voice command feature:

1. Press the **Voice Command button** (microphone icon) on the remote.
2. Speak clearly into the microphone located on the remote control.
3. The vSeeBox device will process your command or search query.

5.3. Programming TV Control Buttons (IR Learning Function)

The TV Control section of your vSeeBox remote can be programmed to control your television's power and volume using its infrared (IR) learning function. This allows you to consolidate control of your TV and vSeeBox device into a single remote.

To program the TV Control buttons (TV IN, VOL-, VOL+, TV Power):

1. Press and hold the **TV Power** button on the vSeeBox remote for 5 seconds. The LED indicator on the remote will go from blinking to solid, indicating it has entered learning mode.
2. Place your original TV remote control and the vSeeBox remote control head-to-head (infrared emitters facing each other), with a distance of less than 1 inch (2.5 cm).
3. On the vSeeBox remote, press the button you wish to program (e.g., **TV IN**, **VOL-**, **VOL+**). The LED will begin blinking.
4. On your original TV remote, press the corresponding button (e.g., TV Input, Volume Down, Volume Up). The LED on the vSeeBox remote will flash 3 times, indicating successful programming.
5. Repeat steps 3 and 4 for any other TV control keys you wish to program.
6. To exit learning mode, press any other button on the vSeeBox remote (e.g., **OK** button). The LED will turn off.





Figure 5.1: Back view of the vSeeBox Bluetooth Voice Remote Control with IR learning instructions.

6. BATTERY INSTALLATION

The vSeeBox Bluetooth Voice Remote Control requires two (2) AAA batteries for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: Always use new batteries and dispose of old batteries responsibly. Do not mix old and new batteries, or different types of batteries.

7. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Remove batteries if the remote will not be used for an extended period to prevent leakage.

- **Avoid Drops:** Protect the remote from physical shocks and drops, which can damage internal components.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-----------------------------------|--|---|
| Remote not responding to vSeeBox. | Batteries are low or incorrectly inserted. Remote is not paired. Interference. | Replace batteries, ensuring correct polarity. Re-pair the remote following Section 4. Move closer to the vSeeBox device. Ensure no obstructions. |
| Voice command not working. | Microphone blocked. Remote not properly paired for voice. | Ensure nothing is covering the microphone hole. Confirm Bluetooth pairing is successful (voice commands require Bluetooth). |
| TV control buttons not working. | Buttons not programmed. Incorrect programming. | Program the TV control buttons using the IR learning function as described in Section 5.3. Ensure proper alignment and distance during programming. |
| Remote loses pairing frequently. | Low batteries. Software glitch on vSeeBox. | Replace batteries. Restart your vSeeBox device. If issues persist, contact vSeeBox support. |

9. SPECIFICATIONS

- **Model:** V5 Pro Bluetooth Voice Remote
- **Connectivity Technology:** Bluetooth, Infrared (IR)
- **Compatible Devices:** vSeeBox V5 Pro, V3 Plus, V3 Pro, Elite Ultra, Elite Mini streaming devices
- **Special Feature:** Voice Search
- **Max Number of Supported Devices:** 1 (vSeeBox device) + TV control via IR learning
- **Power Source:** 2 x AAA Batteries (not included)
- **Package Dimensions:** 8.25 x 2 x 0.5 inches (20.96 x 5.08 x 1.27 cm)
- **Item Weight:** 3.68 ounces (104.33 grams)
- **Manufacturer:** vSeeBox



10. WARRANTY AND SUPPORT

For warranty information or technical support regarding your vSeeBox Bluetooth Voice Remote Control, please contact the vSeeBox authorized seller or visit the official vSeeBox website. Keep your purchase receipt as proof of purchase for any warranty claims.

Seller Information: vSeeBox Authorized Seller

For further assistance, refer to the support section of your vSeeBox streaming device's user interface or online resources.

Related Documents

| | |
|--|--|
|  | <p>Vseebox v3 pro Remote FCC ID and Label Information</p> <p>Details the FCC ID (2BMVG-V3PRO) and model number (Vseebox v3 pro) for the Vseebox v3 pro remote control, including label location and programming instructions.</p> |
|  | <p>Vseebox v3 pro Radiated Emission Test Report Shenzhen CTB Testing</p> <p>Official test report from Shenzhen CTB Testing Technology Co., Ltd. detailing radiated emission measurements for the Vseebox v3 pro model. Includes test setup descriptions.</p> |
| <p>Product operation instructions</p> <p>1. Key symbols and functions</p> <p>1.1 Key symbols</p> <p>1. The key symbol indicates the function of the key.</p> <p>2. The key symbol indicates the function of the key.</p> <p>1.2 Key functions</p> <p>1. The key symbol indicates the function of the key.</p> <p>2. The key symbol indicates the function of the key.</p> <p>2. Basic operation instructions</p> <p>2.1 Power on and off</p> <p>2.2 Pairing</p> <p>2.3 Remote control operation</p> <p>2.4 Low battery indication</p> <p>2.5 FCC compliance</p> | <p>V3PRO Remote Control Operation Manual and Instructions</p> <p>Comprehensive operation manual for the vSeeBox V3PRO remote control, detailing setup, pairing, functions, low battery indication, and FCC compliance.</p> |