

Jectse Jectse8og49p7mre

Jectse 4G LTE Mobile WiFi Hotspot Router User Manual

Model: Jectse8og49p7mre

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Jectse 4G LTE Mobile WiFi Hotspot Router. Please read this manual thoroughly before using the device and retain it for future reference.

The Jectse 4G LTE Mobile WiFi Hotspot Router is designed to provide portable internet access, supporting 4G and 3G networks. It features an integrated 8000mAh lithium-ion battery, allowing for extended use and the ability to charge other devices. The device supports connection for up to 10 devices simultaneously and offers secure internet access with WPA/WPA2 encryption.

Secure internet access anti password cracking



Figure 1.1: The Jectse router in an outdoor setting, demonstrating its portability for business and travel.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Jectse 4G LTE Mobile WiFi Hotspot Router
- 1 x USB Cable
- 1 x User Manual

3. PRODUCT OVERVIEW

The Jectse 4G LTE Mobile WiFi Hotspot Router is a compact and versatile device. It features an LED display for status indication, a micro SIM card slot, and USB ports for charging and data transfer. Its design emphasizes both functionality and security.





Figure 3.1: Front view of the Jectse 4G LTE Mobile WiFi Hotspot Router, showing its sleek design and transparent side panel with battery indicators.



Figure 3.2: Angled view of the Jectse 4G LTE Mobile WiFi Hotspot Router, highlighting its compact form factor.



Figure 3.3: The router displaying key features such as 4G high speed, good signal, multiple SIM support, 8000mAh capacity, USB direct connection, and support for 10+ users.

Desktop computer direct connection, plug and play



Figure 3.4: The router depicted with a security shield, emphasizing its secure internet access features like WPA/WPA2 encryption.

4. SETUP

Follow these steps to set up your Jectse 4G LTE Mobile WiFi Hotspot Router:

1. **Insert Micro SIM Card:** Locate the micro SIM card slot on the device. Carefully insert your activated micro SIM card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation as indicated on the device.



Figure 4.1: Illustration of inserting a micro SIM card into the designated slot on the router.

2. **Power On:** Press and hold the power button (usually located near the SIM slot) for a few seconds until the device powers on and the LED indicators light up.
3. **Initial Configuration (Optional):** For advanced settings or to change the default WiFi name (SSID) and password, connect to the device's WiFi network using a computer or smartphone. Open a web browser and navigate to the router's administration page (usually 192.168.0.1 or 192.168.1.1). Refer to the device's label for default login credentials.

Note: This device is a European version and supports networks in Europe, Africa, Southeast Asia, the Middle East, and Central Asia (FDD B1 3 5 7 8 20, TDD B38 40 41, WCDMA B1 5 8).

5. OPERATING INSTRUCTIONS

5.1. Connecting to the WiFi Network

1. Ensure the hotspot is powered on.
2. On your device (smartphone, laptop, tablet), search for available WiFi networks.

3. Select the network name (SSID) corresponding to your Jectse Hotspot. The default SSID and password are typically found on a sticker inside the battery compartment or on the device itself.
4. Enter the WiFi password when prompted.
5. Once connected, you can access the internet. The hotspot supports up to 10 connected devices simultaneously.



Figure 5.1: The router actively providing a WiFi signal to a nearby laptop, illustrating its function as a mobile hotspot.

5.2. Using as a Power Bank

With its 8000mAh battery, the Jectse Hotspot can also function as a power bank to charge other devices.

1. Connect your smartphone or other USB-powered device to the "5V OUT" USB port on the hotspot using a compatible USB cable.

2. The hotspot will begin charging your device.



Figure 5.2: The router connected via USB to a smartphone, demonstrating its capability to charge external devices.

5.3. Direct USB Connection (Tethering)

You can connect the hotspot directly to a computer via USB for internet access, functioning as a USB modem.

1. Connect the hotspot to your computer using the provided USB cable.
2. The computer should automatically detect the device and install necessary drivers.
3. Once recognized, the computer will use the hotspot's internet connection.



Figure 5.3: The router connected to a desktop computer, illustrating its direct USB connection capability for internet access.

6. SPECIFICATIONS

Feature	Specification
Model Number	Jectse8og49p7mre
Network Frequency Bands	FDD B1 3 5 7 8 20, TDD B38 40 41, WCDMA B1 5 8
Supported Network Type	4G, 3G
Transmission Rate	Up to 300 Mbps
Supported Protocol	802.11ac
Wireless Network Frequency	2.4 GHz, 5.8 GHz
Built-in Firewall	Yes

Feature	Specification
Battery	8000 mAh Lithium-ion battery
SIM Card Slot	Micro SIM (not included)
Material	ABS
Supported Regions	Europe, Africa, Southeast Asia, Middle East, Central Asia

7. MAINTENANCE

To ensure the longevity and optimal performance of your Jectse 4G LTE Mobile WiFi Hotspot Router, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. If storing for an extended period, charge the battery to about 50% before storage.
- **Avoid Impacts:** Protect the device from drops and impacts, which can damage internal components.
- **Ventilation:** Ensure the device has adequate ventilation during operation to prevent overheating.

8. TROUBLESHOOTING

If you encounter issues with your Jectse 4G LTE Mobile WiFi Hotspot Router, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No Internet Connection	<ul style="list-style-type: none">◦ Ensure the SIM card is correctly inserted and activated.◦ Check if you have an active data plan with your mobile carrier.◦ Verify network coverage in your current location.◦ Restart the hotspot and your connected device.
Slow Internet Speed	<ul style="list-style-type: none">◦ Check network signal strength on the hotspot's display.◦ Reduce the number of connected devices.◦ Move to an area with better network coverage.◦ Ensure no background applications are consuming excessive bandwidth.
Cannot Connect to WiFi	<ul style="list-style-type: none">◦ Verify the WiFi password.◦ Ensure the hotspot's WiFi is enabled.◦ Restart both the hotspot and the device attempting to connect.◦ Check if the maximum number of connected devices (10) has been reached.
Device Not Charging	<ul style="list-style-type: none">◦ Ensure the USB cable is securely connected to the "5V OUT" USB port and your device.◦ Check if the hotspot has sufficient battery charge.◦ Try a different USB cable or charging device.

9. WARRANTY AND SUPPORT

Your Jectse 4G LTE Mobile WiFi Hotspot Router comes with a manufacturer's warranty.

- **Manufacturer Warranty:** 2 years.
- **Spare Parts Availability:** Information unavailable.
- **Software Updates:** Information unavailable.

For technical support or warranty claims, please contact your retailer or the manufacturer directly. Keep your purchase receipt as proof of purchase.

