

slopehill H5

slopehill H5 Dual Voltage Travel Hair Dryer Instruction Manual

Model: H5

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- **DANGER** – To reduce the risk of death by electric shock:
 - Always unplug the appliance immediately after using.
 - Do not use while bathing or in a shower.
 - Do not place or store the appliance where it can fall or be pulled into a tub or sink.
 - Do not place in or drop into water or other liquid.
 - If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons:
 - An appliance should never be left unattended when plugged in.
 - Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
 - Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.
 - Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
 - Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
 - Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
 - Never use while sleeping.
 - Never drop or insert any object into any opening.
 - Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.

PRODUCT OVERVIEW

The slopehill H5 Dual Voltage Travel Hair Dryer is designed for efficient hair drying and styling, featuring ionic technology to reduce frizz and enhance shine. Its compact and lightweight design makes it suitable for both home use and travel. The dryer automatically adjusts to local voltage (100-240V) and includes a European adapter for international compatibility.

Dual Voltage for International Use

Voltage Support 110-120V and 220-240V



**ALCL
Safety Plug**



**European Plug
Adapter Converter**



Image: The slopehill H5 Dual Voltage Travel Hair Dryer in gold, showcasing its compact design.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the hair dryer and all accessories from the packaging. Ensure all components are present: the hair dryer unit, concentrator nozzle, diffuser, European adapter, and storage bag.

2. **Attaching Accessories:** The concentrator nozzle and diffuser attach magnetically to the front of the hair dryer. Align the attachment with the front opening and it will snap into place.

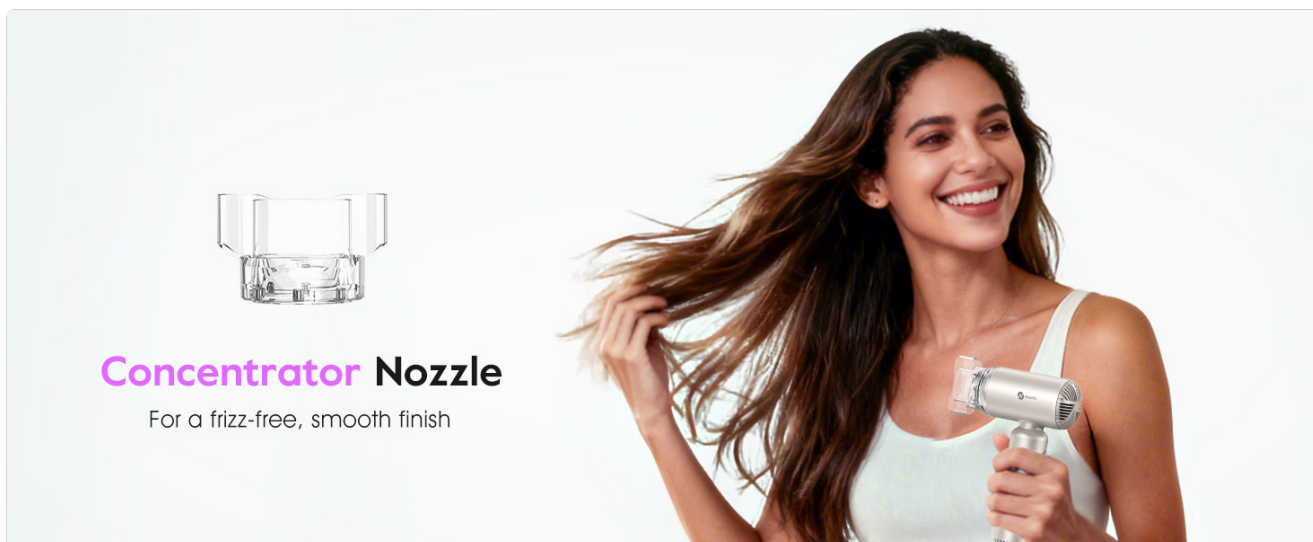


Image: The hair dryer shown with both the concentrator nozzle and diffuser attachments.

3. **Power Connection:** Plug the hair dryer into a suitable electrical outlet. The dryer features intelligent dual voltage technology (100-240V) and will automatically adjust to the local voltage. For European outlets, use the included European adapter.



Image: Illustration of the dual voltage feature and how to use the European adapter.

4. **Initial Inspection:** Before first use, ensure the air inlet and outlet are clear of any obstructions.

OPERATING INSTRUCTIONS

The slopehill H5 hair dryer offers adjustable settings for airflow speed and heat to suit various hair types and styling needs.

Power On/Off and Speed Settings

- Locate the power/speed button on the handle.
- Press once for Speed I (Gentle Airflow).
- Press again for Speed II (Powerful Drying).

- Press a third time to turn the dryer off.

Heat Settings

- Locate the heat setting button on the handle.
- Press the button to cycle through the 4 heat settings:
 - **Heat 1:** Cool Air (for fine hair or setting styles)
 - **Heat 2:** Medium Warm (for daily use)
 - **Heat 3:** High Warm (for thick hair)
 - **Heat 4:** Max Hot (for salon styling)
- The indicator light will change color to reflect the selected heat setting.



Image: Close-up of the hair dryer handle showing the power/speed and heat setting buttons.

Using Attachments

- **Concentrator Nozzle:** Use for precise styling and smoothing hair. Direct the airflow downwards along the hair shaft.
- **Diffuser:** Ideal for curly or wavy hair. Attach the diffuser and gently cup sections of hair, lifting towards the scalp to enhance natural curls and reduce frizz.



Diffuser Nozzle

Define your waves Embrace the ease



Image: The hair dryer with the diffuser attachment, demonstrating its use for curly hair.

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your hair dryer.

Cleaning the Air Filter

1. Ensure the hair dryer is unplugged and completely cool before cleaning.
2. Gently twist or pull off the rear air inlet cover (filter).

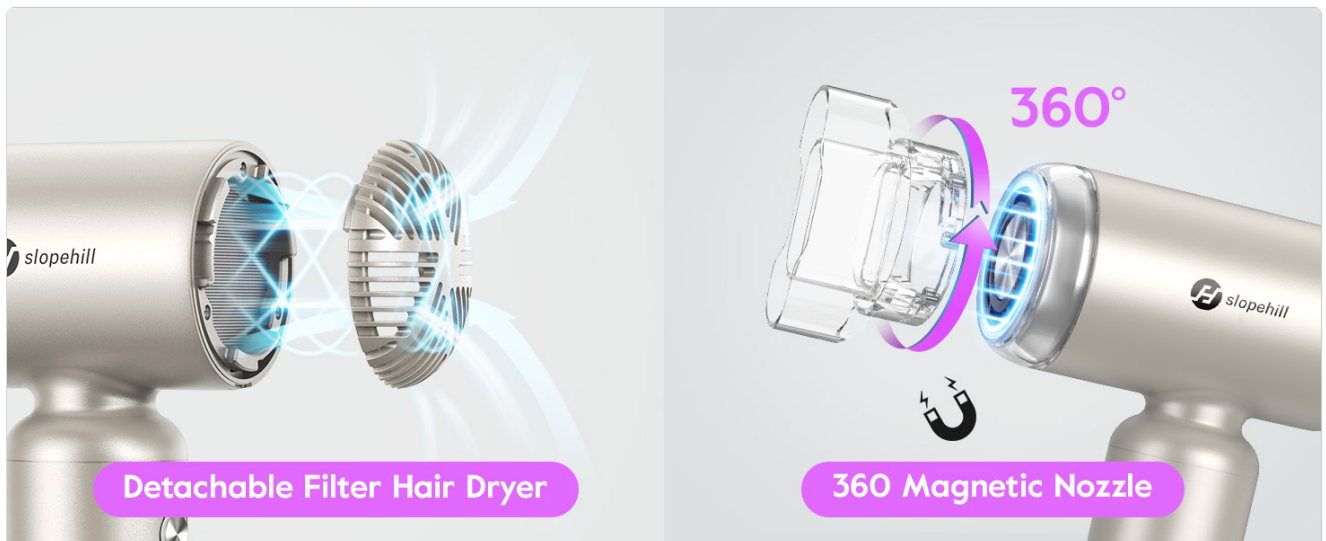


Image: The detachable air filter being removed from the back of the hair dryer.

3. Use a soft brush or cloth to remove any accumulated dust, lint, or hair from the filter screen.
4. Reattach the air inlet cover securely.
5. Clean the filter regularly, especially if you notice reduced airflow or increased noise.

General Cleaning

- Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the internal components.

Storage

- Store the hair dryer in a cool, dry place.
- Use the provided storage bag to protect the dryer and its accessories when traveling or not in use.
- Do not wrap the power cord tightly around the appliance, as this can damage the cord.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Hair dryer does not turn on.	No power supply; Power cord damaged; Appliance malfunction.	Check if the plug is securely inserted into the outlet. Try a different outlet. Inspect the power cord for damage. If damaged, discontinue use and contact customer support.
Low airflow or overheating.	Air inlet/outlet blocked; Dirty air filter; Overheat protection activated.	Unplug the dryer and allow it to cool down. Clean the air filter as described in the Maintenance section. Ensure air openings are not blocked during use.
Attachments do not stay on.	Improper attachment; Magnetic connection issues.	Ensure the attachment is correctly aligned with the magnetic ring on the dryer and pushed firmly into place.
Unusual noise during operation.	Foreign object in air intake; Motor issue.	Unplug and check the air inlet for any foreign objects. If the noise persists, discontinue use and contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	H5
Product Dimensions	3 x 5 x 8 inches
Item Weight	9.6 ounces
Brand	slopehill
Wattage	1500 watts
Voltage	100-240 volts (Dual Voltage)
Power Source	Corded Electric
Number of Speeds	2
Number of Heat Settings	4 (including Cool Air)

Feature	Detail
Maximum Temperature	210 °F
Special Features	Dual Voltage, Ionic Technology, Lightweight, Overheat Protection, Portable
Included Components	Concentrator, Diffuser, European Adapter, Storage Bag
Hair Type Compatibility	All, Curly, Damaged, Frizzy, Straight, Thick, Thin, Wavy
Material Type	Polycarbonate

WARRANTY AND CUSTOMER SUPPORT

Manufacturer Warranty: Return any undamaged slopehill travel high-speed hair dryer within 30 days of purchase for a refund. A 360-day quality warranty is provided, offering free replacements for any quality-related issues within this period. For further assistance, troubleshooting, or warranty claims, please contact slopehill customer support through your purchase platform or the official slopehill website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question