

[Manuals.plus](#) /

› [Leeshyah](#) /

› Leeshyah White Wooden Play Kitchen for Kids with Ice Maker, Sink, Stove and Storage Instruction Manual

Leeshyah wooden toy001

Leeshyah White Wooden Play Kitchen for Kids

MODEL: WOODEN TOY001

Introduction

This manual provides essential information for the assembly, operation, and maintenance of your Leeshyah White Wooden Play Kitchen. Please read these instructions carefully before assembly and retain for future reference. This play kitchen is designed to encourage imaginative play and skill development in children.

Little Chefs, Big Imaginations!

Cooking Up Smiles & Memories!



Image: The Leeshyah White Wooden Play Kitchen in use by a child, showcasing its various features like the sink, stove, and ice maker.

Safety Information

No specific safety warnings are applicable beyond general toy safety guidelines. Ensure all parts are securely fastened during assembly. Adult supervision is recommended during play. This product is intended for children aged 36 months and older.

What's in the Box

The Leeshyah White Wooden Play Kitchen includes the following components:

- Wooden kitchen structure with sink, faucet, stove, oven, microwave, and ice maker.
- 1 Pot with lid
- 1 Pan
- 2 Ice cubes
- 1 Salt Shaker

- 1 Pepper Shaker
- 3 Play Vegetables
- 3 Plates (various colors)
- 3 Hooks for utensils
- 1 Cup
- 2 Additional Cups
- 1 Spoon
- 1 Spatula
- 1 Knife
- Assembly hardware and instructions.

Complete Kitchen Play Set

Create magical moments of pretend cooking and serving!



Pot*1



Pan*1



Salt Shaker*1



Pepper Shaker*1



Vegetables*3



Ice *2



Cups *2



Hooks *3



Cup *1

Spoon*1
Spatula*1
knives*1



Image: A detailed view of the various accessories included with the play kitchen, such as pots, pans, utensils, and play food items.

Setup

Assembly of the Leeshyah White Wooden Play Kitchen is required. Please follow the detailed instructions provided in the separate assembly manual included with your product. Ensure all components are present before beginning

assembly.

- **Unpack:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all components against the parts list in the assembly manual.
- **Tools:** A screwdriver is typically required for assembly. A power drill with appropriate bits may assist with tightening screws, but exercise caution to avoid overtightening.
- **Assembly Steps:** Follow the step-by-step diagrams and instructions in the assembly manual. Pay close attention to the orientation of each piece.
- **Secure Fasteners:** Ensure all screws and fasteners are tightened securely to prevent wobbling and ensure stability. Do not overtighten.
- **Final Check:** Once assembled, check all doors, knobs, and movable parts to ensure they function correctly and safely.



Built with Child-Safe, Durable

Thoughtfully Designed for Little Hands Parent-Approved Safety & Stability



Nature Wood



Waterbased Paint



Smooth Edges

Image: The fully assembled Leeshyah White Wooden Play Kitchen, ready for use.

Operating Instructions

The Leeshyah Play Kitchen features several interactive elements for a realistic play experience:

- **Stove:** Turn the clickable knobs on the stove to simulate cooking. Place the pot or pan on the burners for pretend meal preparation.
- **Sink & Faucet:** The faucet can be turned, and the sink basin allows for pretend washing of dishes or play food.
- **Oven & Microwave:** Open the doors of the oven and microwave to place play food or accessories inside. The oven features a clear window.
- **Ice Maker:** Insert the included ice cubes into the dispenser. Press the lever to release an ice cube into the cup, simulating a real ice maker.
- **Storage:** Utilize the shelves, hooks, and lower cabinet for organizing play food, utensils, and other kitchen accessories.

Their First Kitchen, Their Biggest Adventure.

Inspired by Real Kitchens, Designed for Fun.



Image: Close-up views of the play kitchen's interactive features, including the sink, stove knobs, and ice maker.

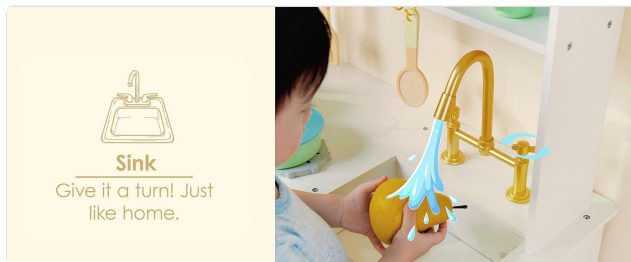


Image: A child interacting with the play kitchen's sink and faucet, demonstrating pretend washing.

Realistic Cooking Experience

Interactive Features for Realistic Play



Image: A child using the ice maker feature, dispensing a play ice cube into a cup.

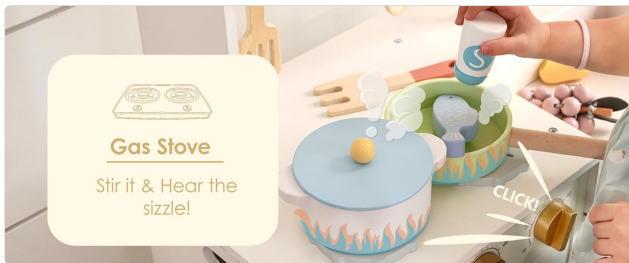


Image: A child engaging with the play kitchen's stove, placing a pot on the burner.

Your browser does not support the video tag.

Video: An official product video demonstrating the various features and play possibilities of the Leeshyah White Wooden Play Kitchen.

Maintenance

To ensure the longevity and cleanliness of your play kitchen, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the wood and finish.
- **Drying:** Ensure all parts are thoroughly dried after cleaning to prevent moisture damage to the wood.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Storage:** Store the play kitchen in a dry environment, away from direct sunlight or extreme temperature changes, to preserve the wood and paint.



Image: Illustrates the water-based, non-toxic paint used on the play kitchen.



Image: Highlights the smooth, child-safe edges of the wooden components.

Troubleshooting

If you encounter any issues with your Leeshyah Play Kitchen, consider the following:

- **Loose Parts:** If any doors, knobs, or other components become loose, gently retighten the corresponding screws. Avoid overtightening, which can strip the wood.
- **Assembly Difficulties:** If you experience difficulty during assembly, double-check the assembly manual to ensure all steps are followed correctly and parts are oriented properly. Some screws may require more effort to tighten if a pilot hole is not fully formed; a power drill on a low torque setting can assist.
- **Missing or Damaged Parts:** In the event of missing or damaged components upon arrival, please contact customer support for assistance.

Specifications

Feature	Detail
Brand	Leeshyah
Model Number	wooden toy001
Material Type	Wood
Color	White
Style	Modern
Theme	Kitchen
Item Dimensions (D x W x H)	12.1" x 33.9" x 16.4" (30.7cm x 86.1cm x 41.7cm)
Manufacturer Minimum Age	36 Months
Included Components	Wooden kitchen structure, various play accessories (pot, pan, utensils, food, etc.)

Product Dimensions



Image: A diagram illustrating the dimensions of the Leeshyah White Wooden Play Kitchen.

Warranty and Support

Leeshyah products are manufactured to high-quality standards. For information regarding product warranty, returns, or customer support, please refer to the contact details provided with your purchase or visit the official Leeshyah website. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question