

## Packard Bell Targa F14 PRO

# Packard Bell Targa F14 PRO LTE Tablet User Manual

Model: Targa F14 PRO

## 1. INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Packard Bell Targa F14 PRO LTE Tablet. Please read this guide thoroughly to ensure optimal performance and longevity of your device.



Image 1.1: Overview of the Packard Bell Targa F14 PRO LTE Tablet highlighting key features.

## 2. SETUP

### 2.1 Package Contents

- Packard Bell Targa F14 PRO LTE Tablet
- Folio Cover
- Charging Adapter
- USB Type-C Cable
- Quick Start Guide (this document)

2.2 Device Layout





Image 2.1: Side view of the tablet illustrating port locations, including USB Type-C, 3.5mm audio jack, and SIM/MicroSD card slot.

## 2.3 Initial Charging

Before first use, fully charge the tablet. Connect the USB Type-C cable to the tablet's charging port and the adapter to a power outlet. The battery indicator on the screen will show charging status.

## 2.4 Powering On/Off

- **To Power On:** Press and hold the Power button until the Packard Bell logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select 'Power off'.
- **To Restart:** Press and hold the Power button until the power options menu appears, then select 'Restart'.

## 2.5 SIM Card and MicroSD Card Installation

The Targa F14 PRO supports LTE connectivity and expandable storage via a MicroSD card.

1. Locate the SIM/MicroSD card tray on the side of the tablet.
2. Use the provided SIM ejector tool to open the tray.
3. Carefully place your Nano-SIM card(s) and/or MicroSD card into the designated slots on the tray. Ensure correct orientation.
4. Gently push the tray back into the tablet until it clicks into place.

## 2.6 Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring security options.

# 3. OPERATING THE TABLET

## 3.1 Touchscreen Gestures

- **Tap:** Select an item or open an application.
- **Tap & Hold:** Access contextual menus or move items.
- **Swipe:** Navigate through screens, scroll lists, or dismiss notifications.
- **Pinch-to-Zoom:** Enlarge or reduce content size.

## 3.2 Android 15 Overview

Your Targa F14 PRO runs on Android 15, offering a user-friendly interface. The home screen provides quick

access to apps and widgets. Swipe down from the top for notifications and quick settings.

### 3.3 App Management

- **Installing Apps:** Download applications from the Google Play Store.
- **Uninstalling Apps:** Tap and hold an app icon, then drag it to the 'Uninstall' option, or go to Settings > Apps.
- **Switching Apps:** Tap the recent apps button (usually a square icon) to view and switch between open applications.

### 3.4 Camera Usage

The tablet features a 13MP rear camera and a 5MP front camera for photos and video calls.

1. Open the Camera application.
2. Select between front and rear cameras using the toggle icon.
3. Tap the shutter button to take a photo or start/stop video recording.



Image 3.1: Detail of the AI Dual Camera system on the tablet's rear.

### 3.5 Connectivity

- **Wi-Fi:** Connect to wireless networks via Settings > Network & internet > Wi-Fi. Supports 802.11ac.
- **LTE:** Utilize cellular data for internet access when Wi-Fi is unavailable. Ensure a valid SIM card is

installed and mobile data is enabled in Settings.

- **Bluetooth:** Pair with Bluetooth devices like headphones or speakers via Settings > Connected devices > Bluetooth. Supports Bluetooth 5.

## 4. MAINTENANCE

---

### 4.1 Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive materials or harsh chemicals. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

### 4.2 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to Settings > System > System update.

### 4.3 Battery Care

The tablet is equipped with a 10000 mAh battery. To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery fully discharge frequently.
- Use the original charger and cable.
- Adjust screen brightness and disable unused features (Wi-Fi, Bluetooth, GPS) when not needed.

### 4.4 Storage Management

Your tablet has 256GB of eMMC storage. To manage storage effectively:

- Regularly delete unnecessary files and apps.
- Move large files to a MicroSD card (up to supported capacity).
- Utilize cloud storage services.

## 5. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your tablet.

### 5.1 Device Not Powering On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Press and hold the Power button for at least 10-15 seconds to force a restart.

### 5.2 Screen Unresponsive

- Restart the tablet.
- Ensure the screen is clean and free of debris or moisture.

### 5.3 Wi-Fi/LTE Connection Issues

- **Wi-Fi:** Restart your Wi-Fi router. Forget the network on your tablet and reconnect. Ensure you are within range.

- **LTE:** Check if your SIM card is properly inserted and activated. Verify mobile data is enabled in settings. Ensure you have network coverage.

### 5.4 Slow Performance

- Close unused applications running in the background.
- Clear cache data for apps.
- Ensure sufficient storage space is available.
- Restart the tablet periodically.

## 6. SPECIFICATIONS

Key technical specifications for the Packard Bell Targa F14 PRO LTE Tablet:

| Feature            | Specification                                 |
|--------------------|-----------------------------------------------|
| Brand              | Packard Bell                                  |
| Model Name         | Targa F14 PRO                                 |
| Operating System   | Android 15                                    |
| Processor Brand    | MediaTek                                      |
| Processor Speed    | 2 GHz                                         |
| Screen Size        | 14.1 Inches                                   |
| Screen Resolution  | 1200 x 1920 Pixels (Full HD IPS Display)      |
| RAM Memory         | 8 GB                                          |
| Storage Capacity   | 256 GB eMMC                                   |
| Rear Camera        | 13 MP                                         |
| Front Camera       | 5 MP                                          |
| Battery            | 10000 mAh                                     |
| Connectivity       | Bluetooth 5, Cellular (LTE), Wi-Fi (802.11ac) |
| Hardware Interface | 3.5mm Audio, MicroSD, SIM Card, USB Type C    |
| Item Weight        | 1.13 Kilograms                                |
| Special Feature    | Cellular Connectivity                         |

## 7. WARRANTY AND SUPPORT

### 7.1 Product Warranty

The Packard Bell Targa F14 PRO LTE Tablet comes with a **1 Year Warranty** from the date of purchase.

Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.

## 7.2 Technical Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Packard Bell support:

- **Email Support:** [support@packard-bell.co.za](mailto:support@packard-bell.co.za)
- **Website:** [www.packard-bell.co.za](http://www.packard-bell.co.za)
- **Packard Bell Store:** [Visit the Packard Bell Store on Amazon](#)