



[Manuals.plus](#) /

> [Garvee](#) /

> Garvee 70-inch Farmhouse TV Stand Instruction Manual for Model 347WEM5520250804

## Garvee 347WEM5520250804

# Garvee 70-inch Farmhouse TV Stand Instruction Manual

Model: 347WEM5520250804

[Introduction](#)

[Safety Information](#)

[Package Contents](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. INTRODUCTION

---

Thank you for choosing the Garvee 70-inch Farmhouse TV Stand. This entertainment center is designed to accommodate TVs up to 75 inches and features a blend of mid-century modern and farmhouse aesthetics. It includes sliding barn doors for concealed storage and adjustable shelves for versatile organization. This manual provides essential information for safe assembly, operation, and maintenance of your new TV stand.



*Image: The Garvee 70-inch Farmhouse TV Stand, white with a coffee-colored top, featuring sliding barn doors, shown in a living room with a television placed on it.*

## 2. SAFETY INFORMATION

---

**Please read all safety instructions carefully before assembly and use.**

- **Caution:** Be cautious of sharp edges and corners when handling the product components during unpacking and assembly.
- Ensure all connections are securely fastened before placing any items on the TV stand, especially a television.
- Do not exceed the maximum weight capacity for the top surface or shelves. Refer to the Specifications section for details.
- The TV stand features chamfered corners to reduce the risk of accidental bumps. However, always exercise care, especially in households with children.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Assemble the unit on a soft, clean surface to prevent scratches.

## 3. PACKAGE CONTENTS

---

Before beginning assembly, verify that all parts and hardware are present. Each component is clearly labeled for easy identification.

The package includes:

- All necessary wooden panels and structural components.
- Hardware kit (screws, dowels, cam locks, etc.).
- Sliding barn door hardware (tracks, rollers, handles).
- Adjustable shelf pins.
- Built-in AC sockets and USB ports (pre-installed or requiring simple connection).
- Detailed, step-by-step assembly instructions.

If any parts are missing or damaged, please contact Garvee customer support immediately.

## 4. SETUP AND ASSEMBLY

---

Assembly of the Garvee TV Stand is designed to be straightforward with the included detailed instructions and labeled parts. It is recommended to have at least two people for assembly.

1. **Unpack and Organize:** Carefully unpack all components and lay them out on a clean, soft surface (e.g., a blanket or carpet) to prevent scratches. Group similar parts and hardware together.
2. **Review Instructions:** Read through the entire assembly manual provided in the package before starting. Familiarize yourself with the steps and diagrams.
3. **Assemble the Base:** Begin by assembling the base frame of the TV stand according to the instructions. Ensure all connections are snug but do not overtighten screws initially.
4. **Attach Side Panels and Shelves:** Secure the side panels and fixed central shelves. Pay attention to the orientation of each panel.
5. **Install Sliding Door Tracks:** Mount the top and bottom tracks for the sliding barn doors. Ensure they are level and properly aligned.
6. **Assemble and Hang Doors:** Assemble the barn doors and attach the rollers. Carefully hang the doors onto the tracks. Adjust as needed for smooth operation.
7. **Insert Adjustable Shelves:** Place the adjustable shelf pins into the desired height positions within the side compartments, then insert the adjustable shelves.
8. **Connect Power Unit (if applicable):** If your model includes built-in power outlets, follow the instructions to connect the power cord. Ensure it is plugged into a grounded outlet.
9. **Final Tightening:** Once the entire unit is assembled, go back and gently tighten all screws and fasteners to ensure stability. Do not overtighten.



**Sliding Bin  
Door Design**



**Built-in 2 AC Sockets  
2 USB Ports**



**Position  
Adjustable Shelf**

*Image: A close-up showing the functional elements of the TV stand: the sliding barn door mechanism, a built-in power strip with AC outlets and USB ports on the top surface, and the three-position adjustable shelves within the side compartments.*

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Sliding Barn Doors

The Garvee TV Stand features two sliding barn doors that move along a top track. These doors allow you to conceal or reveal the central shelves or side storage compartments as desired.

- To open or close a door, gently grasp the handle and slide it horizontally along the track.
- Ensure the track is clear of obstructions for smooth movement.

### 5.2 Adjustable Shelves

The storage compartments on both sides of the TV stand are equipped with adjustable shelves, offering three different height options.

1. **To Adjust Shelf Height:** Remove any items from the shelf.
2. Carefully lift the shelf out of its current position.
3. Relocate the four shelf pins to the desired set of holes at the new height.
4. Place the shelf back onto the pins, ensuring it is level and secure.

### 5.3 Built-in Power Outlets (if applicable)

Some models include a built-in power strip with AC sockets and USB ports on the top surface for convenient device charging and power access.

- Ensure the TV stand's main power cord is securely plugged into a grounded wall outlet.
- Use the AC outlets for standard electronic devices.
- Use the USB ports to charge compatible USB-powered devices.
- Do not overload the power strip. Refer to the power unit's specifications for maximum wattage.

## 6. MAINTENANCE

---

### 6.1 Cleaning

- To clean the surface of the TV stand, use a dry, soft cloth.
- Avoid using abrasive cleaners, harsh chemicals, or excessive moisture, as these can damage the finish.
- The surface is finished with a durable coating designed to protect against scratches and stains.

### 6.2 General Care

- Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary, but do not overtighten.
- Keep the TV stand away from direct sunlight and extreme temperature changes to prevent warping or fading.
- Avoid placing hot items directly on the surface without protective coasters.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your Garvee TV Stand, refer to the following common problems and solutions:


Problem	Possible Cause	Solution
<b>Doors do not slide smoothly.</b>	Tracks are obstructed, misaligned, or rollers are dirty.	Check tracks for debris. Ensure tracks are level and securely installed. Clean rollers if necessary.
<b>Stand feels wobbly after assembly.</b>	Screws or fasteners are not fully tightened. Uneven floor surface.	Go back and tighten all assembly hardware. Ensure the stand is on a level surface; use shims if needed.
<b>Missing parts or damaged components.</b>	Packaging error or shipping damage.	Do not proceed with assembly. Contact Garvee customer support with your model number and a description of the issue.

Problem	Possible Cause	Solution
<b>Power outlets not working.</b>	Power cord not plugged in, wall outlet issue, or power strip overload.	Ensure the TV stand's power cord is fully plugged into a working, grounded wall outlet. Check the wall outlet with another device. Reduce the number of devices plugged into the power strip.

## 8. SPECIFICATIONS

The following are the technical specifications for the Garvee 70-inch Farmhouse TV Stand (Model 347WEM5520250804):

# Product Size

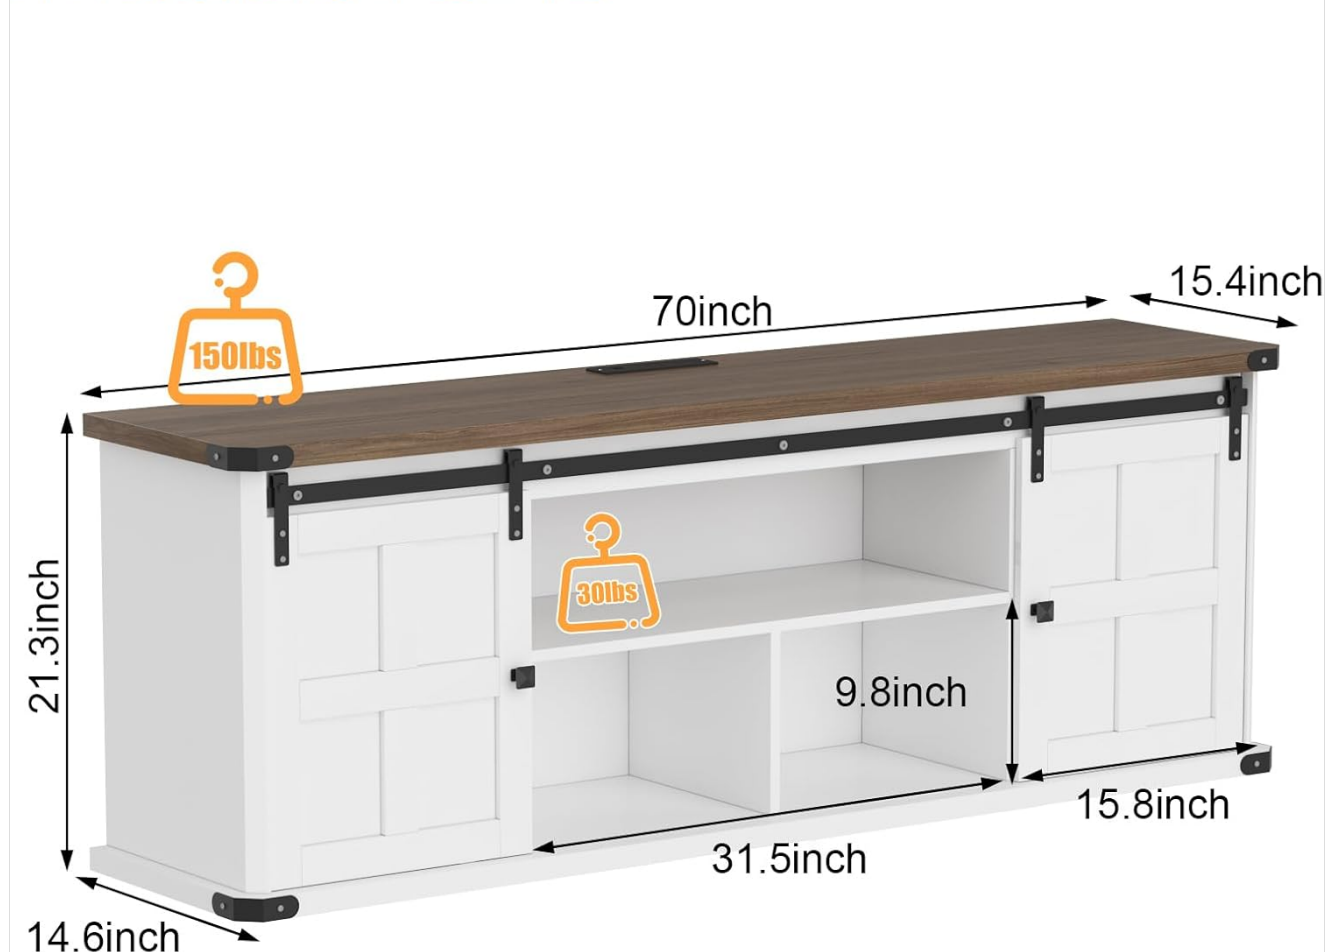

*Image: A technical diagram illustrating the overall dimensions of the TV stand: 70 inches (length), 15.4 inches (width/depth), and 21.3 inches (height). It also indicates a maximum weight capacity of 150 lbs for the top surface and 30 lbs for the central shelves.*

**Model Number:** 347WEM5520250804

**Brand:** Garvee

**Material:** MDF Board (Wood)

**Color:** White + Coffee

**Product Dimensions (L x W x H):** 70 x 15.4 x 21.3 inches

**Item Weight:** 103 pounds

**Number of Shelves:** 3 (1 fixed, 2 adjustable)


**TV Size Compatibility:** Up to 75 inches

**Special Features:** Sliding barn doors, adjustable shelves, chamfered corners, durable coating, built-in AC sockets and USB ports (model dependent).

**Care Instructions:** Wipe with Dry Cloth

**Assembly:** Included instructions, easy assembly.

**GTIN/UPC:** 199641473950

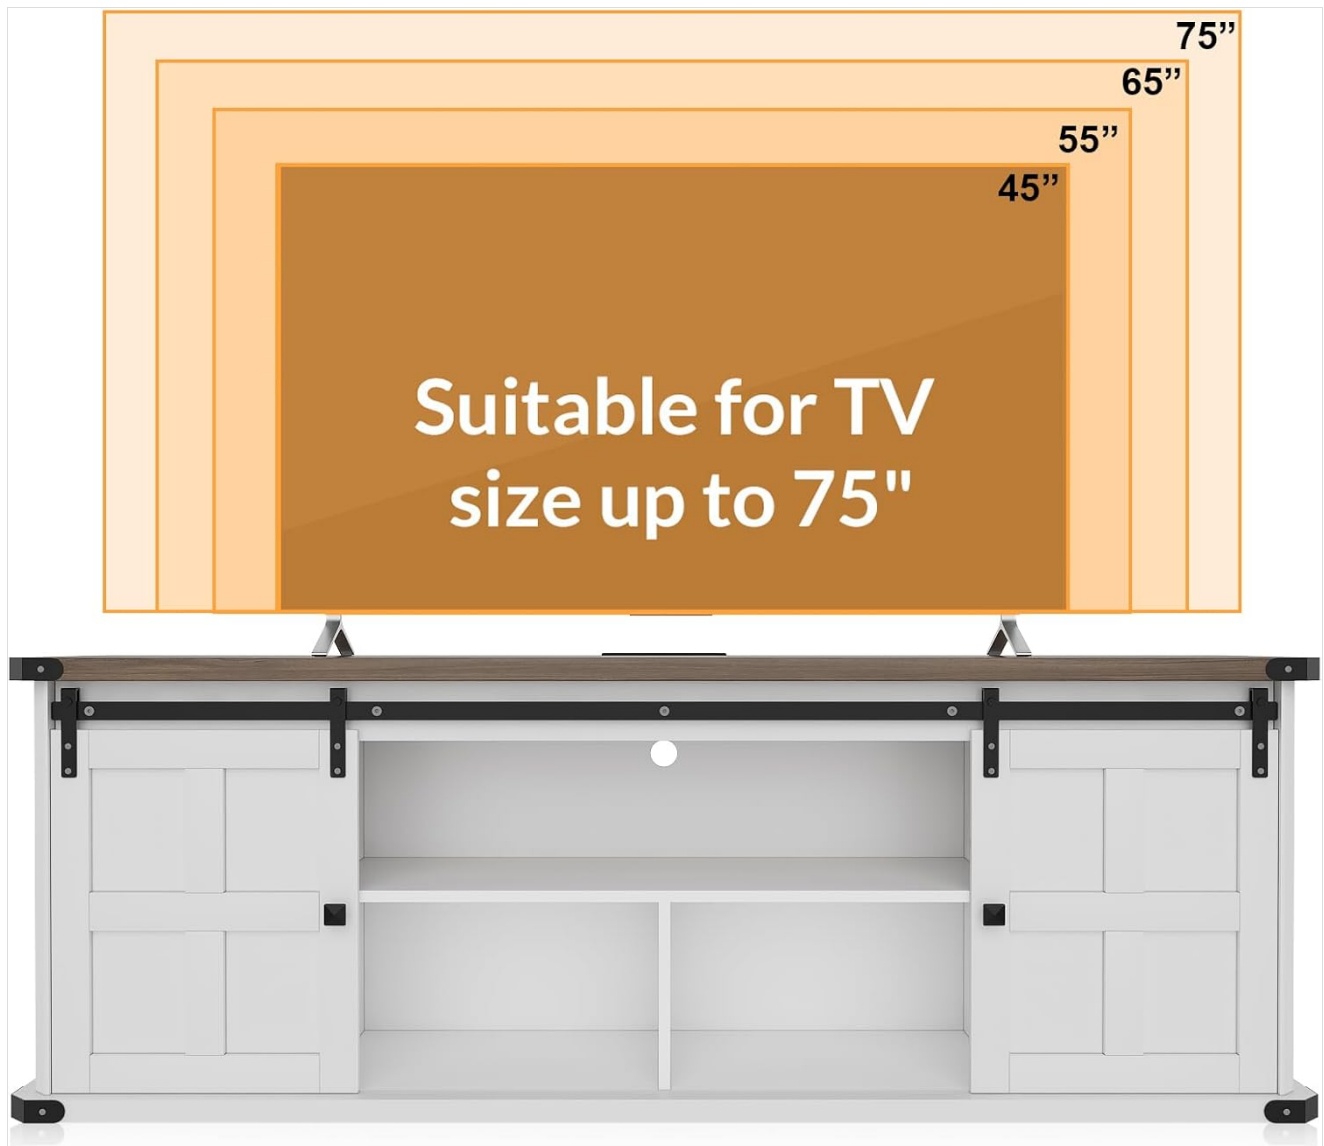

*Image: An illustration demonstrating that the TV stand is suitable for various television sizes, specifically up to 75 inches, with examples of 45, 55, 65, and 75-inch TVs.*

## 9. WARRANTY & SUPPORT

---

Garvee stands behind the quality of its products. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims.

For customer support, missing parts, assembly assistance, or any other inquiries, please contact Garvee customer service through the retailer where the product was purchased or visit the official Garvee store online.

**Manufacturer:** Garvee

**Date First Available:** August 4, 2025

You can find more information and contact details by visiting the [Garvee Store on Amazon](#).

© 2025 Garvee. All rights reserved.

This manual is for informational purposes only. Garvee reserves the right to make changes to products without prior notice.