

Bts-2023

Portable Bluetooth Speaker User Manual

Model: Bts-2023 | Brand: Generic

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Portable Bluetooth Speaker. Please read this manual thoroughly before using the device and retain it for future reference.

WHAT'S IN THE BOX

- Portable Bluetooth Speaker
- USB Charging Cable
- Audio Cable (AUX)
- User Manual

PRODUCT OVERVIEW



Figure 1: Portable Bluetooth Speaker. This image displays the cylindrical portable Bluetooth speaker. It features a black casing with a translucent body that illuminates with a gradient of colors, from red/orange at the top to blue/purple at the bottom, indicating LED lighting.

The top panel shows control buttons and ports. A black carrying strap is attached to the side.

The Portable Bluetooth Speaker is designed for wireless audio streaming, offering clear and balanced sound. Its compact and lightweight design makes it ideal for both indoor and outdoor use. The device features intuitive controls and a built-in rechargeable battery for extended playback.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off when fully charged. Charging time is approximately 3 hours.

2. Powering On/Off

Press and hold the **Power Button** (usually marked with a power symbol) for 3 seconds to turn the speaker on or off. A sound prompt will indicate the power status.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode. A blinking LED light typically indicates pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "**Bt Speaker Pro**" from the list of found devices.
4. Once paired, the speaker will emit a confirmation sound, and the LED indicator will become solid.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range.

OPERATING INSTRUCTIONS

Basic Functions

- **Play/Pause:** Press the **Play/Pause Button** once to play or pause audio.
- **Volume Up/Down:** Press the **Volume +** button to increase volume, and **Volume -** button to decrease volume. Hold for continuous adjustment.
- **Next/Previous Track:** Press and hold the **Volume +** button for next track, and **Volume -** button for previous track. (Note: Some models may use a short press for track change and long press for volume).
- **Answering/Ending Calls:** When a call comes in, press the **Play/Pause Button** to answer. Press again to end the call.
- **Rejecting Calls:** Press and hold the **Play/Pause Button** for 2 seconds to reject an incoming call.
- **Mode Button (M):** Press the **Mode Button** to switch between Bluetooth, AUX, and other available modes (if applicable).

AUX Mode

Connect one end of the supplied audio cable to the speaker's AUX input and the other end to the audio output of your device. The speaker will automatically switch to AUX mode or require a press of the Mode button.

MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the speaker to extreme temperatures, direct sunlight, or high humidity.

- Do not immerse the speaker in water as it is not waterproof.
- Store the speaker in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode. Turn device Bluetooth on/off. Move device closer (within 33 feet). Clear previous pairings on device.
No sound or distorted sound.	Volume too low; incorrect mode; poor connection.	Increase volume on speaker and device. Ensure correct mode (Bluetooth/AUX). Re-pair Bluetooth or check AUX cable connection.
Short battery life.	Battery not fully charged; high volume usage.	Ensure full charge. Reduce volume for longer playback.

SPECIFICATIONS

Model Name: Bt Speaker Pro

Model Number: Bts-2023

Brand: Generic

Connectivity Technology: Bluetooth, Wireless

Bluetooth Version: 5.0

Wireless Communication Technology: Bluetooth, NFC

Maximum Range: 33 Feet (10 meters)

Speaker Type: Portable Bluetooth

Audio Output Mode: Stereo

Speaker Maximum Output Power: 20 Watts

Frequency Response: 20 Hz

Signal-to-Noise Ratio: 80 dB

Impedance: 4 Ohm

Power Source: Battery Powered

Charging Time: 3 Hours

Product Dimensions: 3.5"D x 4"W x 3"H

Item Weight: 0.8 Pounds (12.8 ounces)

Material: Metal, Plastic

Color: Black

Control Method: Push Button, Touch

Compatible Devices: Computers, Laptop, Smartphone, Tablet

Indoor/Outdoor Usage: Indoor, Outdoor

Is Waterproof: False (Not Water Resistant)

WARRANTY AND SUPPORT

Warranty Information

This product comes with a **Limited Manufacturer Warranty**. Please refer to the warranty card included in your package for specific terms and conditions. This warranty typically covers defects in materials and workmanship under normal use.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact the retailer or manufacturer's customer support. Keep your purchase receipt as proof of purchase.