

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Eastsora](#) /

› [Eastsora Heated Blanket Electric Throw \(Model DRT-GGQ-F50X60\) User Manual](#)

Eastsora DRT-GGQ-F50X60

Eastsora Heated Blanket Electric Throw User Manual

Model: DRT-GGQ-F50X60

Brand: Eastsora

1. INTRODUCTION

Thank you for choosing the Eastsora Heated Blanket Electric Throw. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new heated blanket. Please read this manual thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

Your safety is paramount. This heated blanket has undergone rigorous testing and obtained FCC and ETL certifications, ensuring compliance with safety standards. It features a low electromagnetic radiation design and overheat protection for reliable warmth.

General Safety Precautions:

- Do not use with infants, children, incapacitated persons, or individuals insensitive to heat.
- Do not use if the blanket is wet.
- Avoid folding, bunching, or creasing the blanket while in use, as this may cause overheating.
- Always unplug the blanket when not in use.
- Do not insert pins or other metallic objects into the blanket.
- Keep pets away from the blanket to prevent damage to heating elements.
- Regularly inspect the blanket and power cord for any signs of wear or damage. If damaged, discontinue use immediately.

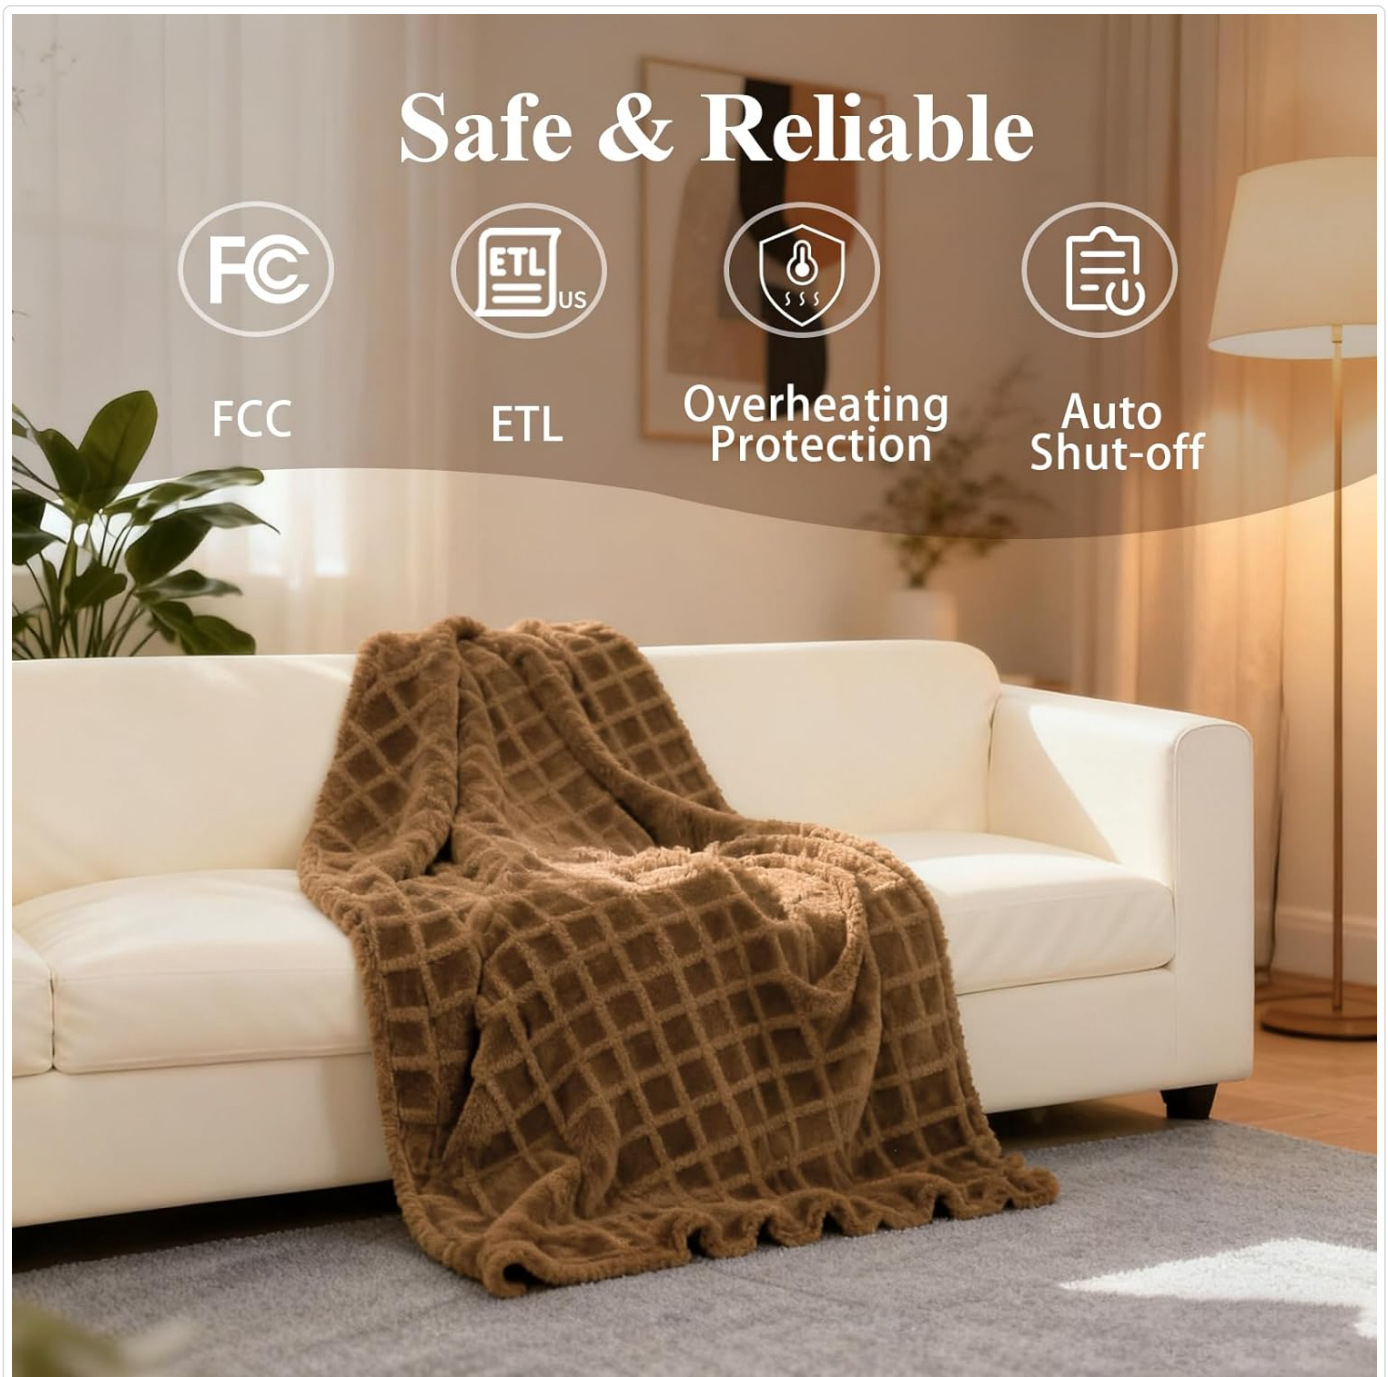


Image: Safety features including FCC, ETL certification, overheat protection, and auto-shutoff.

3. SETUP

Unpacking:

1. Carefully remove the heated blanket from its packaging.
2. Unfold the blanket completely, ensuring there are no creases or folds.
3. Locate the detachable controller and power cord.

Connecting the Controller:

- Ensure the blanket is completely dry before connecting the controller.
- Plug the controller cable firmly into the connector on the blanket. Ensure a secure connection.
- Plug the power cord into a standard 120V AC electrical outlet.

Multifunction Digital Control



Image: The multi-function digital controller for the heated blanket.

4. OPERATING INSTRUCTIONS

The heated blanket features a multi-function controller with an LED display for easy operation.

Power On/Off:

- Press the 'ON/OFF' button to turn the blanket on or off.

Adjusting Heat Levels:

- The blanket offers 12 adjustable heat levels.
- Use the '+' and '-' buttons to increase or decrease the heat setting. The current level will be displayed on the LED screen.

Setting the Timer:

- The timer function allows you to set an operating duration from 1 to 12 hours.
- Press the 'TIMER/HEAT' button to cycle through the available timer settings.

- Once the selected time elapses, the blanket will automatically shut off. This auto-shutoff feature enhances safety and conserves energy.

Preheat Function:

- Press the 'PREHEAT' button for a quick warm-up.



Image: Illustration of 12 adjustable heating levels for personalized comfort.

Video: A brief demonstration of the heated blanket in white, highlighting its features and soft texture.

5. MAINTENANCE AND CARE

The Eastsora Heated Blanket is designed for easy care. Follow these instructions to ensure its longevity and performance.

Washing Instructions:

1. Always disconnect the controller from the blanket before washing.
2. Ensure the blanket has cooled down completely before placing it in the washing machine.

3. Machine wash on a gentle or delicate cycle using cold water (100°F / 30°C maximum).
4. Do not bleach, iron, or dry clean the blanket.

Drying Instructions:

- Tumble dry on low heat or air dry. Avoid high heat settings.
- Ensure the blanket is completely dry before reconnecting the controller or storing.



Image: Machine washable instructions, emphasizing detachment of the control panel and cold water wash.

6. TROUBLESHOOTING

If you experience issues with your heated blanket, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blanket not heating	Power cord not securely plugged in; Controller not connected properly; Outlet not functioning.	Check all connections. Ensure the power outlet is active.
Blanket is too hot/cold	Incorrect heat setting selected.	Adjust heat level using the '+' or '-' buttons on the controller.
Blanket automatically turns off	Timer function activated; Overheat protection engaged.	If timer is set, it will turn off after the set duration. If due to overheat protection, unplug, let cool, and check for folds before restarting.
Controller display not working	Power issue; Controller malfunction.	Ensure power is connected. If problem persists, contact customer support.

7. SPECIFICATIONS

-
- **Model:** DRT-GGQ-F50X60
 - **Dimensions:** 50"L x 60"W
 - **Material:** Double-faced Velvet Fleece (260+200gsm flannel fleece)
 - **Heat Levels:** 12 adjustable settings
 - **Timer Settings:** 1-12 hours with auto-shutoff
 - **Safety Features:** Overheat Protection, FCC & ETL Certified, Low Electromagnetic Radiation
 - **Care:** Machine Washable (detachable controller)
 - **Power:** 120V AC

8. CUSTOMER SUPPORT

For any questions, concerns, or warranty claims, please contact Eastsora customer support through the retailer's platform or visit the official Eastsora store on Amazon: [Eastsora Store](#).