

[Manuals.plus](#) /

› [Lehoo Castle](#) /

› Lehoo Castle Unicorn Sit and Spin Toy Instruction Manual

Lehoo Castle SNS-001-U

Lehoo Castle Unicorn Sit and Spin Toy Instruction Manual

Model: SNS-001-U

1. INTRODUCTION

The Lehoo Castle Unicorn Sit and Spin Toy is designed to provide engaging play for toddlers, promoting balance, coordination, and motor skills. This toy features a unicorn theme, integrated LED lights, and music, offering a multi-sensory experience. It is suitable for indoor and outdoor use.



Image 1: Fully assembled Lehou Castle Unicorn Sit and Spin Toy.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Always supervise children during play.
- Ensure all parts are securely assembled before use.
- Do not use on uneven or slippery surfaces.
- Keep away from stairs, pools, and other hazards.
- Maximum weight capacity: 130 lbs.

3. PACKAGE CONTENTS

Verify that all components are present before assembly:

- 1 x Spinning Chair Base

- 1 x Central Post
- 1 x Handle/Top Unit with Unicorn Figure
- Screws for assembly

4. SETUP (ASSEMBLY)

Assembly is quick and easy. Two AA batteries (not included) are required for the lights and music feature.

1. **Connect the Top Unit:** Align the central post with the opening on the underside of the handle/top unit. Snap them together securely.
2. **Secure the Top Unit:** Use the provided small screws to tighten and secure the central post to the handle/top unit.
3. **Connect the Base:** Insert the bottom of the central post into the designated hole on the spinning chair base.
4. **Tighten the Base:** Use the large screw to firmly secure the central post to the base. Ensure all connections are tight before use.
5. **Install Batteries:** Locate the battery compartment on the underside of the handle/top unit. Unscrew the cover, insert 2 AA batteries (observing polarity), and replace the cover, securing it with the screw.



Image 2: Visual guide for the 4-step assembly process.



Image 3: Detail of the secure-grip handle and smooth-rotation base.

5. OPERATING INSTRUCTIONS

Once assembled and batteries are installed, the toy is ready for use.

5.1 Spinning Operation

- Have the child sit comfortably on the spinning base, holding onto the central handle.
- To spin, the child can use their feet to push off the ground or twist the handle to generate momentum.
- Encourage the child to control their speed and direction by adjusting their body movement and handle twisting.

5.2 Lights and Music Modes

The toy features three adjustable modes for lights and music, controlled by a simple on/off switch located on the handle unit:

- **Mode 1:** No Light/Music (Off)
- **Mode 2:** Lights Only

- **Mode 3:** Lights & Music



Image 4: Control switch for selecting light and music modes.

MUSIC & LIGHT SHOW IN THE DARK

2 Color Flashing Led Light & 3
Different Music



Image 5: The toy's light and music feature in action.

5.3 Official Product Video

Your browser does not support the video tag.

Video 1: An official product video demonstrating the light-up and musical features of the Lehou Castle Unicorn Sit and Spin Toy.

6. MAINTENANCE

- **Cleaning:** Wipe the toy with a damp cloth and mild soap. Do not immerse in water.
- **Storage:** Store in a cool, dry place away from direct sunlight when not in use.
- **Battery Replacement:** Replace batteries when lights dim or music distorts. Always use new AA batteries and dispose of old batteries responsibly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights/Music not working	Batteries are dead or incorrectly installed.	Check battery polarity and replace with new AA batteries. Ensure the mode switch is not in the 'Off' position.
Handle feels loose or detaches	Screws are not tightened sufficiently during assembly.	Disassemble the handle and central post, then reassemble, ensuring all screws are tightened firmly.
Toy does not spin smoothly	Debris under the base or on the spinning mechanism.	Inspect the underside of the base and the floor for any obstructions. Clean if necessary.

8. SPECIFICATIONS

- **Brand:** Lehoo Castle
- **Model Number:** SNS-001-U
- **Material:** ABS Plastic
- **Color:** Pink
- **Theme:** Unicorn
- **Item Dimensions (L x W x H):** 17.91 x 17.91 x 4.45 inches
- **Diameter:** 17.5 inches
- **Maximum Weight Capacity:** 130 lbs
- **Recommended Age:** 1.5 - 5 years (Manufacturer Maximum Age: 48 months)
- **Power Source:** Battery (2 x AA batteries, not included)
- **Assembly Required:** Yes
- **Educational Objective:** Develop balance, coordination, motor skills, and concentration; stimulate sensory development.

LARGE SIZE & CAPACITY



Image 6: Product dimensions and capacity details.

9. WARRANTY AND SUPPORT

Specific warranty details are not provided in the product information. For any product inquiries, technical support, or warranty claims, please contact Lehou Castle customer service through the retailer where the product was purchased. You may also visit the [Lehou Castle Store on Amazon](#) for additional information and contact options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question