

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CAPOXO](#) /

› [CAPOXO A18 Bluetooth Over-Ear Headphones with ANC and ENC Microphone User Manual](#)

CAPOXO A18

CAPOXO A18 Bluetooth Over-Ear Headphones User Manual

Model: A18

1. INTRODUCTION

Thank you for choosing the CAPOXO A18 Bluetooth Over-Ear Headphones. This manual provides essential information for setting up, operating, and maintaining your headphones. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

- CAPOXO A18 Bluetooth Over-Ear Headphones
- USB-C Charging Cable
- 3.5mm Audio Cable
- User Manual

3. PRODUCT OVERVIEW

The CAPOXO A18 headphones are designed for comfort and high-quality audio, featuring Active Noise Cancellation (ANC) and an Environmental Noise Cancelling (ENC) microphone. The foldable design enhances portability.



Image: CAPOXO A18 Bluetooth Over-Ear Headphones, showcasing the over-ear design, adjustable headband, and earcups. Visible markings include Model No.: A18, Input: 5V 1A, FCC ID: 2AWUL-A18, Product Name: Wireless Headset, Battery Capacity: 3.7V 750mAh, 2.77Wh, Made in China.

Controls and Indicators (Typical Layout)

- **Power/Multi-function Button:** Used for power on/off, play/pause, answer/end calls.
- **Volume Up/Next Track Button:** Short press for volume up, long press for next track.
- **Volume Down/Previous Track Button:** Short press for volume down, long press for previous track.
- **ANC Button:** Activates/deactivates Active Noise Cancellation or Transparency Mode.

- **USB-C Charging Port:** For charging the headphones.
- **3.5mm Audio Jack:** For wired connection.
- **LED Indicator:** Displays power, charging, and Bluetooth status.
- **Microphone:** For voice calls and ENC functionality.

4. SETUP

4.1 Charging the Headphones

1. Connect the USB-C charging cable to the charging port on the headphones.
2. Connect the other end of the cable to a USB power adapter (5V/1A recommended) or a computer's USB port.
3. The LED indicator will show charging status (e.g., red for charging, blue/green for fully charged).
4. A full charge takes approximately 2 hours.

4.2 Power On/Off

- **To Power On:** Press and hold the Power/Multi-function Button for approximately 3 seconds until the LED indicator flashes.
- **To Power Off:** Press and hold the Power/Multi-function Button for approximately 3 seconds until the LED indicator turns off.

4.3 Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the Power/Multi-function Button for approximately 5-7 seconds until the LED indicator flashes red and blue alternately, indicating pairing mode.
3. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "CAPOXO A18" from the list of devices.
5. Once connected, the LED indicator will flash blue slowly or remain solid blue.

4.4 Wired Connection

To use the headphones in wired mode, connect one end of the 3.5mm audio cable to the headphone's audio jack and the other end to your audio source. The headphones can be used in wired mode even when the battery is depleted, though ANC functionality may require battery power.

5. OPERATING INSTRUCTIONS

5.1 Active Noise Cancellation (ANC) and Transparency Mode

- **To Activate ANC:** Press the ANC Button once. The LED indicator for ANC will illuminate.
- **To Activate Transparency Mode:** Press the ANC Button a second time. This mode allows ambient sounds to pass through.
- **To Deactivate ANC/Transparency:** Press the ANC Button a third time. The ANC LED indicator will turn off.

5.2 Music Playback

- **Play/Pause:** Short press the Power/Multi-function Button.
- **Next Track:** Long press the Volume Up Button.
- **Previous Track:** Long press the Volume Down Button.

5.3 Call Functions

- **Answer/End Call:** Short press the Power/Multi-function Button.
- **Reject Call:** Long press the Power/Multi-function Button.
- **Redial Last Number:** Double-press the Power/Multi-function Button.

5.4 Volume Control

- **Increase Volume:** Short press the Volume Up Button.
- **Decrease Volume:** Short press the Volume Down Button.

6. MAINTENANCE

- Clean the headphones regularly with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Avoid exposing the headphones to extreme temperatures, humidity, or direct sunlight.
- The headphones have an IPX4 splash resistance rating, meaning they are protected from splashing water from any direction. Do not submerge them in water.
- When not in use, store the headphones in a cool, dry place, preferably in a protective case.

7. TROUBLESHOOTING

Problem	Possible Solution
Headphones do not power on	Ensure the headphones are charged. Connect to a power source and try again.
Cannot pair via Bluetooth	Ensure headphones are in pairing mode (LED flashing red/blue). Turn off and on your device's Bluetooth. Try resetting the headphones by pressing and holding the Volume Up (+) and Volume Down (-) buttons simultaneously for 5 seconds.
No sound or low volume	Check headphone and device volume levels. Ensure headphones are properly connected (Bluetooth or wired). Try restarting both devices.
ANC not working effectively	Ensure ANC is activated (ANC LED on). Adjust headphone fit to ensure a good seal around your ears.
Microphone issues during calls	Ensure the microphone is not obstructed. Check device settings to confirm the headphone microphone is selected.

8. SPECIFICATIONS

- **Model:** A18
- **Brand:** CAPOXO
- **Connectivity:** Bluetooth 5.4, 3.5mm Audio Jack
- **Special Features:** Hybrid Active Noise Cancellation (up to -35dB), ENC Microphone (5 integrated mics), Multiple Listening Modes, Foldable Design, IPX4 Splash Resistance
- **Driver Size:** 40mm
- **Battery Life:** Up to 100 hours (ANC off), 50 hours (ANC on)
- **Charging Time:** Approximately 2 hours via USB-C
- **Battery Capacity:** 3.7V, 750mAh, 2.77Wh

- **Input:** 5V 1A
- **Weight:** 256 Grams
- **Control Type:** Button Control
- **Included Components:** User Manual, USB-C Charging Cable, 3.5mm Audio Cable

9. SAFETY INFORMATION


- Do not disassemble, repair, or modify the headphones. This may cause fire, electronic breakdown, or damage to the product.
- Keep the headphones away from water, moisture, and other liquids.
- Avoid prolonged exposure to high volume levels to prevent hearing damage.
- Do not use the headphones in situations where inability to hear ambient sounds could be dangerous (e.g., driving, cycling, walking in traffic).
- Dispose of batteries according to local regulations. Do not dispose of batteries in fire.

10. WARRANTY AND SUPPORT

Specific warranty information for the CAPOXO A18 headphones is not available in this manual. Please refer to the retailer or manufacturer's official website for details regarding warranty coverage and customer support. For technical assistance or inquiries, please contact CAPOXO customer service.


Related Documents - A18

	<p>A18 ANC and ENC Headphones User Manual</p> <p>User manual for the A18 ANC and ENC Headphones, detailing product specifications, features like Active Noise Cancellation (ANC) and Transparency Mode, Bluetooth pairing, controls, troubleshooting, and compliance information.</p>
 <p>User Manual</p> <p>Customer Service Email: am@capoxo.com Web: www.capoxo.com WhatsApp: (+66) 139 2349 0475</p> <p>Packing List</p> <p>Charging Case x1 Wireless Earbuds x2 Type-C Cable x1 Ear Tips x3 User Manual x1</p> <p>Overview</p> <p>Charging Point Ear Hook Ear Tips LED Indicator Multi-function Buttons (RHS) Type-C Charging Port Charging Case LED Power Display Wireless Charging Area (Bottom of charging case)</p> <p><small>Note: Please REMOVE protective film of the LED power display screen and charging point before using them.</small></p>	

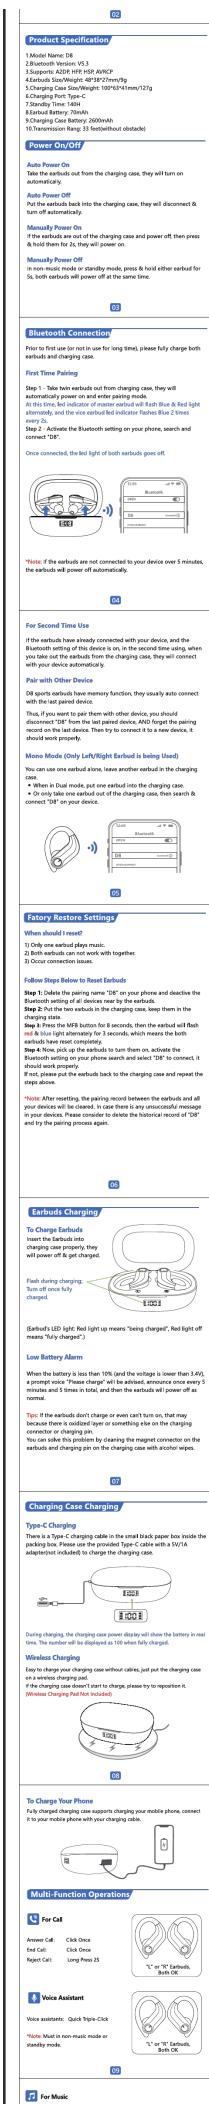

D8 Wireless Earbuds User Manual

User manual for the D8 Wireless Earbuds, detailing features, setup, operation, and troubleshooting. Includes information on Bluetooth pairing, charging, call and music controls, and safety precautions.

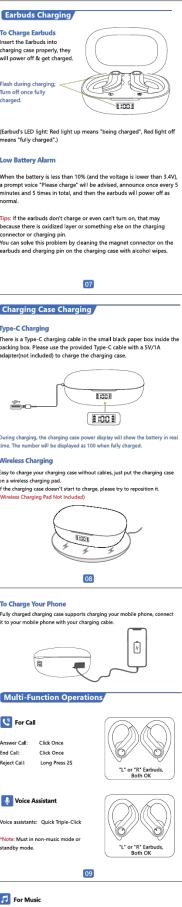

[Functions on "R" Earbud]

Play/Pause: Click Once
Next Track: Quick Double Click
Previous Track: Quick Double Click
Volume Up: Click Once & Hold
Volume Down: Click Once & Hold

Note: In music mode, "R" earbud only supports next song and volume. You have to go back to the previous song by your phone.



[Functions on "L" Earbud]

 
Play/Pause: Click Once
Previous Track: Quick Double Click
Next Track: Quick Double Click
Volume Up: Click Once & Hold
Volume Down: Click Once & Hold

Note: In music mode, "L" earbud only supports next song and volume. You have to go back to the previous song by your phone.



How to Wear the Earbuds Correctly?


Choose best-fit ear tips, gently push them into your ears and you will get a comfortable fit.

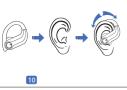

Safety Attention

- Do not use the earbuds while driving a car, operating machinery or performing other activities that require hearing surrounding sounds.
- Using earbuds at high or moderate volume for extended periods of time will result in permanent hearing damage. It is advised you keep the volume at a safe level and take frequent breaks.
- Please avoid use in thundering and rainy days to prevent damage or electrical shock.
- Please do not expose the earbuds out of extreme heat or humidity, do not use any corrosive cleaner(s) to clean the earbuds.
- In case of fire, please remove the ears of the earbuds from the product in case of failure.
- Please do not expose the ears of the earbuds to the sun.
- Please stop using the device if it causes any discomfort or pain.
- As the Bluetooth signal cannot transmit in water, do not turn the earbuds on until completely dried.

How to Place the Earbuds?

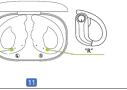

How to Sync Volume on Android?

To protect users from potential hearing damage, Android's limit on max volume is quite low for Bluetooth audio devices.

If you feel the volume is too low, please access developer options and enable absolute volume, so you'll be able to set the volume at the maximum level. Here are the fast capabilities to enable your Bluetooth volume.

(Please scan this QR code to watch a video to learn more details.)



Find Build Number First

Android 4.1 and lower: The Developer options screen is available by default.

Android 4.2 and higher: The Developer options is Android phones and tablets, you have to enable this option through Build Number.

Android 2.3 and lower: Settings > About Phone > Build Number

Android 4.0 and lower: Settings > About Phone > System > About Phone > Build Number


Enable Developer Options

Locate the Build number and tap it about 7 times in succession to enable Developer options. You may also have to tap in your PFP for developer options to appear. Once developer options are enabled, you will see a message that reads "You are now a developer".



Enable Absolute Volume

Scroll down until you reach the Networking section. Once there, enable (toggle ON) the absolute volume option as figure 2.

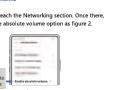

Note: These options in the figures may be different from the device you're using. Typically, the choices depend on the type and model of the device you are working with.



Capoxo X19 Wireless Earbuds User Manual

Comprehensive user manual for the Capoxo X19 wireless earbuds, covering product overview, specifications, charging instructions, pairing troubleshooting, and multi-function operations.

DB




User Manual



Customer Service

Phone Call: 1851-575-1858
Email: amr@capoxo.store
Web: www.capoxo.store


Packing List

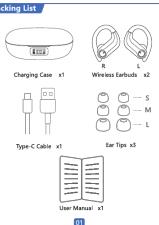


Overview

Charging Point



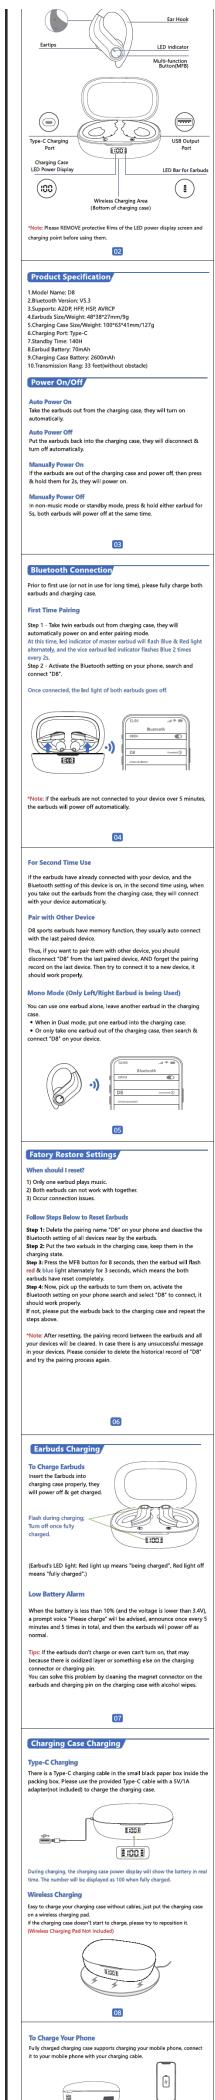

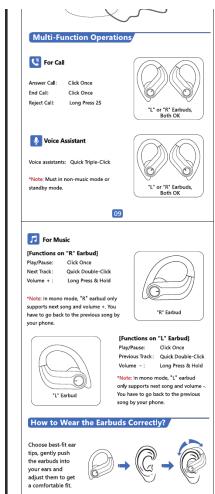


10

Safety Attention

1. Do not use the earbuds while driving a car, operating machinery or performing other activities that require hearing or surrounding.
2. Using earbuds at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep the volume at a safe level and take frequent breaks when using.
3. Please avoid use in thundering and raining days to prevent water damage.
4. Please keep the earbuds out of extreme heat or humidity, do not use any corrosive cleaner to clean the earbuds.
5. Please do not disassemble the earbuds or any part of the product. In case of failure, please contact the manufacturer for repair.
6. Please stop using the device if it causes any discomfort or pain.
7. As the Bluetooth earbuds cannot transmit in water it is not suitable for swimming. If you must swim in water, do not turn the earbuds on until completely dried.

 How to Place the Earbuds



11

How to Sync Volume on Android?

To protect users from potential hearing damage, Android's limit on max volume is quite low for Bluetooth audio devices.

If you feel the volume is too low, please access developer options to increase the volume. You can also contact the manufacturer of your own device and the factory representative of your Bluetooth earbuds.

(Please scan this QR code to watch a video to learn more details.)



Find Build Number
Android 4.1 and lower: the Developer options screen is available by default.
Android 4.2 and higher: the Developer options in Android phones are hidden, you must enable this screen through Build Number.

Android 7.1 and lower: Settings -> About Phone -> Build Number
Android 8.0 and higher: Settings -> System -> About Phone -> Build Number

Enable Developer Options

Locate the Build number and tap it about 7 times in succession to enable Developer options. You may also need to tap the screen after each tap. Once developer options are activated, you will see a message that reads "You are now a developer".

12

Go back to the Settings page, search Developer options as an entry. At the top of the Developer options screen, you can toggle the options as figure 1.



Figure 1

Enable Absolute Volume

Scroll down until you reach the Networking section. Once there, enable (toggle On) the absolute volume option as figure 2.



Figure 2

*Note: These options in the figures may be different from the device you're using. Typically, the choices depend on the type and model of the device you are working with.

13

A18 Karaoke Microphone with Speaker User Manual

User manual for the A18 Karaoke Microphone with Speaker, detailing its features, technical specifications, pairing instructions, and safety precautions. Learn how to use the key controls, connect via Bluetooth or LINE IN, and troubleshoot common issues.



Capoxo D7 True Wireless Earbuds User Manual

User manual for the Capoxo D7 True Wireless Earbuds, covering setup, pairing, charging, touch controls, and troubleshooting.