

Tefal GF2251

Tefal X-Clean 2 GF2251F3 2-in-1 Wet & Dry Vacuum Cleaner User Manual

Model: GF2251

[Overview](#) [Setup](#) [Operation](#) [Introduction](#) [Maintenance](#) [Safety Instructions](#) [Troubleshooting](#) [Product Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Tefal X-Clean 2 GF2251F3 2-in-1 Wet & Dry Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before cleaning or performing any maintenance.
- Do not immerse the appliance, battery, or charging station in water or other liquids.
- This appliance is for indoor use only. Do not use outdoors or on wet surfaces other than those intended for wet cleaning.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Exercise extra care when cleaning on stairs.
- Store the appliance indoors in a cool, dry area.
- The battery pack must be removed from the appliance before it is scrapped. The appliance must be disconnected

from the supply mains when removing the battery. The battery is to be disposed of safely.

3. PRODUCT OVERVIEW

The Tefal X-Clean 2 is a versatile 2-in-1 wet and dry vacuum cleaner designed for efficient cleaning of hard floors. It features a lightweight design, powerful suction, and a wet cleaning function with optimized water flow.



Figure 1: Front view of the Tefal X-Clean 2 vacuum cleaner, showcasing its upright design and cleaning head.

Key Components:

- **Handle with LED Panel:** Displays battery status, cleaning mode, and water tank levels.
- **Clean Water Tank:** For fresh water and cleaning solution.
- **Dirty Water Tank:** Collects dirty water and debris.
- **Cleaning Head:** Features a roller for wet and dry cleaning, designed for edge-to-edge cleaning.
- **Charging/Drying Station:** For convenient storage, charging, and self-cleaning.
- **Cleaning Brush:** For maintenance of the roller and tanks.

- **Additional Roller:** A spare roller for continuous cleaning.



Figure 2: The Tefal X-Clean 2 vacuum cleaner positioned on its charging station, with an additional roller and cleaning brush visible.

Features:

- **2-in-1 Cleaning:** Simultaneously vacuums and washes wet and dry dirt.
- **ECO/MAX Modes:** Select between energy-efficient ECO mode and powerful MAX mode for tougher messes.
- **Lightweight Design:** Weighing 3.9 kg with a self-propelled axis for effortless maneuverability.
- **Edge-to-Edge Cleaning:** The cleaning roller is designed to reach close to walls and furniture.
- **Optimized Water Flow:** Ensures efficient cleaning and faster floor drying.
- **Self-Cleaning Cycle:** A 90-second one-click self-cleaning function for the roller.
- **Long Battery Life:** Up to 35 minutes of continuous cleaning on a single charge.
- **Real-time Status Display:** LED panel on the handle provides information on battery, mode, and water levels.

4. SETUP

4.1 Assembly

1. Unpack all components from the box.
2. Insert the handle into the main body of the vacuum cleaner until it clicks into place.
3. Place the vacuum cleaner onto the charging/drying station.

4.2 Initial Charging

Before first use, fully charge the appliance. Connect the charging station to a power outlet. The LED panel on the handle will indicate the charging status. The battery life is up to 35 minutes.

4.3 Filling the Clean Water Tank

1. Remove the clean water tank from the appliance.
2. Open the tank cap and fill with clean tap water. You may add a small amount of non-foaming cleaning solution suitable for hard floors, following the solution manufacturer's instructions. Do not overfill.
3. Close the cap securely and reinsert the tank into the appliance until it clicks.

5. OPERATION

5.1 Powering On/Off

Press the power button on the handle to turn the appliance on or off.

5.2 Selecting Cleaning Mode

The appliance offers two cleaning modes:

- **ECO Mode:** For light cleaning and everyday spills. Provides longer battery life.
- **MAX Mode:** For stubborn dirt and heavy-duty cleaning. Provides maximum suction and water flow.

Press the mode selection button on the handle to switch between ECO and MAX modes. The selected mode will be displayed on the LED panel.

5.3 Wet & Dry Cleaning

The Tefal X-Clean 2 is designed to vacuum dry debris and wash floors simultaneously. Simply push the appliance forward to clean. The self-propelled axis assists in movement.



Figure 3: The vacuum cleaner head effectively picking up dry debris from a hard floor surface.



Figure 4: The Tefal X-Clean 2 demonstrating its ability to clean both liquid spills and dry cereal on a hard floor.



Figure 5: The vacuum cleaner head positioned close to a wall, illustrating its edge-to-edge cleaning capability.

5.4 Monitoring Status

The LED panel on the handle provides real-time information:

- **Battery Level:** Indicates remaining charge.
- **Cleaning Mode:** Shows whether ECO or MAX mode is active.
- **Water Tank Levels:** Alerts when the clean water tank is low or the dirty water tank is full.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Tefal X-Clean 2.

6.1 Emptying and Cleaning the Dirty Water Tank

Empty the dirty water tank after each use or when the LED panel indicates it is full.

1. Remove the dirty water tank from the appliance.
2. Carefully open the tank and dispose of the dirty water and debris.
3. Rinse the tank thoroughly with clean water. Use the provided cleaning brush to remove any stubborn residue.
4. Allow the tank to air dry completely before reinserting it.



Figure 6: Close-up view of the dirty water tank on the Tefal X-Clean 2, showing collected debris.

6.2 Self-Cleaning Cycle

After each wet cleaning session, it is recommended to run the 90-second self-cleaning cycle.

1. Ensure the clean water tank has sufficient water.
2. Place the appliance on its charging/drying station.
3. Press the self-clean button (refer to your appliance for exact button location, usually near the power button or on the station).
4. The appliance will run a short cycle to clean the roller.

6.3 Cleaning and Replacing the Roller

The roller should be regularly inspected and cleaned. A spare roller is provided for convenience.

1. Turn off and unplug the appliance.
2. Remove the roller cover from the cleaning head.
3. Remove the roller. Clean it under running water using the cleaning brush to remove hair and debris.
4. Allow the roller to air dry completely before reinserting.
5. To replace, align the new or cleaned roller and snap the cover back into place.

6.4 Filter Maintenance

The filter located in the dirty water tank should be cleaned regularly to maintain suction performance. Rinse it under running water and allow it to dry completely before reinstallation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is not charged.	Place the appliance on the charging station and ensure it is properly connected to power. Allow it to charge fully.
Poor suction or cleaning performance.	Dirty water tank is full or filter is clogged. Roller is dirty or tangled. Clean water tank is empty.	Empty and clean the dirty water tank and filter. Clean the roller, remove any tangled hair or debris. Refill the clean water tank.
Water leakage.	Water tanks are not properly installed or caps are loose.	Ensure both clean and dirty water tanks are securely in place and their caps are tightly closed.
Self-cleaning cycle does not start.	Appliance not correctly placed on charging station. Clean water tank is empty.	Ensure the appliance is correctly docked on the charging station. Fill the clean water tank.

8. SPECIFICATIONS

Feature	Detail
Model Name	X-Clean 2
Model Number	GF2251
Brand	Tefal
Function	Wet/Dry Vacuum Cleaner
Power Source	Battery (Lithium-ion)
Battery Life	Up to 35 minutes
Surface Recommendation	Hard Floor
Weight	3.9 Kilograms
Dimensions (L x W x H)	28 cm x 21 cm x 115 cm

Feature	Detail
Noise Level	80 Decibels
Power Levels	2 (ECO/MAX)
Included Components	Cleaning brush, Drying/Charging station, Filter, Additional roller

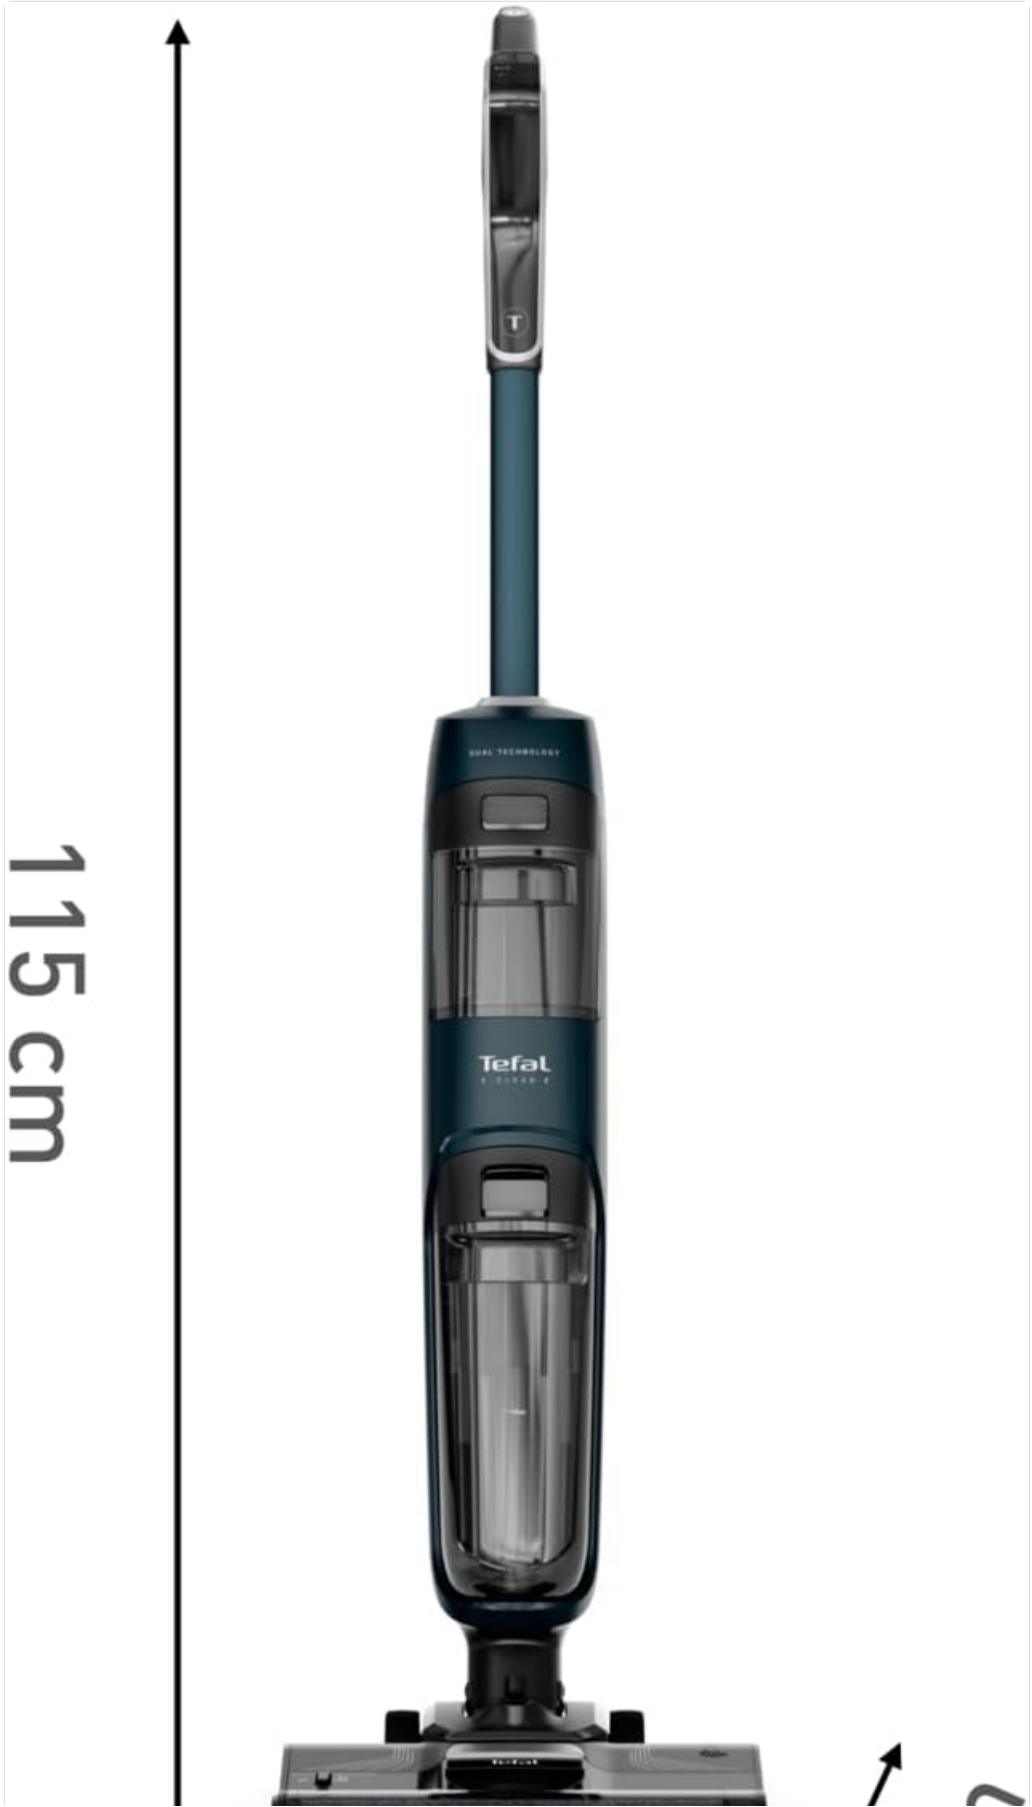




Figure 7: Diagram showing the dimensions of the Tefal X-Clean 2 vacuum cleaner: 115 cm height, 21 cm width, and 28 cm depth of the cleaning head.

9. WARRANTY AND SUPPORT

Tefal is committed to providing quality products. This product benefits from a 15-year repairability commitment at a fair price. We recommend having your product repaired within our network of 6200 repair centers worldwide to ensure a longer product lifespan.

For further assistance, please contact Tefal customer support or visit the official Tefal website.

© 2024 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does the dirty water tank full symbol show on my Tefal X-Clean 2 GF2251 when the tank is empty?

If your Tefal X-Clean 2 GF2251 indicates that the dirty water tank is full even when it is empty, it is likely due to residue or moisture interfering with the sensors or airflow. Follow...

[Read full answer](#)