

[Manuals.plus](#) /

› [MZK](#) /

› MZK 40V (2x20V) 13-inch Cordless Electric Lawn Mower LM13B08 User Manual

MZK LM13B08

MZK 40V (2x20V) 13-inch Cordless Electric Lawn Mower LM13B08 User Manual

Model: LM13B08

1. INTRODUCTION

Thank you for choosing the MZK 40V (2x20V) 13-inch Cordless Electric Lawn Mower, model LM13B08. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new lawn mower. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury when operating this appliance.

General Safety Warnings:

- **Read all instructions:** Familiarize yourself with the controls and proper use of the appliance.
- **Keep children and bystanders away:** Do not allow children or untrained individuals to operate the mower.
- **Dress properly:** Wear appropriate footwear, long pants, and eye protection. Avoid loose clothing that can get caught in moving parts.
- **Inspect the area:** Before mowing, clear the area of objects such as rocks, toys, wires, or other debris that could be thrown by the blade.
- **Avoid dangerous environments:** Do not use the mower in wet conditions or in the rain.
- **Maintain balance and footing:** Always be sure of your footing on slopes. Mow across the face of slopes, never up and down.
- **Disconnect power:** Always remove the battery pack when not in use, before cleaning, or when making adjustments.
- **Use only MZK batteries and chargers:** Using other batteries or chargers may create a risk of injury and fire.
- **Store idle appliances:** When not in use, store the mower in a dry, secure place out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present and undamaged upon opening the package. If any parts are missing or damaged, contact MZK customer support.

- MZK 13-inch Cordless Electric Lawn Mower
- 2 x 20V 4.0Ah Lithium-ion Batteries
- Dual Port Battery Charger
- Grass Catcher Bag
- Instruction Manual



Figure 3.1: MZK Cordless Electric Lawn Mower, batteries, and charger.

4. ASSEMBLY AND SETUP

4.1 Handle Assembly

1. Unfold the handle into the operating position.
2. Secure the handle using the provided knobs and bolts. Ensure all connections are tight.

4.2 Battery Installation

1. Ensure the batteries are fully charged before first use.
2. Open the battery compartment cover on the top of the mower.
3. Insert both 20V batteries into their respective slots until they click into place.
4. Close the battery compartment cover securely.



Figure 4.2: Proper battery insertion into the mower.

4.3 Grass Catcher Attachment

1. Lift the rear discharge flap.
2. Hook the grass catcher onto the mower's frame. Ensure it is securely seated to prevent grass clippings from escaping.

4.4 Height Adjustment

The mower features 4-position height adjustment for varying grass lengths.

1. Locate the height adjustment lever on the side of the mower.
2. Pull the lever outwards and move it to the desired cutting height position (1.2 inches to 1.5 inches).
3. Release the lever to lock it into place. Ensure all wheels are at the same height setting.



Figure 4.4: Adjusting the cutting height with the lever.

5. OPERATION

5.1 Starting the Mower

The MZK lawn mower features a two-step activation process for safety:

1. Insert the safety key into the designated slot.

2. Press and hold the safety button, then pull the bail lever towards the handle. The motor will start.
3. Release the safety button once the motor is running. The mower will continue to operate as long as the bail lever is held.

To stop the mower, release the bail lever.

5.2 Mowing Techniques

- For best results, mow dry grass.
- Overlap cutting swaths slightly to ensure an even cut.
- Avoid overloading the motor by cutting excessively long or thick grass in a single pass. Adjust cutting height or make multiple passes if necessary.
- The 13-inch cutting width allows for efficient coverage of small to medium-sized yards.



Figure 5.2: Operating the MZK lawn mower in a home garden.

5.3 Battery Runtime

The two 4.0Ah batteries provide extended runtime. Actual runtime may vary depending on grass conditions, cutting height, and operator technique.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your lawn mower.

6.1 Blade Care

- Periodically inspect the blade for sharpness and damage. A dull blade can tear grass, leading to an unhealthy lawn.
- If the blade is dull, it can be sharpened or replaced. Always use genuine MZK replacement blades.
- **Caution:** Always remove the battery pack before inspecting or servicing the blade.

6.2 Cleaning

- After each use, clean grass clippings from the underside of the mower deck and the grass catcher.
- Use a brush or cloth to remove debris. Do not use water directly on electrical components.

6.3 Storage

The MZK lawn mower features a space-saving design for convenient storage.

- Clean the mower thoroughly before storing.
- Fold the handle down for compact storage.
- The mower can be stored vertically to save space.
- Store the mower in a dry, secure location, away from direct sunlight and extreme temperatures.
- Remove batteries from the mower before long-term storage.

SPACE-SAVING DESIGN

Vertical Placement Saves You 70%



Figure 6.3: Vertical storage of the MZK lawn mower.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your MZK lawn mower.

Problem	Possible Cause	Solution
Mower does not start	Batteries not charged or improperly inserted Safety key not inserted Bail lever not engaged	Ensure batteries are fully charged and correctly seated. Insert safety key. Engage bail lever after pressing safety button.

Problem	Possible Cause	Solution
Poor cutting performance	Dull or damaged blade Cutting height too low for grass conditions Grass catcher full	Inspect and sharpen/replace blade. Adjust cutting height. Empty grass catcher.
Mower stops during operation	Batteries depleted Overload protection activated	Recharge batteries. Reduce load by raising cutting height or making narrower passes.
Battery not charging	Charger not plugged in Faulty battery or charger	Ensure charger is properly connected to power outlet and battery. Test with another battery if available. Contact customer support if issue persists.

8. SPECIFICATIONS

Feature	Specification
Brand	MZK
Model Number	LM13B08 (ET1608-0806)
Power Source	Battery Powered (2 x 20V Lithium-ion)
Voltage	40V (2x20V)
Cutting Width	13 Inches
Cutting Height Adjustment	4 Positions (1.2 inches to 1.5 inches)
Grass Catcher Capacity	25 Liters
Item Weight	24.3 Pounds
Product Dimensions	30"D x 40"W x 15"H
Motor Type	Brushless

9. WARRANTY AND SUPPORT

MZK is committed to providing quality products. For specific warranty details, please refer to the warranty card included with your product or contact the retailer where the product was purchased. For technical assistance, replacement parts, or any other inquiries, please contact MZK customer support through the official MZK website or your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FLCPH6YT>

More documents and user manuals: **<https://manuals.plus/>**