

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [ALLIMITY](#) /

> [ALLIMITY RG57A6/BGEF Universal Air Conditioner Remote Control User Manual](#)

## ALLIMITY RG57A6/BGEF

# ALLIMITY RG57A6/BGEF Universal Air Conditioner Remote Control User Manual

Model: RG57A6/BGEF | Brand: ALLIMITY

## 1. INTRODUCTION

---

This manual provides instructions for the ALLIMITY RG57A6/BGEF Universal Air Conditioner Remote Control. This remote is designed as a replacement for various Midea Maxicool air conditioner models, offering convenient control over your unit's functions.

### Compatible Models:

- RG57A6/BGEF
- RG57A6/BGEFU1
- RG57A7/BGEF
- RG57/BGE
- RG57A/BGE

Please ensure your air conditioner model is listed above for proper compatibility.

## 2. SETUP

---

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA alkaline batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals match the diagrams inside.
4. Slide the battery cover back into place until it clicks securely.



*Image: Back of the remote control with the battery compartment open for battery insertion.*

## Initial Use

This is an infrared (IR) replacement remote control. No programming or pairing is required. Once batteries are correctly installed, the remote is ready for immediate use with compatible Midea Maxicool air conditioners.

## 3. OPERATING INSTRUCTIONS

---

To operate your air conditioner, point the remote control directly at the air conditioner's receiver window. Ensure there are no obstructions between the remote and the air conditioner.



*Image: Front view of the remote control displaying its buttons and screen.*

### Button Functions:

Button	Function
ON/OFF	Powers the air conditioner on or off.
MODE	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
FAN	Adjusts fan speed (e.g., Low, Medium, High, Auto).
TEMP ▲ / ▼	Increases or decreases the set temperature.

Button	Function
<b>SLEEP</b>	Activates or deactivates sleep mode for energy-efficient operation.
<b>TURBO</b>	Engages maximum cooling/heating power for rapid temperature change.
<b>SELF CLEAN</b>	Initiates the self-cleaning function of the air conditioner.
<b>SILENCE / FP</b>	Activates silent operation mode or Freeze Protection (FP) function.
<b>TIMER ON</b>	Sets a timer for the air conditioner to turn on.
<b>TIMER OFF</b>	Sets a timer for the air conditioner to turn off.
<b>SWING / DIRECT</b>	Controls the louver swing or directs airflow.
<b>LED</b>	Turns the display light on or off.
<b>FOLLOW ME</b>	Activates a function where the remote's sensor measures the temperature and adjusts the AC accordingly.

## 4. MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote's range decreases or if the display becomes dim. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

### Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA alkaline batteries.
- Ensure there are no obstructions between the remote control and the air conditioner's receiver.
- Verify that the remote is pointed directly at the air conditioner.

- **Limited range:**

- Replace batteries.
- Ensure the remote's IR emitter and the AC's receiver are clean and unobstructed.

- **Air conditioner not responding to specific functions:**

- Some advanced functions may vary slightly depending on your specific Midea Maxicool air conditioner

model. Refer to your air conditioner's original manual for detailed function descriptions.

## 6. SPECIFICATIONS

---

<b>Model Number</b>	RG57A6/BGEF
<b>Brand</b>	ALLIMITY
<b>Compatible Devices</b>	Midea Maxicool Air Conditioners (models: RG57A6/BGEF, RG57A6/BGEFU1, RG57A7/BGEF, RG57/BGE, RG57A/BGE)
<b>Power Source</b>	2 x AAA Batteries (not included)
<b>Product Dimensions</b>	5 x 1 x 0.5 inches (approximately 12.7 x 2.54 x 1.27 cm)
<b>Item Weight</b>	2.61 ounces (approximately 74 grams)
<b>Color</b>	White
<b>Special Feature</b>	Ergonomic design



*Image: Remote control with its physical dimensions indicated.*

## **7. WARRANTY AND SUPPORT**

---

### **Warranty Information**

Specific warranty details for this product may vary. Please refer to the seller's return policy or contact the retailer where the product was purchased for information regarding warranty coverage.

## Customer Support

For further assistance or inquiries, please contact the seller or manufacturer directly. Keep your purchase receipt or order details handy for faster service.