

[Manuals.plus](#) /

› [Scoothop](#) /

› Scoothop G1 Electric Scooter User Manual

Scoothop G1

Scoothop G1 Electric Scooter User Manual

Comprehensive guide for safe and efficient use of your Scoothop G1 Electric Scooter.

1. INTRODUCTION

Welcome to the Scoothop G1 Electric Scooter user manual. This document provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new electric scooter. Please read this manual thoroughly before your first ride to ensure optimal performance and safety.





The Scoothop G1 Electric Scooter in its upright, ready-to-ride position.

2. SAFETY GUIDELINES

Your safety is paramount. Always adhere to the following guidelines:

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads) when riding.
- Ensure the scooter is fully charged and all components are securely fastened before each use.
- Do not ride in heavy rain, on icy surfaces, or through puddles deeper than 1 inch.
- Adhere to local traffic laws and regulations. Ride on designated paths where permitted.
- Maintain a safe distance from pedestrians and other vehicles.
- Avoid riding under the influence of alcohol or drugs.
- The maximum weight limit for this scooter is 265 lbs (120 kg). Do not exceed this limit.
- Regularly inspect tires, brakes, and all moving parts for wear and tear.

3. PACKAGE CONTENTS

Upon opening the package, verify that all the following items are included:

- Scoothop G1 Electric Scooter
- Charger

- User Manual
- Reflectors (front and rear)
- Wrench (for assembly)

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Scoothop G1 Electric Scooter:

1. **Unpack the Scooter:** Carefully remove the scooter and all accessories from the packaging.
2. **Unfold the Stem:** Lift the handlebar stem until it locks into the upright position. Secure the folding mechanism latch.
3. **Attach the Handlebars:** Place the handlebar onto the stem. Use the provided wrench to tighten the screws that secure the handlebar in place. Ensure the digital display is centered and the brake levers are easily accessible.
4. **Install Reflectors:** Attach the front and rear reflectors to their designated positions on the scooter for enhanced visibility.
5. **Initial Charge:** Before your first ride, fully charge the scooter's battery using the provided charger. The charging port is typically located on the side of the deck.

Your browser does not support the video tag.

This video provides a detailed step-by-step guide on how to assemble the Scoothop G1 Electric Scooter, including attaching the handlebars, installing reflectors, and preparing the scooter for its first ride.

5. OPERATING INSTRUCTIONS

5.1. Powering On/Off

- **To Power On:** Press and hold the power button on the digital display until the screen illuminates.
- **To Power Off:** Press and hold the power button until the display turns off.

5.2. Riding the Scooter

1. **Kick Start:** Place one foot on the deck and use your other foot to push off the ground, gaining a little momentum.
2. **Engage Throttle:** Once moving, gently press the thumb throttle on the right handlebar to accelerate.
3. **Braking:** Use the brake levers on the handlebars to slow down or stop. The Scoothop G1 features a dual braking system for effective stopping power.
4. **Turning:** Lean slightly in the direction you wish to turn and gently steer the handlebars.

5.3. Digital Display and Controls

The smart LED display provides real-time information:

- **Speed Display:** Shows current riding speed.
- **Battery Indicator:** Monitors remaining battery level.
- **Speed Mode:** Allows selection between different speed settings (e.g., ECO, D, S).
- **Front Light Indicator:** Shows whether the front light is on.
- **Mileage Tracking:** Tracks trip distance and total mileage.
- **Cruise Control:** Activate to maintain a constant speed.

Smart LED Display



Cruise control



Battery Life



Speed Mode



Front Light



The smart LED display on the handlebar provides essential information at a glance, including cruise control status, battery life, current speed mode, and front light activation.

5.4. Folding Mechanism

The Scoothop G1 features a quick one-second folding design for easy storage and portability:

1. Locate the folding latch near the base of the handlebar stem.
2. Pull the latch to release the stem.
3. Fold the stem downwards until it clicks into place, securing it to the rear fender.

Smart Scooter Display

Speed Display – Shows current riding speed

Battery Indicator – Monitors remaining battery level

Lighting Status – Shows whether lights are turned on

Mileage Tracking – Tracks trip distance and total mileage

This image illustrates the Scoothop G1 Electric Scooter's maximum load capacity of 265 lbs, alongside its dimensions in both unfolded (48 inches tall, 43 inches long) and folded (19 inches tall, 43 inches long) configurations, highlighting its robust design and portability.

6. KEY FEATURES

- **350W High-Torque Brushless Motor:** Provides reliable and efficient performance for urban commuting and gentle slopes.
- **8.5" Honeycomb Tires:** Durable, puncture-resistant solid tires that offer a smooth ride and require no inflation.
- **Independent Suspension System:** Engineered for shock absorption, providing a comfortable ride over varied terrain.
- **36V / 7.5Ah High-Density Li-ion Battery:** Delivers up to 16 miles of range on a single 3-4 hour fast charge.
- **16 MPH Top Speed:** Balances everyday efficiency with beginner-friendly safety.
- **Dual Braking System:** Equipped with front and rear drum brakes for smooth and reliable stopping power.
- **Dual Lighting System:** Integrated front headlight and rear taillight for enhanced visibility and safety during night rides.
- **Smart LED Display:** Provides essential riding information including speed, battery level, speed mode, and light status.
- **One-Second Folding Design:** Allows for quick and easy folding, making it highly portable and convenient for storage.
- **UL2272-Certified:** Ensures rock-solid safety and compliance with electrical safety standards.

Your browser does not support the video tag.

A brief overview video showcasing the key features of the Scoothop G1 Electric Scooter, including its shock absorption system, top speed, range, and convenient folding mechanism.

7. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter:

- **Cleaning:** Wipe the scooter with a damp cloth after each ride. Avoid using high-pressure water jets directly on electrical components.
- **Battery Care:** Charge the battery regularly, even if not in use, to maintain its health. Avoid completely draining the battery. Store in a cool, dry place.
- **Tire Inspection:** Although honeycomb tires are solid, regularly check them for any damage or embedded debris.
- **Brake Check:** Periodically test the brakes to ensure they are responsive. Adjust if necessary (refer to a qualified technician if unsure).
- **Fastener Check:** Ensure all screws and bolts are tight, especially on the handlebars and folding mechanism.
- **Storage:** Store the scooter in a dry, indoor environment away from extreme temperatures.

8. TROUBLESHOOTING

Here are some common issues and their potential solutions:

Problem	Possible Cause	Solution
Scooter won't turn on	Low battery; Loose connections	Charge the battery; Check all cable connections.
Loss of power during ride	Low battery; Overload	Charge the battery; Reduce load (check weight limit).
Brakes not responsive	Brake cable loose; Worn brake pads	Adjust brake cable tension; Replace brake pads (consult technician).
Unusual noises	Loose components; Debris in wheels	Check and tighten all fasteners; Inspect wheels for foreign objects.

9. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Scoothop
Model Name	G1
Motor	350W Brushless
Top Speed	16 MPH
Maximum Distance Range	16 Miles
Battery	36V / 7.5Ah Li-ion
Charging Time	3-4 Hours
Weight Limit	265 Pounds
Tire Size	8.5 Inches
Wheel Type	Solid Honeycomb
Suspension Type	Dual Suspension
Brake Style	Rear Braking (Dual Drum System)
Frame Material	Aluminum
Special Features	Cruise Control, Digital Display, Foldable, Replaceable Battery
Item Dimensions LxWxH	18.5 x 6.5 x 43.31 inches (unfolded)
Item Weight	44 lb (20 kg)

10. WARRANTY AND SUPPORT

Warranty: The Scoothop G1 Electric Scooter comes with a 1-Year Manufacturer's Warranty, covering defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support: For any questions, technical assistance, or warranty inquiries, please contact Scoothop customer service through the retailer's platform or visit the official Scoothop website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question