

Bonsaii S125-A

Bonsaii S125-A Paper Shredder

Model: S125-A | Brand: Bonsaii

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Bonsaii S125-A Paper Shredder. This manual provides important instructions for safe operation, setup, use, maintenance, and troubleshooting of your shredder. Please read this manual thoroughly before using the product and retain it for future reference.

Important Safety Instructions:

- Keep out of reach of children and pets.
- Keep loose clothing, jewelry, hair, and fingers away from the paper entry slot.
- Do not spray any flammable products or lubricants into the shredder.
- Do not shred adhesive labels, wet paper, or plastic film as this may cause jams.
- Always unplug the shredder when not in use or before cleaning.
- Do not attempt to repair the shredder yourself. Contact customer service for assistance.

2. PACKAGE CONTENTS

Please check the box for the following items:

- Bonsaii S125-A Paper Shredder
- Instruction Manual

3. PRODUCT OVERVIEW

The Bonsaii S125-A is a compact strip-cut paper shredder designed for home and small office use. It features an adjustable arm to fit various waste bins and can shred up to 6 sheets of paper or one credit card at a time.

Key Components:

- **Paper Entry Slot:** For inserting paper and credit cards.
- **Control Switch:** Selects operating mode (AUTO, OFF, REV).
- **Adjustable Arm:** Extends to fit different waste bin widths.
- **Power/Overheat Indicator:** Blue for power on, Red for overheating.

Uso continuo posible: 2 min

Enfriamiento necesario antes de reusar: 20 min

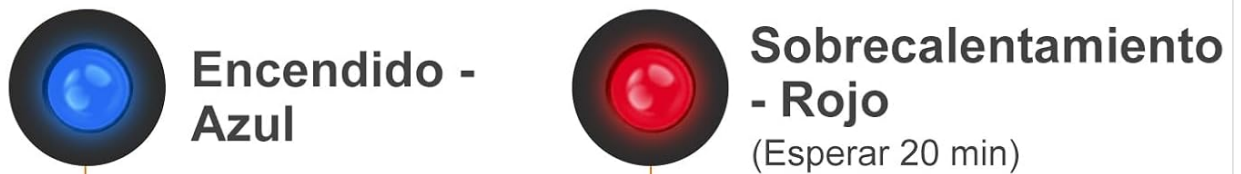


Image: The control panel of the Bonsaii S125-A shredder, showing the power switch with AUTO, OFF, and REV settings, and indicator lights for Power (blue) and Overheat (red).

4. SETUP INSTRUCTIONS

Follow these steps to set up your shredder:

1. **Unpack:** Carefully remove the shredder from its packaging.
2. **Position:** Place the shredder securely on top of a suitable waste bin. The adjustable arm can extend from 31.5 cm to 39.5 cm to fit various bin sizes.
3. **Connect Power:** Plug the power cord into a standard electrical outlet.

Brazo Ajustable (31.5-39.5 cm) Apto Para Varios Contenedores



Image: The Bonsaii S125-A paper shredder demonstrating its adjustable arm, extending to fit different waste bin widths, shown with measurements from 31.5 cm to 39.5 cm.

5. OPERATING INSTRUCTIONS

Powering On/Off:

- To turn on, slide the control switch to the **AUTO** position. The blue power indicator will illuminate.
- To turn off, slide the control switch to the **OFF** position.

Shredding Paper:

1. Ensure the shredder is in **AUTO** mode.
2. Insert up to 6 sheets of paper (A4, 70gsm) straight into the paper entry slot. The shredder will automatically start and stop once the paper has passed through.
3. Avoid exceeding the maximum sheet capacity to prevent jams and overheating.



Corte en tiras



Nivel de seguridad



Tarjeta de crédito



Papel



La trituradora no incluye una papelera

Image: The Bonsai S125-A shredder processing paper, demonstrating its strip-cut mechanism and the resulting shredded paper in a mesh waste bin. It indicates a 6-sheet capacity.

Shredding Credit Cards:

1. Ensure the shredder is in **AUTO** mode.
2. Insert one credit card at a time into the designated credit card slot. The shredder will automatically start and stop.

Trituradora Multifunción

Tritura papel y tarjetas de crédito para proteger tu información personal

Ancho de corte en tiras : 6 mm



Image: The Bonsai S125-A shredder demonstrating the shredding of a credit card, showing the card being fed into the slot and the resulting shredded pieces.

Continuous Operation and Cool-down:

The shredder is designed for intermittent use. It can operate continuously for up to **2 minutes**. After this period, the red overheat indicator will light up, and the shredder will automatically shut off to prevent damage. Allow the shredder to cool down for approximately **20 minutes** before resuming operation. This helps prolong the life of the device.

Tritura 6 hojas a la vez Funcionamiento continuo durante 2 minutos



Image: A diagram illustrating the shredder's operational cycle, showing a 2-minute run time followed by a recommended 20-minute cool-down period to prevent overheating.

6. MAINTENANCE

Emptying the Waste Bin:

Regularly empty the waste bin to prevent shredded paper from backing up into the cutting mechanism, which can cause jams.

Cleaning the Shredder:

- Always unplug the shredder before cleaning.
- Wipe the exterior of the shredder with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Do not use water or any liquids near the paper entry slot or electrical components.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shredder does not start.	Not plugged in; switch in OFF position; overheated.	Ensure power cord is securely plugged in; slide switch to AUTO; allow 20 minutes for cool-down if red indicator is on.
Paper jam.	Too much paper inserted; paper inserted incorrectly.	Slide switch to REV to clear the jam. If unsuccessful, unplug, carefully remove paper manually, then plug in and try REV again. Do not force paper.
Shredder stops during operation, red light on.	Overheating due to continuous use.	This is a normal safety feature. Allow the shredder to cool down for approximately 20 minutes until the red indicator turns off.

8. SPECIFICATIONS

Feature	Detail
Model	S125-A
Shred Type	Strip Cut
Shred Size	6 mm strips
Sheet Capacity	6 sheets (A4, 70gsm)
Credit Card Capacity	1 card
Continuous Run Time	2 minutes
Cool-down Time	20 minutes
Noise Level	70 Decibels
Product Dimensions (L x W x H)	32.1 x 7 x 12 cm
Adjustable Arm Length	31.5 – 39.5 cm
Product Weight	1 kg
Origin	China

Trituradora Multiusos

- La longitud del mango es ajustable, desde 31.5 cm a 39.5 cm
- Compatible con varias cestas (de recogida)
- Fácil de guardar y transportar



Image: A detailed diagram showing the dimensions of the Bonsaii S125-A paper shredder, including its length, width, and height, with measurements in centimeters.

Ancho de corte en tiras : 6 mm



Image: An illustration demonstrating the 6 mm strip cut size produced by the Bonsaii S125-A paper shredder, showing shredded paper strips.

9. WARRANTY AND SUPPORT

Product Warranty:

This Bonsaii S125-A Paper Shredder comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

Customer Support:

For any questions, technical support, or warranty claims, please contact Bonsaii customer service. Refer to your purchase documentation for contact details or visit the official Bonsaii website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question