

[Manuals.plus](#) /

> [Lynkron](#) /

> Lynkron Power Lift Recliner Chair for Elderly, Dual Motor, Model 7734 Instruction Manual

Lynkron 7734

Lynkron Power Lift Recliner Chair for Elderly, Dual Motor, Model 7734 Instruction Manual

Model: 7734 | Brand: Lynkron

INTRODUCTION

Thank you for choosing the Lynkron Power Lift Recliner Chair, Model 7734. This chair is designed to provide comfort and assistance with its dual motor lift and recline functions, integrated massage and heat therapy, and convenient features like USB charging and storage. This manual provides essential information for safe assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your recliner.

SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembly and use.

- Always follow the assembly instructions provided. Do not attempt to assemble or operate the chair without proper guidance.
- Keep fingers and other body parts away from the moving parts of the power lift and recline mechanism.
- Do not exceed the maximum weight capacity of 350 pounds.
- Always supervise children and pets around the chair.
- Ensure the power cord is not pinched or damaged. Do not operate the chair if the cord is damaged.
- Unplug the chair from the power outlet before cleaning or performing any maintenance.
- Do not use the chair in damp or wet environments.

PACKAGE CONTENTS

Your Lynkron Power Lift Recliner Chair is shipped in three separate boxes for safety. Please ensure all boxes have arrived before unboxing and assembly. Verify that all components listed below are present.

What's In The Box?

One Chair | Four Ways to Relax



Please Note: For a Perfect Setup

 Your chair is shipped in 3 separate boxes for safety.

 Wait for ALL 3 boxes to arrive before unboxing.



Image: All components of the recliner chair laid out, alongside three labeled shipping boxes (Box 1, Box 2, Box 3).

Included Components:

- Backrest
- Seat Base with Motor Mechanism
- Left Armrest
- Right Armrest
- Power Adapter
- Remote Control (for lift, recline, massage, heat)
- Assembly Hardware (bolts, washers, etc.)
- Instruction Manual


SETUP AND ASSEMBLY

Follow these steps to assemble your Lynkron Power Lift Recliner Chair. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all parts from the boxes and place them on a clean, soft surface to prevent damage.
2. **Attach Backrest:** Slide the backrest onto the metal posts on the seat base until it clicks securely into place. Ensure both sides are fully engaged.
3. **Attach Armrests:** Slide the left and right armrests onto their respective brackets on the seat base. Press down firmly until they lock.
4. **Connect Cables:** Locate the power cables extending from the backrest and armrests. Connect them to the corresponding ports on the seat base. Ensure all connections are secure.
5. **Connect Power Adapter:** Plug the power adapter into the chair's main power input, then plug the adapter into a wall outlet.
6. **Initial Test:** Use the remote control to test the lift and recline functions to ensure proper operation.

Your browser does not support the video tag.

Video: This video demonstrates the installation process for the Power Lift Recliner Chair, showing how to connect the main components and cables.

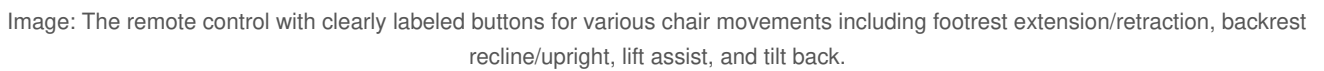

Video: This video demonstrates the various functions of the Power Lift Recliner Chair, including lift, recline, and massage features.

The dual motor system allows independent adjustment of the backrest and footrest.

- **Lift Function:** Press the "Lift Up" button on the remote to gently raise the chair, assisting you to a standing position.
- **Recline Function:** Press the "Backrest Down" button to recline the backrest. Press the "Footrest Up" button to extend the footrest. You can achieve a full 180° lay-flat position.

- **Return to Upright:** Press the "Backrest Up" button to bring the backrest to an upright position. Press the "Footrest Down" button to retract the footrest.



Image: A visual representation of the chair's range of motion, from a 45° lift assist to a 180° lay-flat recline, illustrating different postures for various activities.

2. 8-Point Massage and Lumbar Heating

Activate the massage and heat functions using the dedicated remote control.

- **Massage:** The chair features 8 vibration points with 5 massage modes and 2 intensity levels. Use the massage remote to select your preferred mode, intensity, and target zones (back, lumbar, thighs, legs).
- **Lumbar Heating:** Press the "Heat" button on the massage remote to activate the soothing lumbar heating pad. The heat function has an auto-timer for 15, 30, or 60 minutes.



Image: An overhead view of the recliner highlighting the 8 vibration points for massage, along with the massage remote control displaying various modes and intensity settings.

3. Adjustable Headrest

The headrest can be manually adjusted to three angles (10°, 25°, 35°) for personalized comfort.

- To adjust, gently push or pull the top of the headrest to your desired angle.
- The headrest features a smart reset function: push beyond the maximum angle for an automatic return to the initial position.



Image: A sequence of images illustrating how to manually adjust the headrest to 10°, 25°, and 35° for optimal support.

4. USB and Type-C Charging Ports

Conveniently located on the side of the chair, these ports allow you to charge your electronic devices.

- Simply plug your device's charging cable into the available USB or Type-C port.
- Ensure the chair is connected to a power source for the charging ports to function.

5. Storage and Cup Holders

The chair includes integrated storage and cup holders for added convenience.

- **Flip-up Armrest Storage:** Lift the armrest covers to access hidden compartments, ideal for storing books, remote controls, or personal items.
- **Cup Holders:** Rust-proof cup holders are integrated into the armrests to securely hold your beverages.
- **Side Pocket:** An additional side pocket provides extra storage space for magazines or other small items.

Image: A collage showing the chair's adjustable headrest, the hidden storage compartment under the armrest, the integrated cup holders, and the convenient side pocket.

MAINTENANCE

Regular maintenance helps prolong the life and performance of your recliner.

- **Cleaning:** For fabric surfaces, use a soft cloth and a mild, non-abrasive cleaner. Test on an inconspicuous area first. Do not use harsh chemicals or abrasive materials.
- **Dusting:** Regularly dust the chair with a soft, dry cloth.
- **Inspecting Cables:** Periodically check all power cables and connections for any signs of wear or damage. Ensure they are securely plugged in.
- **Moving the Chair:** When moving the chair, lift it rather than dragging it to prevent damage to the base and flooring.
- **Weight Capacity:** Adhere to the maximum weight capacity of 350 pounds to prevent strain on the motor and frame.

TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair does not respond to remote control.	No power; loose connections; remote control issue.	Ensure power cord is securely plugged into the wall and chair. Check all cable connections under the chair. Replace remote batteries if applicable (check manual for battery type).
Lift or recline movement is slow or jerky.	Overload; obstruction; motor issue.	Ensure weight capacity is not exceeded. Check for any obstructions under the chair or in the mechanism. If the issue persists, contact customer support.
Massage or heat function not working.	Loose connection; remote issue.	Check the connections for the massage and heat components. Ensure the massage remote has power.
Unusual noises during operation.	Loose parts; lack of lubrication; obstruction.	Inspect for any loose bolts or components. Ensure no objects are caught in the mechanism. If noises persist or worsen, discontinue use and contact customer support.
USB/Type-C ports not charging devices.	Chair not powered; faulty cable/device.	Ensure the chair is plugged in and powered on. Test with a different charging cable and device to rule out external issues.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Lynkron
Model Name	7734
Color	Grey
Material	Textile (velvet finish), Foam (seat/fill), Wood (frame)
Product Dimensions (D x W x H)	39.8"D x 41.7"W x 41.7"H
Item Weight	172 pounds
Maximum Weight Recommendation	350 pounds
Seat Height	19.7 inches
Seat Depth	21.7 inches
Chair Backrest Width	37 inches
Reclining Position Count	4 (including lay-flat)
Motors	Dual Motor (independent backrest/footrest)
Massage Features	8-point vibration, 5 modes, 2 intensity levels, 4-zone independent control
Heating Features	Lumbar heating pad, 15/30/60-minute timer
Headrest	Manually adjustable (10°/25°/35°)
Charging Ports	USB, Type-C
Storage	Flip-up armrest storage, side pocket, cup holders
Indoor/Outdoor Usage	Indoor

WARRANTY INFORMATION

This product may be eligible for a 3-Year Protection Plan, which can be purchased separately. For specific warranty details, including coverage and duration, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need troubleshooting support that is not covered in this manual, please contact Lynkron customer service. Refer to your purchase documentation for contact information or visit the official Lynkron website.

