

[Manuals.plus](#) /

› [EILLEO](#) /

› EILLEO Adults Electric Scooter with Seat User Manual

EILLEO US11-1213

EILLEO Adults Electric Scooter with Seat User Manual

Model: US11-1213

Brand: EILLEO

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your EILLEO Adults Electric Scooter with Seat, model US11-1213. Please read this manual thoroughly before using the scooter to ensure proper function and to prevent injury or damage.



Figure 1: EILLEO Adults Electric Scooter with Seat (Black)

2. SAFETY INFORMATION

Operating an electric scooter requires caution and adherence to safety guidelines. Always prioritize your safety and the safety of others.

- **Wear a Helmet:** Always wear an approved helmet and other protective gear (knee pads, elbow pads) when riding.
- **Observe Traffic Laws:** Follow all local traffic laws and regulations.
- **Weight Limit:** Do not exceed the maximum weight limit of 265 lbs (120 kg).
- **Age Range:** This scooter is designed for adult use. Supervise children if they are passengers on the designated child seats.
- **Braking:** The scooter is equipped with dual brakes. Familiarize yourself with their operation before riding.
- **Night Riding:** Utilize the bright front light and rear taillights for visibility during night riding. Ensure lights are functional before operating in low-light conditions.
- **Weather Conditions:** Avoid riding in heavy rain, snow, or icy conditions.

3. PACKAGE CONTENTS

Upon unpacking, verify that all components are present and undamaged:

- EILLEO Electric Scooter with Seats (Main Unit)
- Battery Charger
- User Manual
- Assembly Tools (if required)

Note: The basket is sold separately and may not be included in the standard package.

4. SETUP AND ASSEMBLY

The EILLEO electric scooter features a quick-folding design for convenience. Follow these steps for initial setup:

1. **Unfolding the Handlebar:** Carefully unfold the handlebar until it locks securely into place. Ensure all locking mechanisms are engaged.
2. **Adjusting the Seat:** The main seat is height-adjustable. Loosen the quick-release lever or bolt, adjust the seat to a comfortable riding height, and then securely tighten.
3. **Child Seats and Footrests:** The front child seat is removable for additional cargo space. The rear seat can also be removed to install a basket (sold separately). Ensure all seats and foldable footrests are properly positioned and secured before use.
4. **Initial Charge:** Before first use, fully charge the scooter's battery. Refer to the 'Charging the Battery' section for detailed instructions.

MULTIFUNCTIONAL DESIGN



Maximum
speed 17.4mph



Range 20miles

Figure 2: Handlebar Controls and Display



MULTIPLE SCENARIOS



MEET DIFFRENT NEEDS



Figure 3: Foldable Footrest and Wide Pedal

5. OPERATING INSTRUCTIONS

Familiarize yourself with the scooter's controls and functions before riding.

5.1 Powering On/Off

- Insert the key into the ignition and turn it to the 'ON' position to power on the scooter.
- The LED Dashboard will illuminate, displaying current battery information.
- Turn the key to the 'OFF' position to power off the scooter.

5.2 Riding

- **Throttle:** Gently twist the throttle handle to accelerate. The scooter features infinitely variable speed regulation for smooth acceleration.

- **Braking:** Use the front and rear brake levers on the handlebar to slow down or stop. Apply both brakes simultaneously for optimal stopping power.
- **Lights:** Press the light button on the handlebar to activate the front headlight and rear taillights.
- **Bell:** Use the bell to alert pedestrians or other riders of your presence.



Foldable Footrest 
Comfortable Wide Pedal

Figure 4: Scooter Features: Bright Light, Removable Seats



Figure 5: Safe Riding at Night with Headlight and Taillight

5.3 Charging the Battery

- Locate the charging port on the scooter.
- Connect the charger to the scooter's charging port, then plug the charger into a standard electrical outlet.
- The charging indicator on the charger will show the charging status.
- A full charge typically takes approximately 4 hours. Do not overcharge the battery.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Battery Care:** Store the scooter in a cool, dry place. If storing for extended periods, charge the battery to approximately 50-70% every 1-2 months.
- **Tire Maintenance:** The 14-inch pneumatic tires require proper inflation. Check tire pressure regularly and inflate to the recommended PSI (refer to tire sidewall for details).
- **Cleaning:** Clean the scooter with a damp cloth. Avoid using high-pressure water jets or harsh chemicals, which can damage electrical components.
- **Brake Inspection:** Periodically check the front and rear disc brakes for wear and proper function. Adjust or replace brake pads as needed.
- **General Inspection:** Regularly check all bolts, nuts, and fasteners for tightness. Ensure the folding mechanism is secure.

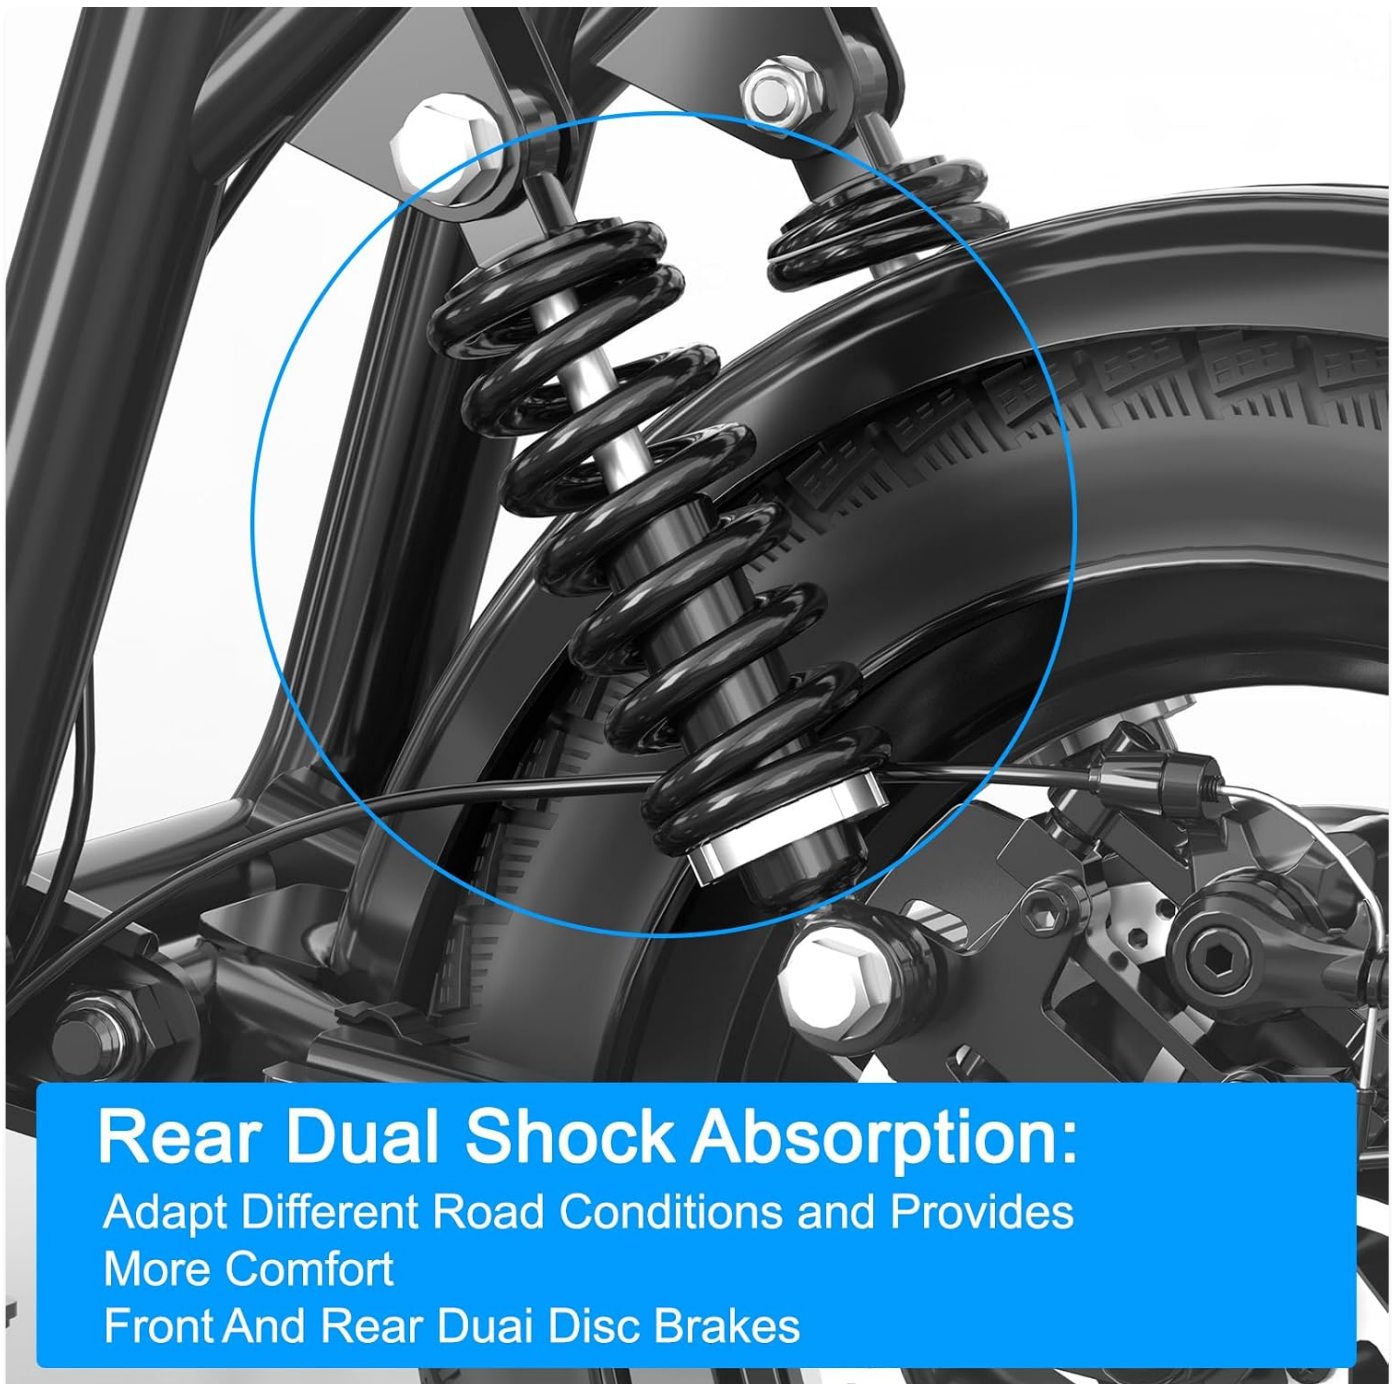


Figure 6: Rear Dual Shock Absorption and Disc Brakes

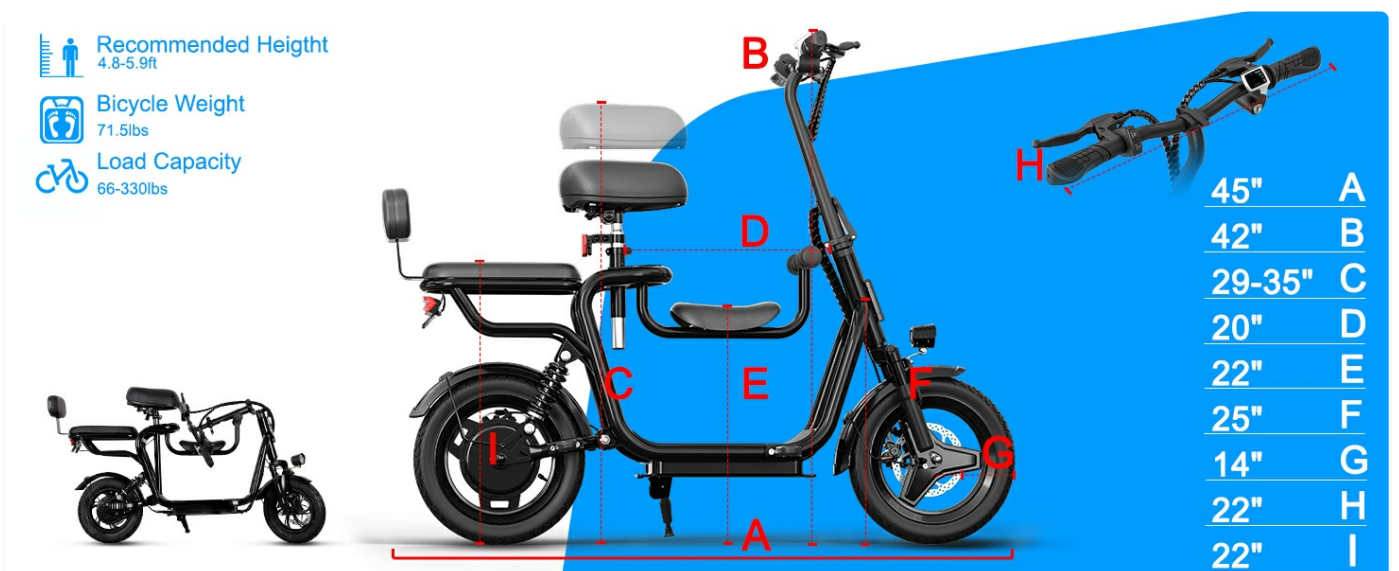


Figure 7: 14-inch Pneumatic Tires

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your scooter.

- **Scooter Not Turning On:** Ensure the key is fully inserted and turned to the 'ON' position. Check battery charge level.
- **Reduced Range/Power:** This could indicate a low battery charge. Ensure the battery is fully charged. Extreme temperatures can also affect battery performance.
- **Brakes Not Responsive:** Inspect brake cables and pads for wear or damage. Adjust as necessary or seek professional assistance.
- **Unusual Noises:** Stop riding immediately and inspect the scooter for loose parts, damaged components, or foreign objects.

If you experience persistent issues not covered here, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the EILLEO Adults Electric Scooter with Seat.

Feature	Specification
Brand	EILLEO
Model Name	US11-1213
Color	Black
Motor Power	350W (500W Peak Power)
Battery	36V 13Ah
Max Speed	17.4 mph (28 km/h)
Max Range	Up to 20 miles (32 km)
Weight Limit	265 Pounds (120 kg)
Product Dimensions	50"L x 22.83"W x 44.09"H (127cm L x 58cm W x 112cm H)
Item Weight	29.5 Kilograms (65 lbs)
Wheel Size	14 Inches
Wheel Type	Pneumatic
Brake Style	Front Braking, Rear Braking (Disc Brakes)
Suspension Type	Rear Suspension
Charging Time	4 Hours
Special Features	Adjustable Handlebar Height, Cruise Control, Digital Display, Dual Braking System, Seat
Material	Alloy Steel



350W
Powerful Motor

HIGH QUALITY MOTER
500W Peak Motor

Figure 8: Powerful 350W Motor (500W Peak)



Wide Deck

Retractable footrest Wider non-slip deck and footrest provides greater comfort for your feet.



Figure 9: Product Dimensions Overview

9. WARRANTY

The EILLEO Adults Electric Scooter with Seat comes with a**1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact EILLEO Official-US customer support. Refer to your purchase documentation or the EILLEO brand store on Amazon for contact details.
We are committed to providing excellent service and support for your product.

© 2025 EILLEO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question