

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Hotechs](#) /

› [Hotechs MP3 Player User Manual - Model 67687](#)

Hotechs 67687

Hotechs MP3 Player User Manual

MODEL: 67687

1. Product Overview

The Hotechs MP3 Player is a compact and versatile digital audio device designed for music playback, FM radio, voice recording, e-book reading, and photo viewing. It features a 1.82-inch LCD screen and comes with a 32GB memory SD card, expandable up to 128GB with a Micro TF Card. Its durable metal casing ensures longevity, and its user-friendly design makes it suitable for various activities.

2. Package Contents

Verify that all items are present in the package:

- 1 x Hotechs MP3 Player
- 1 x User Manual (this document)
- 1 x USB Cable
- 1 x Earphone
- 1 x 32GB Memory SD Card (pre-installed or included separately)

3. Device Layout

Familiarize yourself with the buttons and ports of your Hotechs MP3 Player.

DOWLOAD AND CHARGE WITH PC



Image 3.1: Front, side, and back view of the Hotechs MP3 Player. This image illustrates the device's 1.82-inch LCD screen, the circular control pad with Menu, Play/Pause, Next/Previous, and Volume buttons, the power switch, TF card slot, 3.5mm headphone jack, built-in microphone, and Mini USB port.

- **Screen:** 1.82-inch TFT LCD display.
- **Control Pad:** Central button for Play/Pause/Select, directional buttons for navigation (Next/Previous track, Menu, Volume).
- **Power Switch:** Located on the top edge (OFF/ON).
- **TF Card Slot:** For inserting a Micro TF (SD) card to expand storage.
- **Headphone Jack:** 3.5mm port for connecting earphones.
- **Microphone:** Built-in for voice recording.
- **Mini USB Port:** For charging and data transfer.

4. Setup

4.1. Charging the Device

Before first use, fully charge your MP3 player. Connect the provided USB cable to the Mini USB port on the player and the other end to a computer's USB port or a compatible USB wall adapter (not included). A full charge typically takes 1-2 hours and provides up to 10 hours of playback.

4.2. Inserting a Micro TF (SD) Card

The player comes with a 32GB SD card. If you wish to expand storage, insert a Micro TF card (up to 128GB, not included) into the TF card slot until it clicks into place. Ensure the player is powered off before inserting or removing the card.

4.3. Connecting to a Computer and Transferring Files

To transfer music, videos, photos, or e-books:

1. Connect the MP3 player to your computer using the supplied USB cable.
2. The player will appear as a removable disk drive on your computer (compatible with Windows 7/8/8.1/10/XP/Vista/2000/Mac OS 10).
3. Drag and drop your desired files (MP3, AMV, JPEG/BMP, TXT) directly into the player's storage or the inserted TF card. You can create folders on the device to organize your content.
4. Safely eject the device from your computer before disconnecting the USB cable.

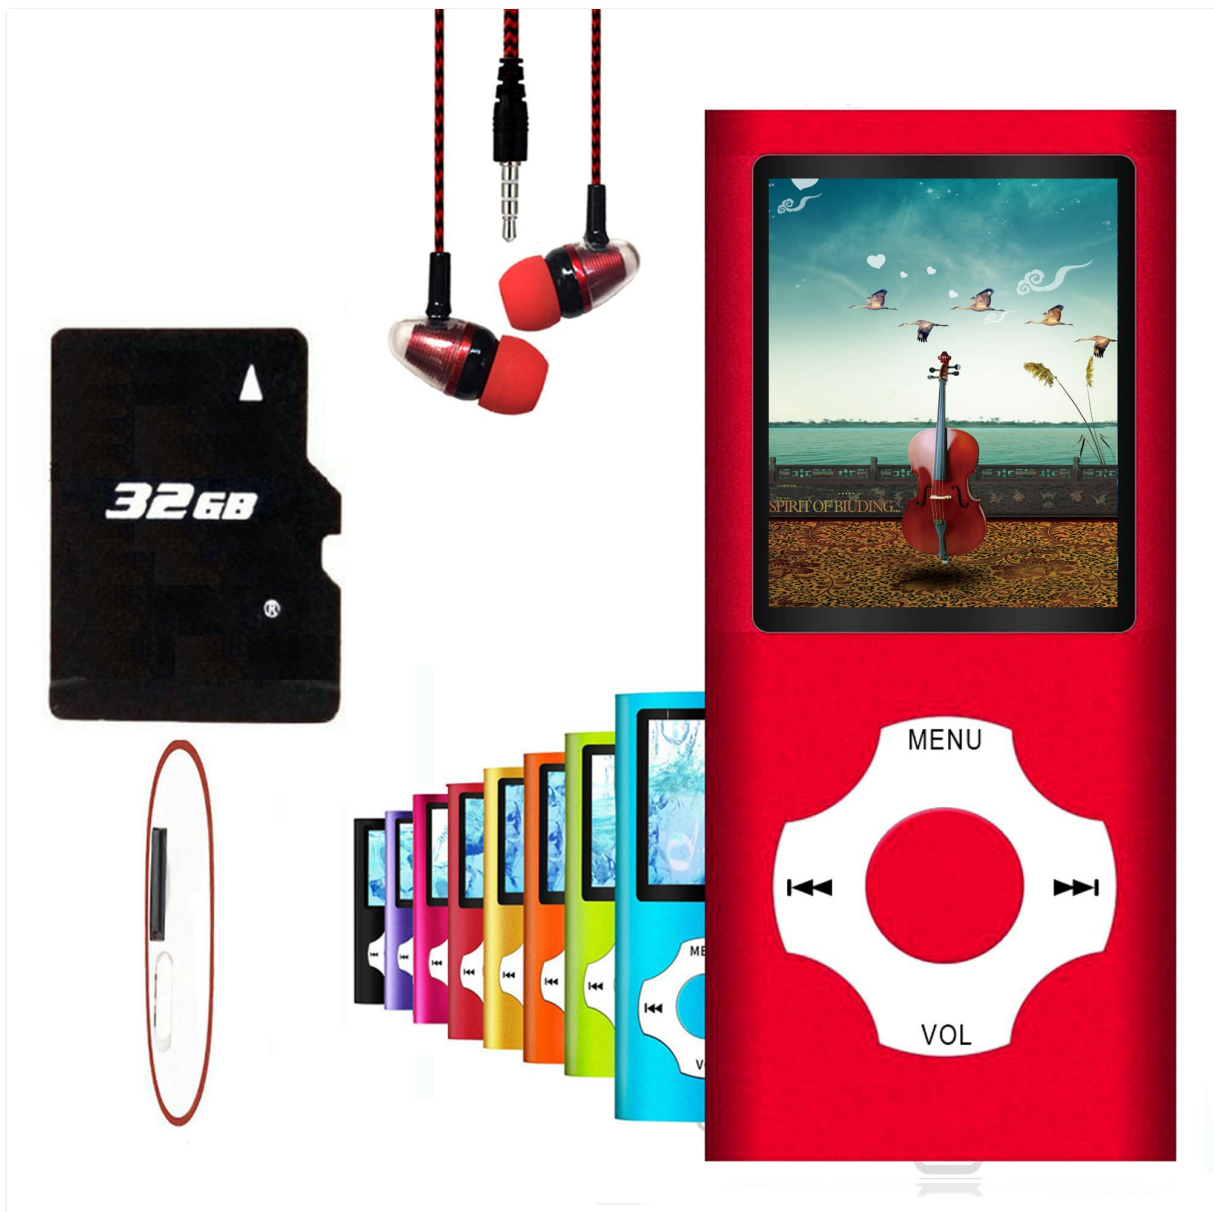


Image 4.1: Hotechs MP3 Player connected to a laptop. This image shows the MP3 player plugged into a laptop via its Mini USB port, demonstrating how to connect the device for charging and file transfer.

5. Operating Instructions

5.1. Power On/Off

Slide the power switch located on the top edge of the device to the 'ON' position to power on. Slide it to 'OFF' to power off.

5.2. Basic Navigation

Use the circular control pad for navigation:

- **Central Button:** Press to select an option or Play/Pause during media playback.
- **Left/Right Buttons:** Navigate through menu options or skip tracks.
- **'M' (Menu) Button:** Access the main menu or return to the previous screen.
- **'VOL' (Volume) Button:** Adjust the volume level.

5.3. Music Playback

1. From the main menu, select 'Music'.
2. Browse through your folders and select the desired MP3 file.
3. Press the central button to play/pause. Use left/right buttons to skip tracks.
4. Adjust volume using the 'VOL' button.

5.4. FM Radio

1. From the main menu, select 'FM Radio'.
2. The built-in FM tuner supports both manual and auto-tune functions.
3. Use the navigation buttons to scan for stations or select a saved preset.
4. Frequency range: 87.5 MHz ~ 108 MHz.

5.5. Voice Recording

1. From the main menu, select 'Voice Record'.
2. Press the central button to start recording. Press again to stop.
3. Recordings are saved in MP3 or WAV format.
4. Recording range: 5-8 meters.

5.6. E-Book Function

1. From the main menu, select 'E-Book'.
2. Browse and select your TXT format e-book files.
3. Use navigation buttons to scroll through pages.

5.7. Video Playback

1. From the main menu, select 'Video'.
2. Select your AMV format video files (resolution 240*320).
3. Press the central button to play/pause.

5.8. Photo Viewing

1. From the main menu, select 'Picture Browse'.
2. Select your JPEG/BMP format image files (resolution 240*320).
3. Use navigation buttons to view images.

6. Specifications

Battery Capacity	3.7 V / 200 mAh
Screen	1.8 inch TFT LCD screen
Audio Format Support	MP3
Video Format Support	AMV (240*320 resolution)
Voice Recorder Format	MP3 / WAV
Voice Recording Range	5-8 meters
Picture Browse Format	JPEG/BMP (240*320 resolution)
FM Receiving Frequency	87.5 MHz ~ 108 MHz
E-Book Format Support	TXT
Dimensions	10.6 x 5 x 0.9 cm (4.21 x 2.4 x 1.46 inches)
Net Weight	Approx. 76 g (2.39 ounces)
Power Supply	DC 5V Micro USB interface
Internal Capacity	32GB (with included SD card)
TF Card Support	Maximum 128GB (Memory SD HC Card)

7. Troubleshooting

- **Device will not power on:** Ensure the battery is charged. Connect the player to a power source and try again. Check the power switch is in the 'ON' position.
- **No sound:** Check if earphones are properly connected. Adjust the volume level. Ensure the audio file format is supported (MP3).
- **Cannot transfer files:** Ensure the USB cable is securely connected to both the player and the computer. Verify the computer recognizes the device as a removable disk. Try a different USB port or cable.
- **Screen is frozen or unresponsive:** Press and hold the power button for 10-15 seconds to force a restart. If the issue persists, allow the battery to fully discharge and then recharge.
- **SD card not recognized:** Ensure the TF card is inserted correctly. Try re-inserting the card. If possible, test the card in another device or try a different TF card.

8. Warranty and Support

The Hotechs MP3 Player comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For any issues, questions, or support needs, please contact our professional after-sales service team. We are committed to providing quick and satisfactory responses to ensure your satisfaction.

Please refer to your purchase documentation or the Hotechs official website for contact information.

