

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TechniSat](#) /

› [TechniSat Viola Kitchen Radio: Under-Cabinet FM Radio with Bluetooth, LED Display, and Timer](#)

TechniSat 0001/2932

TechniSat Viola Kitchen Radio: User Manual

Model: 0001/2932

INTRODUCTION

The TechniSat Viola Kitchen Radio is a modern and versatile audio device designed for convenient use in your kitchen or other areas. It offers FM radio reception, Bluetooth connectivity for audio streaming and hands-free calls, an LED display, an integrated work light, and a kitchen timer. This manual provides essential information for the safe and efficient operation of your device.

SAFETY INFORMATION

Please read all safety instructions before using the device. Keep this manual for future reference.

- Do not expose the device to water or excessive moisture.
- Ensure proper ventilation around the unit.
- Use only the provided power adapter.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep out of reach of children.

PACKAGE CONTENTS

Verify that all items are present in the package:

- TechniSat Viola Kitchen Radio
- Power Adapter
- Whip Antenna
- Mounting Accessories
- User Manual

SETUP

1. Mounting the Radio

The TechniSat Viola can be installed under a cabinet or used as a standalone unit.



Empfang von UKW Radioprogrammen

Mit einem Speicher von 40 Favoriten genießen Sie die beliebtesten Sender ohne langes Suchen.

Image: The TechniSat Viola Kitchen Radio shown installed under a kitchen cabinet, demonstrating its space-saving design.

Under-Cabinet Installation:

1. Select a suitable location under a kitchen cabinet, ensuring sufficient space and access to a power outlet.
2. Use the provided mounting template (if included) to mark the drilling points.
3. Drill pilot holes and secure the mounting brackets using the supplied screws.
4. Slide the radio onto the brackets until it clicks securely into place.

Standalone Use:

Place the radio on a stable, flat surface. Ensure it is not near heat sources or in direct sunlight.

2. Connecting the Antenna

Connect the whip antenna to the designated antenna input on the back of the radio. Extend the antenna for optimal FM reception.

3. Connecting Power

Plug the power adapter into the DC input port on the radio, then plug the adapter into a standard wall outlet (230V, 50Hz).

OPERATING INSTRUCTIONS

1. Basic Controls Overview



Image: A detailed view of the TechniSat Viola's front panel, showing the LED display, timer button, and the aluminum rotary knob for volume and selection.

- **Power Button:** Turns the radio on/off.
- **MODE/RESET Button:** Switches between FM, Bluetooth, and other modes; resets settings.
- **MEM/PRE Button:** Saves and recalls preset radio stations.
- **TUN-/<< Button:** Tunes down frequency or skips backward in Bluetooth mode.
- **TUN+/>> Button:** Tunes up frequency or skips forward in Bluetooth mode.
- **ALARM Button:** Sets and activates the alarm function.
- **TIMER Button:** Activates and sets the kitchen timer.
- **LIGHT Button:** Controls the integrated LED work light.
- **SNOOZE Button:** Temporarily silences the alarm.
- **Volume/Selector Knob:** Adjusts volume; rotates to select options in menu.
- **MIC:** Microphone for hands-free calls.

2. FM Radio Operation



Praktische LED-Beleuchtung

Die LEDs des VIOLA KÜCHENRADIOs können als Unterschränkeleuchtung verwendet werden.

Image: The TechniSat Viola radio displaying an FM frequency and the current time, illustrating its radio reception capability.

1. Press the **MODE** button until "FM" appears on the display.
2. **Automatic Station Search:** Press and hold **TUN-/<<** or **TUN+/>>** to automatically scan for the next available station.
3. **Manual Tuning:** Briefly press **TUN-/<<** or **TUN+/>>** to fine-tune the frequency step by step.
4. **Saving Presets:**
 - a. Tune to the desired station.
 - b. Press and hold the **MEM/PRE** button until the preset number flashes.
 - c. Use the **Volume/Selector Knob** or **TUN-/<< / TUN+/>>** buttons to select a preset number (up to 40).
 - d. Press **MEM/PRE** again to confirm.
5. **Recalling Presets:** Briefly press the **MEM/PRE** button, then use the **Volume/Selector Knob** or **TUN-/<< / TUN+/>>** buttons to select a saved station.

3. Bluetooth Audio Streaming and Hands-free Function



Image: A hand holding a smartphone displaying a music player, with the TechniSat Viola radio visible in the background, demonstrating its Bluetooth audio streaming and hands-free capabilities.

1. Press the **MODE** button until "BT" (Bluetooth) appears on the display. The radio will enter pairing mode, indicated by a flashing Bluetooth icon.
2. On your smartphone or tablet, enable Bluetooth and search for available devices. Select "TechniSat Viola" from the list.
3. Once paired, the Bluetooth icon on the radio's display will stop flashing. You can now stream audio from your device.
4. **Hands-free Calling:** When a call comes in while connected via Bluetooth, press the **Volume/Selector Knob** to answer. Speak into the radio's microphone (MIC). Press the knob again to end the call.

4. Kitchen Timer Function

The radio includes a convenient kitchen timer.

1. Press the **TIMER** button. The timer display will activate.
2. Rotate the **Volume/Selector Knob** to set the desired countdown time.
3. Press the **TIMER** button again to start the countdown.

4. An audible alert will sound when the timer reaches zero. Press any button to stop the alert.

5. Alarm Clock and Snooze

1. **Setting the Time:** Press and hold the **MODE** button to enter time setting mode. Use the **Volume/Selector Knob** to adjust hours and minutes, pressing **MODE** to confirm each setting.
2. **Setting the Alarm:** Press and hold the **ALARM** button. Use the **Volume/Selector Knob** to set the alarm time, pressing **ALARM** to confirm. You can also select the alarm source (e.g., FM radio or buzzer).
3. **Activating/Deactivating Alarm:** Briefly press the **ALARM** button to toggle the alarm on or off. An alarm icon will appear/disappear on the display.
4. **Snooze Function:** When the alarm sounds, press the **SNOOZE** button to temporarily pause the alarm for a few minutes.

6. LED Work Light



Bluetooth-Audiostreaming & Freisprecheinrichtung

Lieblingsmusik ganz einfach via Bluetooth von dem Smartphone oder Tablet streamen.

Die Freisprecheinrichtung ermöglicht, Anrufe entgegenzunehmen, ohne das Smartphone in die Hand nehmen zu müssen.

Image: The TechniSat Viola radio with its practical LED lighting activated, illuminating the area beneath it, suitable for use as a work light.

Press the **LIGHT** button to turn the integrated LED work light on or off. This light can provide illumination for your workspace.

MAINTENANCE

Cleaning

To clean the radio, wipe the surface with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth. Do not use abrasive cleaners, solvents, or strong detergents, as these can damage the finish.

General Care

- Avoid placing heavy objects on top of the radio.
- Keep the radio away from direct heat sources and extreme temperatures.
- Ensure the antenna is not bent or damaged.

TROUBLESHOOTING

If you encounter issues with your TechniSat Viola radio, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected; power outlet not active.	Check power adapter connection; try a different outlet.
Poor FM reception	Antenna not extended or positioned correctly; interference.	Extend and adjust the whip antenna; move the radio away from other electronic devices.
Bluetooth not pairing	Radio not in pairing mode; device too far; Bluetooth already connected to another device.	Ensure radio is in BT mode and flashing; bring devices closer; disconnect from other devices.
No sound from speakers	Volume too low; mute activated; incorrect mode selected.	Increase volume; check if mute is active; ensure correct mode (FM/BT) is selected.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Brand:** TechniSat
- **Model:** 0001/2932
- **Dimensions (Product):** 21.2 cm (L) x 12.1 cm (W) x 4.2 cm (H)
- **Weight:** 518 g
- **Speaker Output:** 5 W
- **Tuner Technology:** FM
- **Connectivity:** Bluetooth 5
- **Power Source:** Wired Electric (230 Volts, 50 Hz)
- **Display Type:** LED
- **Material:** Plastic, Aluminum

- **Special Features:** External antenna connector, Aluminum volume/selector knob, Direct access timer button, Under-cabinet or standalone use, Bluetooth audio streaming, Hands-free function, Alarm, Sleep function, Snooze function, Automatic shutdown, Integrated LED work light.

WARRANTY AND SUPPORT

Your TechniSat Viola Kitchen Radio comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, service, or warranty claims, please contact TechniSat customer service through their official website or the contact information provided in your warranty documentation.