



Please read all instructions carefully before using the kapebow LEST-C2 Steam Cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Always plug the appliance into a grounded outlet. Do not use with damaged cords or plugs. Keep the power cord away from heated surfaces.
- **Hot Steam Hazard:** The steam produced is extremely hot (up to 100°C / 212°F). Never direct steam at people, pets, or electrical appliances. Use caution to avoid burns.
- **Water Tank:** Only fill the water tank with clean tap water. Do not add detergents, chemicals, or aromatic oils to the water tank, as this can damage the appliance or create hazardous fumes.
- **Supervision:** This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
- **Maintenance:** Unplug the appliance from the power outlet before cleaning or performing any maintenance. Allow the unit to cool completely before storing.
- **Storage:** Store the appliance indoors in a cool, dry place when not in use.



## Chemical-Free & Odorless Cleaning

Safety for children, elders and pets

Image: A woman using the steam cleaner to clean a teddy bear, with a child and a dog nearby, illustrating the chemical-free and safe cleaning aspect of the product.

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.



Image: A visual guide displaying the main steam cleaner unit and 17 numbered accessories, including various brushes, nozzles, and cleaning tools.

1. Main Steam Cleaner Unit
2. Brass Brush
3. Small Nylon Brush
4. Small Shovel
5. Wide Shovel
6. Large Nylon Brush
7. Small Scraper
8. High-Pressure Nozzle
9. Glass Scraper
10. Silicone Funnel
11. Steel Wool Ball

12. Cleaning Cloth Sleeve
13. Cleaning Pin
14. Silicone Ring
15. Cleaning Gloves (Pair)
16. Cleaning Sponge (2 pcs)
17. Cleaning Cloth
18. Storage Bag

### 3. PRODUCT OVERVIEW

---

The kapebow LEST-C2 Steam Cleaner is designed for versatile and efficient cleaning across various surfaces. It features a 4 Bar high-pressure steam output and a rapid 15-second heat-up time.

- **High Pressure:** Delivers 4 Bar steam pressure for effective dirt and grime removal.
- **Fast Heat-Up:** Ready to use in approximately 15 seconds.
- **Large Water Tank:** Equipped with a 42.7 oz (1.26 L) capacity tank for extended cleaning sessions without frequent refills.
- **Adjustable Steam:** Offers 6 levels of steam intensity to suit different cleaning tasks and surfaces.
- **Extended Reach:** Features a 7ft (2m) steam hose and a 5ft (1.5m) power cord for improved maneuverability.



Image: A person using the steam cleaner to clean a gas stove, with an inset showing a 'before' image of a dirty stove and an 'after' image of a clean stove, highlighting the 15-second instant heating and cleaning effectiveness.

# 42.7OZ Large Capacity Water Tank



Image: A woman cleaning a sofa with the steam cleaner, emphasizing the 42.7 oz large capacity water tank and features like visual water scale, fewer refills, fast heating, and high pressure.

## 6 Levels Adjustable Steam



Image: A visual representation of the steam cleaner's nozzle emitting steam at 6 different intensity levels, demonstrating the adjustable steam feature. Also shows examples of use in a bathroom.

# Extended Steam Tube & Power Cord

## Easy To Reach Every Corner



Image: A woman cleaning a carpet with the steam cleaner, illustrating the extended 7ft steam tube and 5ft power cord for easy reach.

## 4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Water Tank:** Open the water tank cap. Using the provided silicone funnel, slowly pour clean tap water into the tank. Do not exceed the maximum fill line. Close the cap securely.
3. **Attach Hose and Nozzle:** Connect the steam hose to the main unit by aligning the connectors and twisting until secure. Select the desired cleaning attachment (e.g., high-pressure nozzle, brush) and attach it to the end of the steam hose.
4. **Connect Power:** Plug the power cord into a grounded electrical outlet (110V AC).

## 5. OPERATING INSTRUCTIONS

1. **Power On:** Press the power button on the main unit. The indicator light will illuminate, signaling that the unit is heating up.
2. **Wait for Heat-Up:** The unit will heat up in approximately 15 seconds. Once ready, the indicator light

may change color or turn off, depending on the model.

3. **Adjust Steam Level:** Use the '+' and '-' buttons on the control panel to select one of the 6 available steam levels. Start with a lower setting and increase as needed.
4. **Begin Cleaning:** Direct the steam nozzle towards the surface to be cleaned. Hold the nozzle a few inches away from the surface for general cleaning, or closer for stubborn stains. Move the nozzle slowly and steadily.
5. **Using Attachments:** Different attachments are designed for specific tasks:
  - **Brass Brush:** Ideal for stove tops, sinks, and tough metal stains.
  - **Nylon Brush:** Suitable for walls, range hoods, and general scrubbing.
  - **Shovel/Scraper:** Effective for furniture, fabric, surfaces, and glass.
  - **Window Scraper:** For streak-free cleaning of windows and mirrors.
6. **Refilling Water:** If steam output decreases or stops, the water tank may be empty. Turn off the unit, unplug it, and allow it to cool for a few minutes before refilling.
7. **Power Off:** After cleaning, press the power button to turn off the unit. Unplug the power cord from the outlet.



Image: A collage showing various attachments (shovel, brass brush, nylon brush, scraper) and their applications for different cleaning tasks, including before and after examples on various surfaces.



Image: A series of images demonstrating the steam cleaner being used for kitchen cleaning, including inside an oven, on a stovetop, and on a range hood.

# Multi-Purpose Cleaning For Whole Home

**Shovel:**  
Ideal for: Furniture/Fabric/Surface



**Before**

**After**

**Brass Brush:**  
Ideal for: Stove Tops/Sinks /Tough Metal Stains



**Before**

**After**

**Nylon Brush:**  
Ideal for: Wall/Range Hoods



**Before**

**After**

**Scraper:**  
Ideal for: Glass



**Before**

**After**

Image: A series of images showing the steam cleaner being used for fabric cleaning, such as curtains, a sofa, and a carpet.



Image: A series of images illustrating the steam cleaner's use for car cleaning, including a steering wheel, car seat, and exterior windows.



Image: A series of images depicting the steam cleaner in use for general home cleaning, such as floors, walls, and tables.



Image: A series of images showing the steam cleaner being used for bathroom cleaning, including bathtubs, sinks, and tiled walls.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your steam cleaner.

- **Empty Water Tank:** After each use, ensure the unit is cool, then carefully open the water tank cap and drain any remaining water.
- **Clean Attachments:** Remove attachments and rinse them with water. For stubborn residue, use a mild soap and water solution. Ensure they are dry before storing.
- **Descaling:** Over time, mineral deposits may accumulate in the water tank and heating element. If you notice reduced steam output or unusual noises, descaling may be necessary. Consult the manufacturer's website or customer support for specific descaling instructions.
- **Exterior Cleaning:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the steam cleaner and all accessories in a clean, dry place, away from direct sunlight and extreme temperatures. Use the provided storage bag for accessories.

## 7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No steam or low steam output	Water tank is empty; Unit not heated sufficiently; Mineral buildup.	Refill water tank; Allow 15 seconds for heat-up; Perform descaling.
Steam is cold or mostly mist	Unit not fully heated; Insufficient water in tank; Incorrect steam level.	Ensure unit has completed the 15-second heat-up cycle; Check water level and refill if necessary; Increase steam level using '+' button.

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Water leaking from nozzle	Attachment not securely fastened; Condensation buildup.	Ensure all attachments are securely twisted into place; This can be normal during initial heat-up or if the unit is held at an angle.
Unit does not power on	Not plugged in; Power outlet issue.	Check power cord connection; Try a different electrical outlet.

## 8. SPECIFICATIONS

<b>Feature</b>	<b>Detail</b>
Brand	kapebow
Model Name	LEST-C2
Wattage	1500 watts
Voltage	110 Volts (AC)
Heat Time	15 Seconds
Maximum Temperature	100 Degrees Celsius (212°F)
Steam Pressure	4 Bar
Tank Capacity	42.7 oz (approx. 1.26 Liters)
Item Weight	5 Pounds
Item Display Dimensions	9.5 x 5 inches (main unit)
Hose Length	7 ft (2m)
Power Cord Length	5 ft (1.5m)
Included Components	Cleaning Pad, Grout Brush, Hose, Nozzle, User Manual, 18 pcs Accessories

## 9. WARRANTY AND SUPPORT

The kapebow LEST-C2 Steam Cleaner comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, warranty claims, or any questions regarding your product, please contact kapebow customer service through the retailer where the product was purchased or visit the official kapebow website for contact information.

Please have your model number (LEST-C2) and purchase date available when contacting support.

