

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TechniSat](#) /

› [TechniSat Viola 0000/2932 Under-Cabinet Kitchen Radio User Manual](#)

## TechniSat Viola 0000/2932

# TechniSat Viola 0000/2932 Under-Cabinet Kitchen Radio User Manual

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the safe and efficient operation of your TechniSat Viola under-cabinet kitchen radio. Please read this manual thoroughly before using the device and retain it for future reference. This device combines modern design with practical features for your kitchen or bedroom.

## 2. SAFETY INFORMATION

---

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury.

- Do not expose the device to rain or moisture.
- Do not open the casing. Refer all servicing to qualified personnel.
- Ensure the power supply voltage matches the requirements specified on the device.
- Avoid placing the device near heat sources or in direct sunlight.
- Keep out of reach of children.

## 3. PACKAGE CONTENTS

---

The TechniSat Viola kitchen radio package includes the following items:

- TechniSat Viola Kitchen Radio (Anthracite)
- Loop Antenna
- Power Adapter
- Mounting Accessories
- User Manual

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the components and controls of your TechniSat Viola radio.



**Figure 1:** Front panel of the TechniSat Viola radio. This image displays the front panel of the TechniSat Viola radio, showing the LED display, control buttons (LIGHT, MODE/RESET, MEM/PRE, TUN-/K, TUN+/I, ALARM, TIMER), power button, and the volume/snooze knob. The TechniSat logo is visible on the left.

### Control Panel Layout:

- **Power Button:** Turns the device on or off.
- **LED Display:** Shows time, frequency, and mode information.
- **LIGHT Button:** Activates the integrated LED work light.
- **MODE/RESET Button:** Switches between operating modes and resets settings.
- **MEM/PRE Button:** Stores and recalls radio station presets.
- **TUN-/K and TUN+/I Buttons:** Adjusts tuning frequency or navigates tracks.
- **ALARM Button:** Sets and manages alarm functions.
- **TIMER Button:** Accesses and controls the cooking timer.
- **Volume/Snooze Knob:** Adjusts volume; press for snooze function.
- **MIC:** Microphone for hands-free function.

## 5. SETUP

Follow these steps to set up your TechniSat Viola radio:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Antenna Connection:** Connect the provided loop antenna to the external antenna port on the back of the radio. Position the antenna for optimal reception.
3. **Power Connection:** Connect the power adapter to the DC input port on the radio and then plug the adapter into a standard electrical outlet.
4. **Placement/Mounting:** Decide whether to use the radio as a standalone unit on a flat surface or mount it under a cabinet. Use the provided mounting accessories for under-cabinet installation, ensuring it is securely fastened.
5. **Initial Power On:** Press the Power button to turn on the radio. The LED display will illuminate.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Radio Operation (FM)

1. **Select FM Mode:** Press the **MODE/RESET** button until 'FM' is displayed.
2. **Manual Tuning:** Use the **TUN-/K** or **TUN+/I** buttons to manually adjust the frequency.
3. **Automatic Scan (AMS):** Press and hold the **MEM/PRE** button to automatically scan and store available FM stations. The radio supports up to 40 favorite memory slots.
4. **Recall Presets:** Briefly press the **MEM/PRE** button to cycle through stored stations.

### 6.2. Bluetooth Functionality

The integrated Bluetooth receiver allows you to stream audio wirelessly from your smartphone or tablet.

1. **Enter Bluetooth Mode:** Press the **MODE/RESET** button until 'BT' is displayed. The radio will enter pairing mode, indicated by a flashing Bluetooth icon.
2. **Pairing:** On your smartphone or tablet, enable Bluetooth and search for available devices. Select 'TechniSat Viola' from the list.
3. **Audio Streaming:** Once paired, you can play music from your device, and the audio will be streamed through the radio's speakers.
4. **Hands-Free Calling:** When a call comes in while connected via Bluetooth, you can answer it using the radio's controls and speak through the built-in microphone (MIC).

### 6.3. Timer Function

The radio features a convenient cooking timer.

- **Set Timer:** Press the **TIMER** button to access the timer settings. Use the **TUN-/K** or **TUN+/I** buttons to adjust the desired countdown time.
- **Start/Stop Timer:** Press the **TIMER** button again to start or pause the countdown.

### 6.4. Alarm and Snooze

Utilize the alarm functions for daily reminders or wake-up calls.

- **Set Alarm:** Press the **ALARM** button to enter alarm setup. Use the **TUN-/K** or **TUN+/I** buttons to set the alarm time and select the alarm source (e.g., radio or buzzer).
- **Activate/Deactivate Alarm:** Press the **ALARM** button repeatedly to toggle the alarm on or off.
- **Snooze Function:** When the alarm sounds, press the **Volume/Snooze Knob** to activate the snooze function, pausing the alarm for a short period.

### 6.5. LED Work/Night Light

The integrated LED lighting can serve as a work light or a subtle night light.

- **Activate Light:** Press the **LIGHT** button to turn on the LED light.
- **Adjust/Deactivate Light:** Press the **LIGHT** button again to cycle through brightness levels or turn off the light.

## 7. MAINTENANCE

Proper care ensures the longevity of your TechniSat Viola radio.

- **Cleaning:** Clean the radio with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the surface.
- **Power Disconnection:** Always unplug the device from the power outlet before cleaning or if it will not be used for an extended period.
- **Ventilation:** Ensure that the ventilation openings are not blocked to prevent overheating.

## 8. TROUBLESHOOTING

If you encounter issues with your radio, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power / Device does not turn on	Power adapter not connected or faulty outlet.	Check if the power adapter is securely plugged into the radio and a working electrical outlet. Try a different outlet.
No sound	Volume too low; incorrect audio source selected.	Increase the volume using the knob. Ensure the correct mode (FM, Bluetooth) is selected.
Poor radio reception	Antenna not properly positioned or connected; weak signal.	Adjust the position of the loop antenna. Ensure it is fully connected. Try moving the radio to a different location.
Bluetooth not connecting	Radio not in pairing mode; device too far; Bluetooth off on smartphone.	Ensure the radio is in Bluetooth pairing mode. Keep your smartphone within range. Check Bluetooth settings on your smartphone.

## 9. SPECIFICATIONS

Key technical specifications for the TechniSat Viola 0000/2932 radio:

Feature	Detail
Brand	TechniSat
Model Number	0000/2932
Color	Anthracite
Connectivity Technology	Bluetooth

Feature	Detail
Special Features	Timer control via direct selection button, External antenna connection, Under-cabinet or standalone use, Aluminum volume/selection control, Bluetooth audio streaming, Alarm, Sleep, Snooze, LED work/night light
Compatible Devices	Smartphone
Power Source	Electric cable
Supported Radio Bands	FM
Tuning Technology	FM
Product Dimensions (L x W x H)	21.2 cm x 12.1 cm x 4.2 cm
Manufacturer	TechniSat
Country of Origin	China

## 10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact TechniSat customer service directly. Specific details regarding spare parts availability and software updates are not provided in this manual.