

[Manuals.plus](#) /

› [KOKODI](#) /

› KOKODI PH15 4-Inch Kids Smart Phone Instruction Manual

KOKODI PH15

KOKODI PH15 4-Inch Kids Smart Phone Instruction Manual

Model: PH15

1. INTRODUCTION

The KOKODI PH15 4-inch Kids Smart Phone is designed as an educational and entertainment device for children aged 3-10. It features a touchscreen, dual HD cameras, and a variety of pre-installed learning games and applications. This manual provides essential information for setup, operation, maintenance, and troubleshooting.



Figure 1: KOKODI PH15 Kids Smart Phone (Pink Unicorn Design)

2. SETUP

2.1 What's in the Box

- KOKODI PH15 Kids Smart Phone
- Protective Silicone Case
- Charging Cable
- User Manual

2.2 Charging the Device

Before first use, fully charge the device. Connect the provided charging cable to the phone's charging port and a compatible USB power adapter (not included). The battery indicator on the screen will show charging status. A full charge typically takes approximately 2-3 hours.

2.3 Power On/Off

- **To Power On:** Press and hold the power button located on the side of the device until the screen illuminates.
- **To Power Off:** Press and hold the power button until a power-off menu appears on the screen. Select 'Power Off' and confirm.

2.4 Initial Setup

Upon first power-on, follow the on-screen prompts to set up the device. This may include language selection and creating a user profile for the child. The device is designed for immediate use with pre-installed content.

3. OPERATING INSTRUCTIONS

3.1 Navigating the Interface

The KOKODI PH15 features a responsive touchscreen. Swipe left or right to browse through different application pages. Tap on an icon to launch an application. Use the home button (if present) or back arrow on the screen to return to the main menu or previous screen.

3.2 Applications and Features

The device comes pre-loaded with over 200 educational and entertainment applications.

- **Learning Games:** Includes categories such as Story (5 games), Montessori (96 games), First Learning (55 games), Brain Training (15 games), STEM (19 games), and Art and Craft (39 games).
- **Camera:** Utilize the HD dual cameras for taking photos and recording videos.
- **Gallery:** View and manage captured photos and videos.
- **Music:** Play pre-loaded music or user-added audio files.
- **Video:** Play pre-loaded video content.
- **Calculator:** A basic calculator for mathematical exercises.
- **Flashlight:** Access the device's built-in flashlight function.
- **Sound Recorder:** Record audio clips.
- **AR Zoo:** An augmented reality feature for interactive animal experiences.
- **Themes:** Customize the device's visual interface.

First Electronic Educational Phone for Kids

More than just a phone toy – every tap brings growth for little learner.



Story
5 Games



Brain Training
15 Games



Montessori
96 Games



STEM
19 Games



First Learning
55 Games



Art and Craft
39 Games

Figure 2: Educational Applications Interface

3.3 Using the Camera

The KOKODI PH15 is equipped with dual HD cameras. To use the camera, tap the 'Camera' icon on the home screen. You can switch between front and rear cameras, take photos, and record videos. Saved media can be accessed in the 'Gallery' application.

Upgraded Kids Phone with Android system



Superior imaging effects,
super fluid operation
experience

Figure 3: Using the Dual Camera

3.4 Parental Control Management

The device includes parental control features to manage screen time and accessible applications. Access the parental control settings to:

- Set a password for parental access.
- Select which applications are available to the child.
- Set daily time limits for device usage.



Figure 4: Parental Control Interface

4. MAINTENANCE

4.1 Cleaning the Device

Use a soft, dry, lint-free cloth to clean the screen and exterior of the device. Avoid using abrasive cleaners, solvents, or aerosol sprays, which may damage the device. Do not expose the device to excessive moisture.

4.2 Battery Care

The device contains a rechargeable Lithium-Ion battery. To prolong battery life:

- Avoid extreme temperatures.

- Do not leave the device fully discharged for extended periods.
- Use only the provided charging cable.

4.3 Storage

When not in use for extended periods, store the device in a cool, dry place. Keep the device away from fire and direct heat sources.

5. TROUBLESHOOTING

If you encounter issues with your KOKODI PH15, refer to the following common solutions:

- **Device not turning on:** Ensure the battery is charged. Connect the device to a charger and attempt to power on after a few minutes.
- **Screen unresponsive:** Restart the device by holding the power button. If unresponsive, allow the battery to fully drain and then recharge.
- **Applications not loading:** Ensure sufficient storage space. Try restarting the device.
- **Poor camera quality:** Ensure the camera lens is clean and free from smudges.

For persistent issues, contact customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	PH15
Product Dimensions	4.53 x 2.56 x 0.71 inches
Item Weight	11.3 ounces
Screen Size	4 inches
Battery	2000mAh Lithium Ion (included)
Cameras	HD Dual Camera
Recommended Age	36 months - 10 years
Manufacturer	Shenzhen Chenghe Technology Co., Ltd.

Multi-functional Kids Phone

2000mAh

2000mAh rechargeable battery
(the market's largest capacities)
ensures extended use of kids phone.

4.0
INCH
2000mAh



Music



Alarm Clock



Stopwatch



Calculator



Calendar



AR Zoo

Figure 5: KOKODI PH15 Key Features

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Please refer to the product packaging or the manufacturer's official website for specific warranty details and terms. Keep your proof of purchase for warranty claims.

7.2 Customer Support

For further assistance, technical support, or inquiries, please contact KOKODI customer service through their official channels. Contact information can typically be found on the product packaging or the brand's website.

