

## Fitifun M10

# Fitifun M10 10.1-inch Android 13 Tablet User Manual

Model: M10

[Introduction](#)   [Product Overview](#)   [Setup](#)   [Operating](#)  
[Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the Fitifun M10 Android 13 Tablet. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully to ensure optimal performance and longevity of your tablet.

## 2. PRODUCT OVERVIEW

### 2.1 Key Features

- **Operating System:** Android 13 with GMS Certification for access to Google Play Store.
- **Processor:** Powerful Quad-Core processor for efficient multitasking.
- **Display:** 10.1-inch IPS HD screen with 1280x800 resolution and 16:10 aspect ratio.
- **Memory & Storage:** 4GB RAM (2GB physical + 2GB virtual) and 64GB internal storage, expandable up to 1TB via SD card.
- **Battery:** 6000mAh large capacity battery for extended usage.
- **Cameras:** 2MP front camera and 8MP rear camera.
- **Connectivity:** Supports 5G/2.4G dual-band Wi-Fi 6 and Bluetooth 5.0.
- **Audio:** Dual speakers for an enhanced audio experience.

### 2.2 Tablet Components

Familiarize yourself with the physical components of your Fitifun M10 tablet.

# Newest Android Tablet, More Efficient, More Convenient



Android 13



10.1 inch Display



4GB RAM



64GB ROM



Bluetooth 5.0



WiFi



Dual Camera



6000mAh



Image: The Fitifun M10 tablet shown with its charger, USB-C cable, keyboard, and mouse, highlighting its Android 13 OS, 10.1-inch display, 4GB RAM, 64GB ROM, Bluetooth 5.0, Wi-Fi, dual cameras, and 6000mAh battery.

# Android 13 & GMS Certified



  
Android 13  
Latest os

  
GMS  
Certified

  
Google Play  
Millions of apps


  
Quad-core  
processor

Image: A visual representation of the tablet's Android 13 operating system, GMS certification, and quad-core processor, surrounded by icons of popular applications available through Google Play.

## 3. SETUP

### 3.1 Initial Charging

Before first use, fully charge your tablet. Use the provided Type-C USB cable and power adapter.

1. Connect the Type-C end of the cable to the tablet's charging port.
2. Connect the USB-A end to the power adapter, then plug the adapter into a wall outlet.

3. The battery indicator on the screen will show charging status.

## Long Lasting Battery

Type-c charging port for fast charging, so you can stay online all day without worry.



4hrs  
Game



5hrs  
HD video



6hrs  
Website browse



8hrs  
Music



72hrs  
Standby



Type-C  
Convenient



Image: The tablet being charged via its Type-C port, illustrating its 6000mAh battery capacity and estimated usage times for gaming, HD video, web browsing, and music playback.

### 3.2 Powering On/Off

1. **To Power On:** Press and hold the Power button until the Fitifun logo appears.
2. **To Power Off:** Press and hold the Power button, then select "Power off" from the options on the screen.
3. **To Restart:** Press and hold the Power button, then select "Restart" from the options.

### 3.3 Initial Setup Wizard

Upon first power-on, follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, Google account login, and security settings.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Touchscreen Gestures

- **Tap:** Select an item or open an application.
- **Tap & Hold:** Access contextual menus or move items.
- **Swipe:** Scroll through screens or lists.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.

### 4.2 Wi-Fi Connection

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired network from the list and enter the password if prompted.

### 4.3 Camera Usage

Your tablet is equipped with a 2MP front camera and an 8MP rear camera.

1. Open the **Camera** application.
2. Tap the camera icon to switch between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.

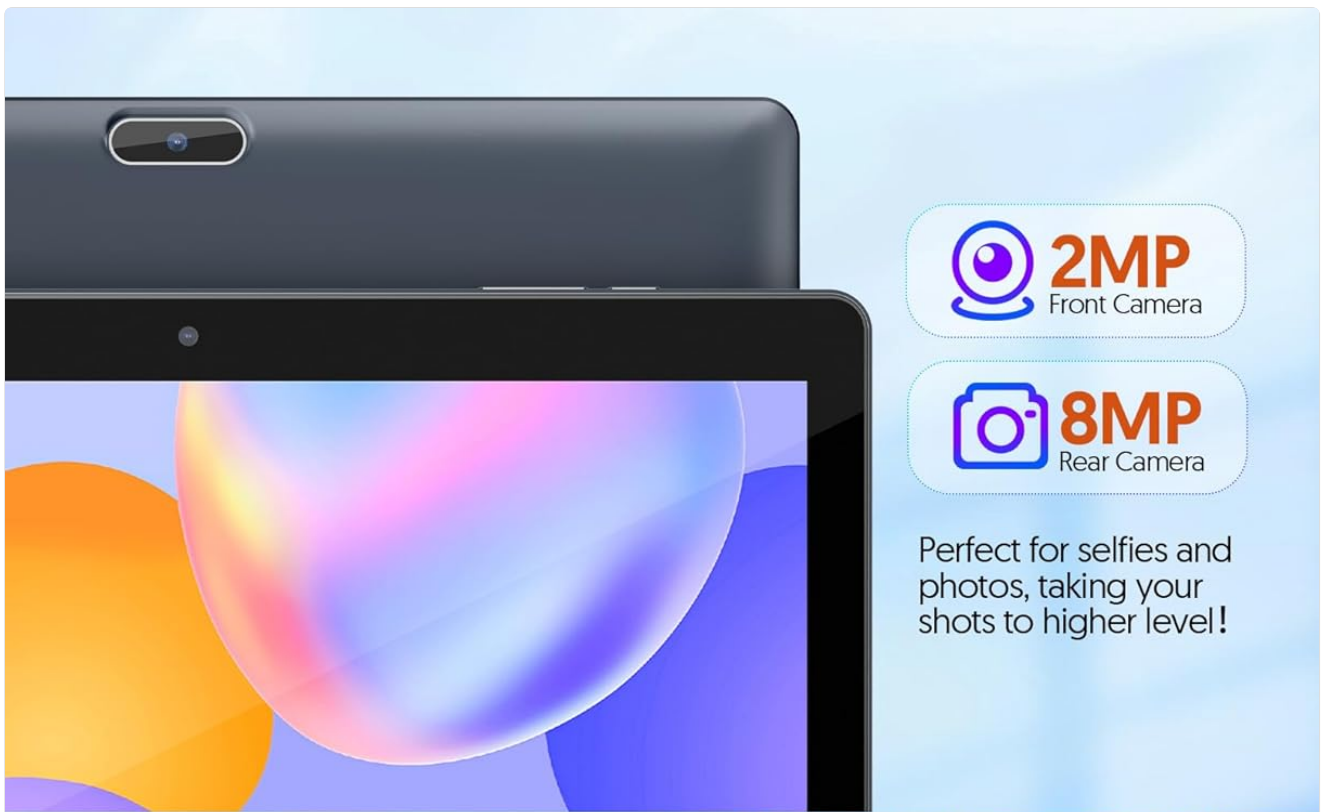


Image: Close-up view of the tablet's 2MP front and 8MP rear cameras, accompanied by example photographs demonstrating their capabilities.

## 4.4 Storage Management

The tablet comes with 64GB of internal storage, expandable up to 1TB using a microSD card.

1. To insert a microSD card, locate the card slot on the side of the tablet and gently push the card in until it clicks.
2. Manage storage by going to **Settings > Storage**. Here you can view usage and format the SD card.

# 4GB+64GB Large Capacity Combo

Tablet supports 1 TB SD card expansion, allowing you to store mass photos and videos

 **4(2+2)GB**  
RAM

 **64GB**  
ROM

 **1TB**  
SD Expandable



Image: The tablet's display showing its 4GB RAM, 64GB ROM, and the option for 1TB SD card expansion, with various media content displayed in the background.

## 4.5 Connecting External Devices (Keyboard/Mouse)

The tablet supports Bluetooth 5.0 for connecting wireless accessories like keyboards and mice.

1. Ensure your Bluetooth accessory is in pairing mode.
2. Go to **Settings > Connected devices > Bluetooth**.
3. Toggle Bluetooth **On** and select your device from the list to pair.



Image: A user interacting with the Fitifun M10 tablet, which is connected to an external Bluetooth keyboard and mouse, demonstrating its versatility for productivity tasks.

## 5. MAINTENANCE

### 5.1 Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

## 5.2 Battery Care

- Avoid exposing the tablet to extreme temperatures (hot or cold).
- Do not allow the battery to fully discharge frequently. Charge it before it drops below 20%.
- Use only the original charger and cable or certified replacements.

## 6. TROUBLESHOOTING

---

### 6.1 Common Issues and Solutions

Issue	Possible Solution
Tablet won't turn on	Ensure the battery is charged. Connect to charger for at least 30 minutes. Try a forced restart by holding the power button for 10-15 seconds.
Screen is unresponsive	Restart the tablet. If issue persists, perform a factory reset (data will be lost).
Wi-Fi connection issues	Restart the tablet and your Wi-Fi router. Forget the network in settings and reconnect. Ensure you are within range.
Apps crashing or freezing	Clear the app's cache and data in Settings > Apps. Update the app. If problem persists, uninstall and reinstall the app.
Slow performance	Close unnecessary background apps. Clear cache. Free up storage space. Restart the tablet regularly.

## 7. SPECIFICATIONS

---

## 10.1 Inch IPS HD Screen



10.1"  
HD Screen



1280x800  
FHD Resolution



16:10  
Aspect ratio



Image: The tablet's screen showcasing its 10.1-inch IPS HD display, 1280x800 FHD resolution, and 16:10 aspect ratio.

Feature	Detail
Model Name	M10
Operating System	Android 13
Screen Size	10.1 Inches
Max Screen Resolution	1280 x 800 Pixels (IPS HD)

Feature	Detail
Processor	Quad-Core Processor (Intel Processor Brand mentioned in specs, Adreno 540 Graphics Coprocessor)
RAM	4GB (2GB physical + 2GB virtual)
Internal Storage	64GB
Expandable Storage	Up to 1TB via microSD card
Battery Capacity	6000mAh
Front Camera	2MP
Rear Camera	8MP
Wi-Fi Support	5G/2.4G Dual-band Wi-Fi 6
Bluetooth	Bluetooth 5.0
Charging Port	Type-C USB
Item Weight	2.75 pounds
Product Dimensions	30 x 30 x 6 inches

## 8. WARRANTY & SUPPORT

Your Fitifun M10 tablet comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty duration and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact Fitifun customer service through the contact information provided in your product documentation or visit the official Fitifun website.