

[Manuals.plus](#) /

› [Dpofirs](#) /

› Dpofirs Mini Keychain Camera 1080P HD Instruction Manual

Dpofirs Mini Keychain Camera

Dpofirs Mini Keychain Camera 1080P HD Instruction Manual

Model: Mini Keychain Camera

INTRODUCTION

This manual provides detailed instructions for the Dpofirs Mini Keychain Camera, a compact 1080P HD digital camera designed for portable video recording and photography. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its features.



Image: Front view of the Dpofirs Mini Keychain Camera, showcasing its retro design with a green body and silver accents. The lens is prominent, indicating 1920x1080P resolution.

PACKAGE CONTENTS

Upon unboxing, please verify that all items listed below are included:

- 1 x Dpofirs Mini Keychain Camera
- 1 x Chain Necklace
- 1 x Keychain
- 1 x Instruction Manual (this document)

SETUP

1. Inserting a Memory Card

The camera requires a memory card (not included) for storing photos and videos. It supports up to a 128GB memory card.

1. Locate the memory card slot on the side of the camera.
2. Gently insert the memory card into the slot until it clicks into place. Ensure the card is oriented correctly.



Image: Side view of the camera, highlighting the memory card slot and the Type-C charging port.

2. Charging the Battery

The camera has a built-in 180mAh high-capacity lithium battery. Use the Type-C interface for charging.

- Connect the camera to a power source using a Type-C USB cable (not included).
- The camera can record while charging.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on: Press and hold the top key.
- To power off: Press and hold the top key again.

2. Navigating Menus and Modes

The camera features a colorful screen for real-time monitoring and easy navigation with three keys.

1. After turning on, click the **up key** to select the menu.
2. You can choose from **photo**, **video**, or **gallery** modes.



Image: Angled back view of the camera, displaying the screen and the control buttons on the side.

3. Taking Photos and Recording Videos

- To start taking photos or recording videos: Press the **shutter key**.
- To mute: Press and hold the **up key**.
- To switch photography effects: Press the **down key**.
- To turn on the flash: Long press the **down key**. The camera is equipped with a flash light for low light conditions.



Keychain Digital Camera
1080P high definition
Premium lenses, make the photographed
images more vivid and rich in color.

Anti loss accessory
With a hanging chain to hang the camera
around your neck. Or fix it on the keychain

Record life
Suitable for scenarios such as life records,
festival celebrations, and study records



Image: The Dpofirs Mini Keychain Camera shown alongside text highlighting its 1080P high-definition capabilities, premium lenses for vivid colors, and its suitability for recording daily life, celebrations, and study sessions.

4. Portability and Anti-Loss Features

The camera is designed for easy portability and includes accessories to prevent loss.

- Use the included chain necklace to wear the camera around your neck.
- Attach the camera securely to a keychain using the provided accessory.

Anti Loss Accessories

Includes a convenient chain for easy portability, allowing you to hang the small keychain camera around your neck or securely attach it to a keychain, ensuring you have it on hand and reducing the risk of loss.



Image: Back view of the camera, emphasizing its anti-loss features and showing the attachment points for a chain or keychain.



Image: A person wearing the Dpofirs Mini Keychain Camera as a necklace, demonstrating its portability.



Image: The Dpofirs Mini Keychain Camera attached to a set of keys, illustrating its use as a keychain accessory.

MAINTENANCE

- Keep the camera clean by wiping it with a soft, dry cloth.
- Avoid exposing the camera to extreme temperatures, moisture, or direct sunlight for prolonged periods.
- Ensure the memory card slot and Type-C port are free from dust and debris.
- Store the camera in a safe place when not in use to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Low battery or no charge.	Charge the camera using a Type-C cable. Ensure the cable and power source are functional.

Problem	Possible Cause	Solution
Cannot record photos/videos.	No memory card inserted or card is full/corrupted.	Insert a compatible memory card (up to 128GB). Check if the card is full and delete unnecessary files, or try a different card.
Poor image/video quality.	Insufficient lighting, dirty lens, or incorrect settings.	Ensure adequate lighting. Clean the lens gently with a soft cloth. Check if flash is enabled in low light.
Camera freezes or becomes unresponsive.	Software glitch or temporary error.	Press and hold the power button to force a shutdown, then restart the camera.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact Dpofirs customer support.

SPECIFICATIONS

Item Type	Keychain Digital Camera
Material	ABS
Pixel	2 MP
Lens Angle	70°
Video Compression Format	AVI
Video Resolution	1920x1080P (Maximum)
Aspect Ratio	4:3
Image Format	JPG
Battery Type	Built-in high capacity Li battery
Battery Capacity	180mAh
Operating Time	Approximately 100 minutes
Storage Support	Up to 128GB Memory Card (Not included)
Interface Type	Type-C
Support Systems	Windows, OS X, Linux
Playback Software	System built-in or mainstream media player
Zoom Support	No



Image: Diagram showing the dimensions of the Dpofirs Mini Keychain Camera: 38mm (1.5 inches) in width and 27mm (1.06 inches) in height.

WARRANTY INFORMATION

This Dpofirs Mini Keychain Camera comes with a manufacturer's warranty for **90 days** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized modifications.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact Dpofirs customer service. You can also visit the official Dpofirs store for more information and products:

[Visit the Dpofirs Store on Amazon](#)

© 2023 Dpofirs. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FLDYJKD1>

More documents and user manuals: **<https://manuals.plus/>**