

Fastrack 38171PP03

Fastrack Streetstyle 4 Quartz Watch Instruction Manual

Model: 38171PP03

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Fastrack Streetstyle 4 Quartz Watch, model 38171PP03. This analog-digital timepiece combines modern design with practical features, including a stopwatch, dual time display, alarm, and EL backlight. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

SETUP

Identifying Watch Buttons

- **MODE Button:** Used to cycle through different modes (Time, Alarm, Stopwatch, Dual Time).
- **RESET Button:** Used to reset values or exit setting modes.
- **ST/STP Button:** Used to start/stop functions, or adjust settings.
- **LIGHT Button:** Activates the EL backlight.



Figure 1: Front view of the Fastrack Streetstyle 4 watch. This image displays the watch's face, including the analog hands, digital display, and the four control buttons labeled **MODE**, **RESET**, **ST/STP**, and **LIGHT**.

Setting the Time and Date

1. In normal time mode, press the **MODE** button repeatedly until the time setting display flashes (usually seconds).
2. Press the **RESET** button to select the value you wish to adjust (seconds, hour, minute, year, month, day).
3. Use the **ST/STP** button to increase the selected value. Hold it down for faster adjustment.
4. Repeat steps 2 and 3 for all desired settings.
5. Press the **MODE** button to exit the setting mode and return to normal time display.

OPERATING INSTRUCTIONS

Using the Stopwatch

1. Press the **MODE** button until the stopwatch display appears (indicated by 'ST' or 'STOPW').
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to stop the stopwatch.

4. Press the **RESET** button to clear the stopwatch to zero.
5. Press the **MODE** button to return to normal time mode.

Setting the Alarm

1. Press the **MODE** button until the alarm display appears (indicated by 'AL' or 'ALARM').
2. Press the **RESET** button to select the hour or minute digit you wish to adjust.
3. Use the **ST/STP** button to set the desired alarm time.
4. Press the **MODE** button to confirm and exit the alarm setting.
5. To activate/deactivate the alarm, press the **ST/STP** button while in alarm mode. An alarm icon will appear/disappear.

Using the EL Backlight

Press the **LIGHT** button to illuminate the digital display for a few seconds in low-light conditions.



Figure 2: Side view of the Fastrack Streetstyle 4 watch. This image clearly shows the placement of the MODE and RESET buttons on the left, and the ST/STP and LIGHT buttons on the right side of the watch case.

Dual Time Function

Your watch supports a dual time display, allowing you to track a second time zone. To access and set the

dual time:

1. Press the **MODE** button repeatedly until the dual time display appears (indicated by 'DT' or 'DUAL T').
2. Press the **RESET** button to select the hour or minute digit for the second time zone.
3. Use the **ST/STP** button to adjust the desired time for the second zone.
4. Press the **MODE** button to confirm and exit the dual time setting.

MAINTENANCE

Water Resistance

This watch is water resistant up to 100 meters (10 ATM). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. **It is not suitable for swimming, diving, or bathing.** Do not operate buttons while the watch is wet or submerged.



Figure 3: Back view of the Fastrack Streetstyle 4 watch. The stainless steel case back is visible, clearly engraved with the brand name 'Fastrack' and the '100M WATER RESISTANT' marking, confirming its water resistance capabilities.

Cleaning Your Watch

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be

used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish or seals.

Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the display dims or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

- **Watch not functioning:** Check if the battery needs replacement. If recently replaced, ensure it was installed correctly.
- **Incorrect time display:** Re-set the time and date according to the 'Setting the Time and Date' section. Ensure you are in the correct time zone.
- **Digital display is dim or blank:** This typically indicates a low battery. Seek professional battery replacement.
- **Condensation inside the watch:** This suggests a breach in the watch's water resistance. Immediately take the watch to an authorized service center to prevent further damage.

SPECIFICATIONS

Feature	Detail
Model Name	38171PP03
Display Type	Analog-Digital
Movement Type	Quartz
Water Resistance Depth	100 Metres (10 ATM)
Crystal Material	Mineral Glass
Case Material	Acrylonitrile Butadiene Styrene
Band Material	Polyurethane
Case Diameter	51 Millimetres
Case Thickness	17.95 Millimetres
Band Width	30 Millimetres
Clasp Type	Buckle
Special Features	Dual Time, Stopwatch, Alarm, EL Backlight
Item Weight	250 Grams



Figure 4: Size comparison of the Fastrack Streetstyle 4 watch. This image illustrates the watch's dimensions relative to a standard credit card, providing a visual reference for its 51mm case size.

WARRANTY INFORMATION

Your Fastrack Streetstyle 4 Quartz Watch comes with a **One Year Limited Guarantee** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear of the strap or battery.

To claim warranty service, please retain your proof of purchase and contact an authorized Fastrack service center.

SUPPORT

For further assistance, technical support, or service inquiries regarding your Fastrack watch, please visit the official Fastrack website or contact Fastrack customer service. You can find contact details and service center locations on their website.

Manufacturer: Titan Company Limited, Sipcot Industrial Complex, Hosur, Tamil Nadu - 635126

