

Tineco FLOOR ONE S6 Stretch Steam

Tineco FLOOR ONE S6 Stretch Steam Vacuum and Floor Washer User Manual

Model: FLOOR ONE S6 Stretch Steam

1. INTRODUCTION

Thank you for choosing the Tineco FLOOR ONE S6 Stretch Steam Vacuum and Floor Washer. This appliance is designed to provide efficient and thorough cleaning of hard floors using a combination of vacuuming and high-temperature steam washing. Please read this manual carefully before operating the device to ensure safe and optimal performance. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.


- Ensure the power cord is not damaged and is properly connected to a grounded outlet.
- Do not immerse the appliance in water or other liquids.
- Keep hands, hair, and loose clothing away from moving parts.
- Do not use the appliance to pick up flammable or combustible liquids, or anything that is burning or smoking.
- Use only Tineco recommended cleaning solutions.
- Exercise extreme caution when cleaning stairs.
- The steam output is hot; avoid direct contact with skin to prevent burns.
- Unplug the appliance before performing any maintenance or cleaning.
- This appliance is for indoor use only.

3. PRODUCT OVERVIEW

The Tineco FLOOR ONE S6 Stretch Steam is equipped with advanced features for comprehensive floor cleaning.

- **Tineco BoostSteam Technology:** High-pressure steam liquefies stubborn dirt, grease, and deep-seated grime.
- **160°C High-Temperature Steam Cleaning:** Heats steam up to 160°C, ensuring output temperature does not drop below 99°C for effective grease and stain removal.
- **DualBlock Anti-Tangle Design:** Effectively handles hair and pet fur without tangles.
- **180° Flat Design:** A thinner body allows the device to lay flat, reaching under furniture and into low areas (13cm height when fully lowered).
- **Tineco iLoop Smart Sensor:** Detects dirt and automatically adjusts water flow and suction power.
- **One-Touch Self-Cleaning with Steam:** Automated cleaning cycle for the brush roller using steam and heated water, followed by air drying.
- **8.3m Long Cable:** Provides extended reach for uninterrupted cleaning of large areas.
- **Edge Cleaning:** Designed to clean close to baseboards and edges.
- **18000Pa Powerful Suction:** Lifts dirt, debris, and hair from all surfaces.
- **Large Capacity Water Tanks:** 1L clean water tank and 0.72L dirty water tank for longer cleaning sessions.
- **LED Headlight:** Illuminates dark areas under furniture for improved visibility.
- **Quick Dirty Water Disposal:** Easy one-hand removal of the dirty water tank.
- **Upgraded Heat-Resistant Brush Roller:** More durable and less prone to water marks.
- **Bidirectional Rotating Brush Cleaning:** Ensures a cleaner and softer brush, reducing odors.

Cosa è incluso

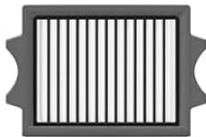

Filtro a secco



Rullo spazzola extra



Vassoio di stoccaggio



Strumento di pulizia



Image: What's Included. This image displays the main unit, an extra brush roller, a dry filter, a storage tray, and a cleaning tool.

4. SETUP

- Unpacking:** Carefully remove all components from the packaging. Retain packaging materials for future storage or transport.
- Handle Assembly:** Insert the handle into the main body of the appliance until it clicks securely into place.

3. **Clean Water Tank Installation:** Remove the clean water tank from the appliance. Fill it with clean tap water up to the MAX line. For enhanced cleaning, you may add a small amount of Tineco cleaning solution (follow solution instructions for dilution). Reinsert the tank securely.
4. **Power Connection:** Unwind the 8.3m power cable and plug it into a suitable grounded electrical outlet.

5. OPERATING INSTRUCTIONS

Before starting, ensure the clean water tank is filled and the dirty water tank is empty.

1. **Power On:** Press the power button located on the handle to turn on the appliance. The LED display will illuminate.
2. **Select Cleaning Mode:** The appliance typically starts in Auto mode. You can switch to BoostSteam mode for tougher stains by pressing the mode button. In BoostSteam mode, the appliance delivers high-temperature steam and increased pressure.
3. **Start Cleaning:** Tilt the main body of the appliance back to engage the brush roller. Begin moving the appliance forward and backward over the floor surface. The iLoop Smart Sensor will detect dirt and adjust cleaning power automatically.
4. **Utilizing 180° Flat Design:** For cleaning under low furniture, gently push the handle down until the main body lies flat. This allows access to tight spaces.
5. **Edge Cleaning:** The appliance is designed for effective edge cleaning. Guide the cleaner along walls and baseboards to clean within 1cm of the edge.
6. **Emptying Dirty Water Tank:** When the dirty water tank is full, the appliance will indicate this. Turn off the appliance, remove the dirty water tank, and dispose of the contents. Rinse the tank with clean water.
7. **Power Off:** Press the power button to turn off the appliance when finished cleaning.

Tecnologia TINECO BoostSteam

Il vapore ad alta pressione elimina le macchie ostinate

2X*

**EFFICIENZA DI
PULIZIA**
nelle fessure del
pavimento



Image: Tineco BoostSteam Technology in action, showing steam being applied to a dirty floor.

160 °C* Vapore ad alta temperatura

Elimina facilmente lo sporco più ostinato

≥ 99 °C**

Temperatura del vapore
in uscita



*Basato sui dati di laboratorio Tineco. 160 °C si riferisce alla temperatura del riscaldatore interno, non a quella del vapore in uscita. Le prestazioni possono variare in base all'ambiente.

** Basato sui dati di laboratorio Tineco, i risultati effettivi

possono variare a seconda dell'ambiente domestico e delle abitudini dell'utente.

Image: High-temperature steam cleaning at 160°C, effectively removing stubborn dirt.

Sensore intelligente TINECO iLoop:

Rileva, Reagisci, Ottimizza

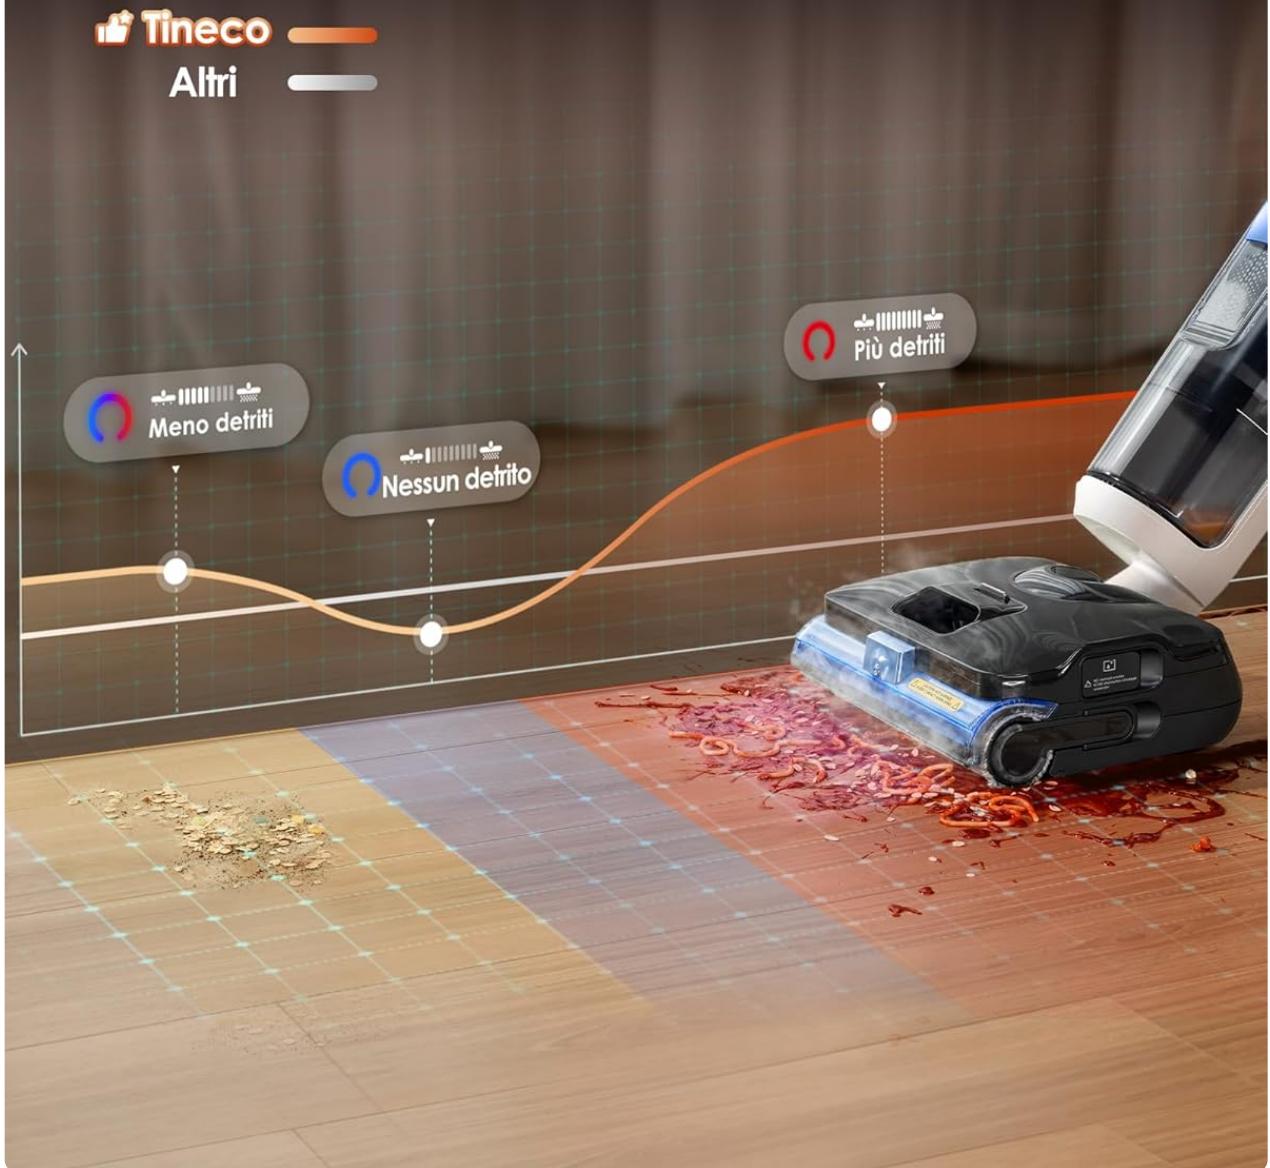


Image: The Tineco iLoop Smart Sensor intelligently detecting debris and optimizing cleaning performance.

Pulizia dei bordi su entrambi i lati



Image: The appliance demonstrating its ability to clean close to edges and baseboards.

Cavo lungo 8,3 m per una pulizia senza interruzioni



Image: The 8.3m long power cable providing extended reach for cleaning without interruptions.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Tineco FLOOR ONE S6 Stretch Steam.

- One-Touch Self-Cleaning:** After each use, place the appliance on its storage base. Press the self-clean button to initiate the automatic cleaning cycle. This process uses steam and heated water to clean the brush roller and then air-dries it.

2. **Cleaning the Dirty Water Tank:** After each use, empty the dirty water tank and rinse it thoroughly with clean water. Allow it to air dry before reattaching.
3. **Cleaning the Brush Roller:** Even with self-cleaning, periodically remove the brush roller for manual inspection and cleaning. Remove any tangled hair or debris. The DualBlock Anti-Tangle Design minimizes this, but occasional manual cleaning is recommended.
4. **Cleaning the Filter:** Remove and rinse the dry filter regularly. Allow it to dry completely before reinserting. Replace the filter every 3-6 months, or as needed.
5. **Storage:** Store the appliance in a dry, safe place. Ensure both water tanks are empty and clean before storing for extended periods.

Sistema di autopulizia One-Touch con vapore



Image: The One-Touch Self-Cleaning system with steam, showing the brush roller being cleaned and dried.



Image: Illustration of the DualBlock Anti-Tangle Design, showing how it prevents hair from wrapping around the brush roller.

7. TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on	No power, loose connection	Check power cord connection, ensure outlet is functional.
No steam output	Clean water tank empty, steam nozzle blocked, appliance not heated	Fill clean water tank, clean steam nozzle, allow appliance to heat up (approx. 30 seconds).
Poor suction	Dirty water tank full, filter clogged, brush roller tangled	Empty dirty water tank, clean or replace filter, clean brush roller.
Water leaks	Water tanks not properly installed, damaged seals	Ensure tanks are securely in place. If leaks persist, contact customer support.
Unpleasant odor	Dirty water tank not cleaned, brush roller not dried properly	Thoroughly clean dirty water tank. Run self-cleaning cycle and ensure brush roller is dry.

If the problem persists after attempting these solutions, please contact Tineco Customer Support.

8. SPECIFICATIONS

Feature	Detail
Brand	Tineco
Model	FLOOR ONE S6 Stretch Steam
Color	White
Product Dimensions	27.43 x 25.4 x 109.98 cm
Weight	6 kg
Clean Water Tank Capacity	1000 Centiliters (1 Liter)
Dirty Water Tank Capacity	0.72 Liters
Wattage	1440 watts
Noise Level	78 Decibels
Special Features	Tineco BoostSteam Technology, 160°C High-Temperature Steam Cleaning, DualBlock Anti-Tangle Design, 180° Flat Design
Filter Type	HEPA Filter

Feature	Detail
Recommended Surfaces	Hard Floor
Power Source	Corded Electric

9. WARRANTY AND SUPPORT

Tineco products are manufactured to the highest quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Tineco website. If you have any questions, require technical assistance, or need to report a problem, please contact Tineco Customer Support. Have your model number and purchase date ready when contacting support.

You can typically find support contact information on the Tineco website or within the product packaging.

© 2026 Tineco. All rights reserved.