

[Manuals.plus](#) /

› [Ejoyous](#) /

› Ejoyous Remote Control for Mag IPTV TV Box User Manual

Ejoyous Mag 250 254 255 260 261 270

Ejoyous Remote Control for Mag IPTV TV Box

INSTRUCTION MANUAL

1. Introduction

This manual provides instructions for the Ejoyous Replacement Remote Control, designed for use with various Mag IPTV TV Box models. Please read this manual carefully before using the remote control to ensure proper operation and longevity.

Compatible Models: Mag 250, Mag 254, Mag 255, Mag 260, Mag 261, Mag 270 IPTV TV Boxes.



Image 1.1: The Ejoyous Remote Control in use, demonstrating its compatibility with an IPTV TV box setup.

2. Setup

The Ejoyous Remote Control is designed for immediate use after battery installation. No complex programming or pairing is required.

2.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 2.1: View of the open battery compartment, illustrating where to insert the two AAA batteries.

The remote control is now ready for operation.

3. Operating Instructions

The remote control features a standard layout for intuitive navigation and control of your Mag IPTV TV Box.



TV REMOTE CONTROL REPLACEMENT

For Mag 250 254
255 260 261 270
IPTV TV Box



Image 3.1: Front view of the remote control, highlighting its design and compatibility.

3.1. Button Functions Overview

- **Power Button** (●): Turns the IPTV TV Box on or off.
- **F1, F2, F3, F4 Buttons**: Function buttons, their specific use may vary depending on your IPTV box's software.
- **Mute Button** (⏸): Mutes or unmutes the audio.
- **A/V Button**: Switches between audio/video input sources.
- **Mode Button**: Changes the operating mode.
- **Setup Button** (⚙): Accesses system settings or setup menu.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Used to navigate menus and confirm selections.
- **VOL +/-**: Adjusts the volume level.
- **CHAN +/-**: Changes the channel.
- **Number Buttons (0-9)**: Direct channel input.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward)**: Controls media playback.
- **Back/Return Button**: Returns to the previous screen or menu.
- **Home Button**: Returns to the main menu or home screen.



Image 3.2: Detailed view of the upper buttons on the remote control, including power, function keys, and media controls.

3.2. Remote Control Range

The remote control operates effectively up to a distance of 10 meters (approximately 33 feet). Actual range may vary depending on environmental factors and the specific model of your IPTV TV box. Ensure a clear line of sight between the remote control and the IPTV TV box for optimal performance.



Image 3.3: Visual representation of the remote control's effective operating range, up to 10 meters.

4. Maintenance

Proper maintenance ensures the longevity and reliable operation of your remote control.

4.1. Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals.
- Avoid getting moisture into the battery compartment or any openings.

4.2. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or it stops functioning. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

5. Troubleshooting

If you encounter issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Short operating range or intermittent response.	Weak batteries, obstruction between remote and IPTV box, or remote sensor on IPTV box is blocked.	Replace batteries. Ensure a clear line of sight. Remove any obstructions. Clean the remote's infrared emitter and the IPTV box's sensor.
Specific buttons not working.	Button malfunction or software incompatibility.	Test other buttons. If only specific buttons fail, the remote may be faulty. Ensure your IPTV box model is listed as compatible.

6. Specifications

The following are the technical specifications for the Ejoyous Remote Control:

- **Color:** Black
- **Case Material:** ABS (Acrylonitrile Butadiene Styrene)
- **Dimensions:** Approximately 17.5 x 4.4 x 1.8 cm (6.9 x 1.7 x 0.7 inches)
- **Item Weight:** Approximately 56 grams (1.98 ounces) without batteries
- **Remote Control Range:** Up to 10 meters (actual range may vary)
- **Battery Type:** 2 x AAA batteries (NOT included)
- **Power Supply:** 3 V DC
- **Applicable Models:** Mag 250, 254, 255, 260, 261, 270 IPTV boxes



Image 6.1: Dimensions of the remote control, showing its length, width, and thickness.

Durable material

ABS environmentally friendly raw materials
are durable and fall resistant



Image 6.2: Illustration of the remote control's durable ABS material construction.

7. Warranty and Support

This product is a replacement remote control. For specific warranty information, please refer to the terms provided by your retailer at the time of purchase. For technical support or further assistance, please contact the Ejoyous customer service or your product vendor.