

DinoFire DinoFire RF 2.4GHz Wireless Presentation Clicker

DinoFire RF 2.4GHz Wireless Presentation Clicker Instruction Manual

Model: DinoFire RF 2.4GHz Wireless Presentation Clicker

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your DinoFire RF 2.4GHz Wireless Presentation Clicker. This device is designed to enhance your presentations by offering seamless control over slides and a convenient green laser pointer.

2. PRODUCT FEATURES

- **Plug & Play Connectivity:** No software or drivers required. Simply plug the USB receiver into your computer.
- **Green Laser Pointer:** A bright green laser for clear highlighting of presentation content.
- **Rechargeable Battery:** Built-in 300mAh battery, fully rechargeable in approximately 2.5 hours, providing weeks of use.
- **Essential Presentation Controls:** Intuitive buttons for page up/down, full screen, and black screen functions.
- **Ergonomic Design:** Comfortable to hold with clearly spaced buttons for confident operation.
- **Integrated USB Receiver Storage:** The USB receiver stores securely inside the remote to prevent loss.
- **Wireless Range:** 2.4GHz wireless connection offers a control range of up to 115 feet (approximately 35 meters).

3. SETUP INSTRUCTIONS

1. **Charge the Presenter:** Before first use, ensure the presentation clicker is fully charged. Connect the clicker to a USB power source using the provided Micro USB cable. A full charge takes approximately 2.5 hours.
2. **Retrieve USB Receiver:** Open the battery compartment or the designated storage slot on the back of the clicker to retrieve the USB receiver.
3. **Connect Receiver:** Plug the USB receiver into an available USB port on your computer or laptop. The

system will automatically detect and install the necessary drivers.

4. **Power On:** Locate the power switch on the side of the clicker and slide it to the 'ON' position.



Image: The USB receiver is stored within the clicker and plugs directly into a laptop's USB port for immediate use.

4. OPERATING INSTRUCTIONS

Once the USB receiver is connected and the clicker is powered on, you can begin controlling your presentation.

- **Page Up/Down:** Use the arrow buttons (usually left/right or up/down arrows) to navigate through your presentation slides.
- **Green Laser Pointer:** Press and hold the central button (often marked with a triangle or laser icon) to activate the green laser pointer. Release the button to turn off the laser.
- **Full Screen/Black Screen:** The clicker features dedicated buttons for entering full-screen mode or blacking out the screen to redirect audience attention. Refer to the button icons for specific functions.

Plug & Play

No need to download any software, just plug into the usb receiver, it is ready to go.



Page Flip



Black Screen



Green Light



Full Screen



Image: The presentation clicker features clearly labeled buttons for various functions, including page navigation, black screen, full screen, and the green laser pointer.

5. BATTERY INFORMATION AND CHARGING

The DinoFire Presentation Clicker is equipped with a long-lasting 300mAh rechargeable battery.

- **Charging:** Connect the clicker to any standard USB port using the included Micro USB cable. The charging indicator light will show the charging status.
- **Charging Time:** A full charge typically takes about 2.5 hours.
- **Battery Life:** A fully charged battery can last for several weeks, depending on usage.



Rechargeable Presenter

Wireless presenter is with micro usb charging interface (usb cable included), supports multiple charging modes.

Image: The presentation clicker is shown connected to a laptop via its Micro USB charging cable, highlighting its rechargeable feature.

6. MAINTENANCE AND STORAGE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the clicker. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, turn off the clicker to conserve battery life. Store the USB receiver securely within the clicker's designated compartment to prevent loss. Keep the device in a cool, dry place away from direct sunlight and extreme temperatures.

Easy to Operate

One button one function design, clear separate buttons - just press by touch and focus on your presentation



Image: The USB receiver can be conveniently stored inside the presentation clicker's body, ensuring it is not misplaced during travel or storage.

7. TROUBLESHOOTING

• Device Not Responding:

- Ensure the USB receiver is securely plugged into a working USB port.
- Check if the clicker is powered on.
- Verify the clicker's battery level and recharge if necessary.
- Try plugging the USB receiver into a different USB port or another computer to rule out port issues.

• Laser Pointer Not Working:

- Ensure the clicker is powered on and fully charged.

- Press and hold the laser button firmly.
- **Limited Range:**
 - Ensure there are no significant obstructions (e.g., walls, large metal objects) between the clicker and the USB receiver.
 - Move closer to the computer if possible.
 - Avoid using the clicker near other 2.4GHz wireless devices that might cause interference.

8. SPECIFICATIONS

Feature	Detail
Brand	DinoFire
Connectivity Technology	Radio Frequency (RF 2.4GHz)
Compatible Devices	Laptop, Computer
Special Feature	Lightweight, Rechargeable, Green Laser
Max Number of Supported Devices	1
Item Weight	2.08 ounces
Package Dimensions	4.72 x 2.4 x 1.26 inches

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact DinoFire customer service directly. Keep your purchase receipt for warranty claims.