

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lionelo](#) /
- › [Lionelo Florence Easy Fold Playpen 150x180 cm Instruction Manual](#)

Lionelo LO-FLORENCE EASY FOLD

Lionelo Florence Easy Fold Playpen 150x180 cm Instruction Manual

Model: LO-FLORENCE EASY FOLD

INTRODUCTION

Thank you for choosing the Lionelo Florence Easy Fold Playpen. This playpen is designed to provide a safe and spacious environment for your child, suitable from birth up to 4 years of age. Its easy-fold mechanism and portable design make it ideal for both indoor and outdoor use, as well as for travel. Please read this manual carefully before assembly and use to ensure proper operation and safety.

SAFETY INFORMATION

- Always ensure the playpen is fully assembled and locked before placing a child inside.
- Never leave your child unattended in the playpen. Constant supervision is required.
- Do not use the playpen if any parts are broken, torn, or missing. Contact customer support for replacement parts.
- Keep the playpen away from open flames, heaters, and other heat sources.
- Do not place toys or objects with long strings or cords in the playpen to avoid strangulation hazards.
- Ensure the playpen is placed on a flat, stable surface.
- The playpen is designed for children from birth up to 4 years or a maximum weight of 15 kg.

PACKAGE CONTENTS

Verify that all components are present before assembly:

- Lionelo Florence Easy Fold Playpen Frame
- Integrated Base Fabric
- Carry Bag
- Instruction Manual

SETUP

The Lionelo Florence Easy Fold Playpen is designed for quick and tool-free setup.

1. **Unpack the Playpen:** Remove the playpen from its carry bag and place it on a clean, flat surface.
2. **Unfold the Frame:** Gently pull the sides of the playpen outwards. The frame will begin to expand. Ensure all four sides click into place, indicating they are locked.
3. **Secure the Base:** Press down firmly on the center of the playpen's base until it lies flat and is fully extended. This action will tension the side walls.

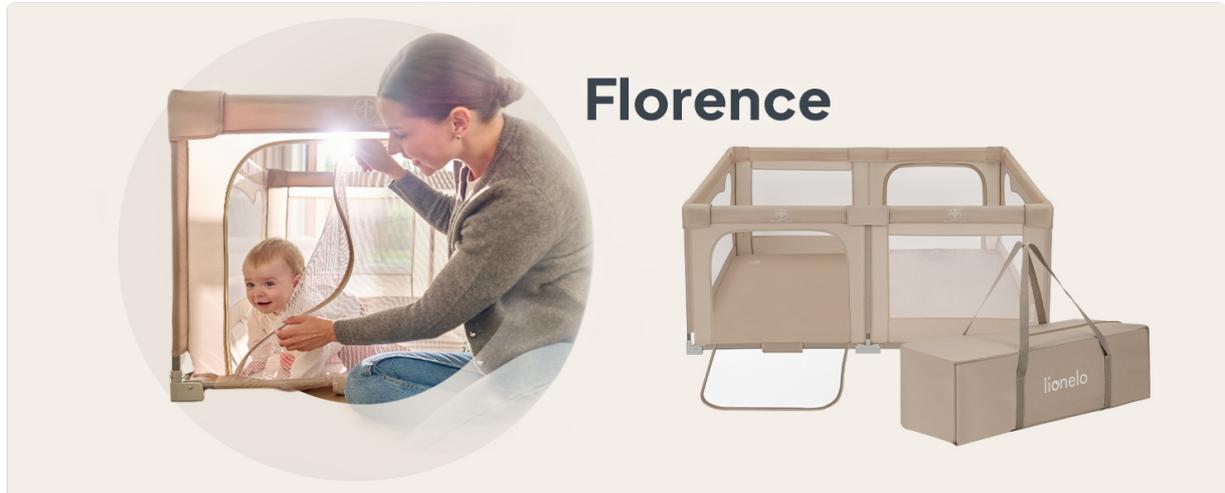


Image: Visual guide for unfolding and assembling the playpen. The left side shows a hand operating a folding mechanism, while the right side displays the fully assembled playpen.

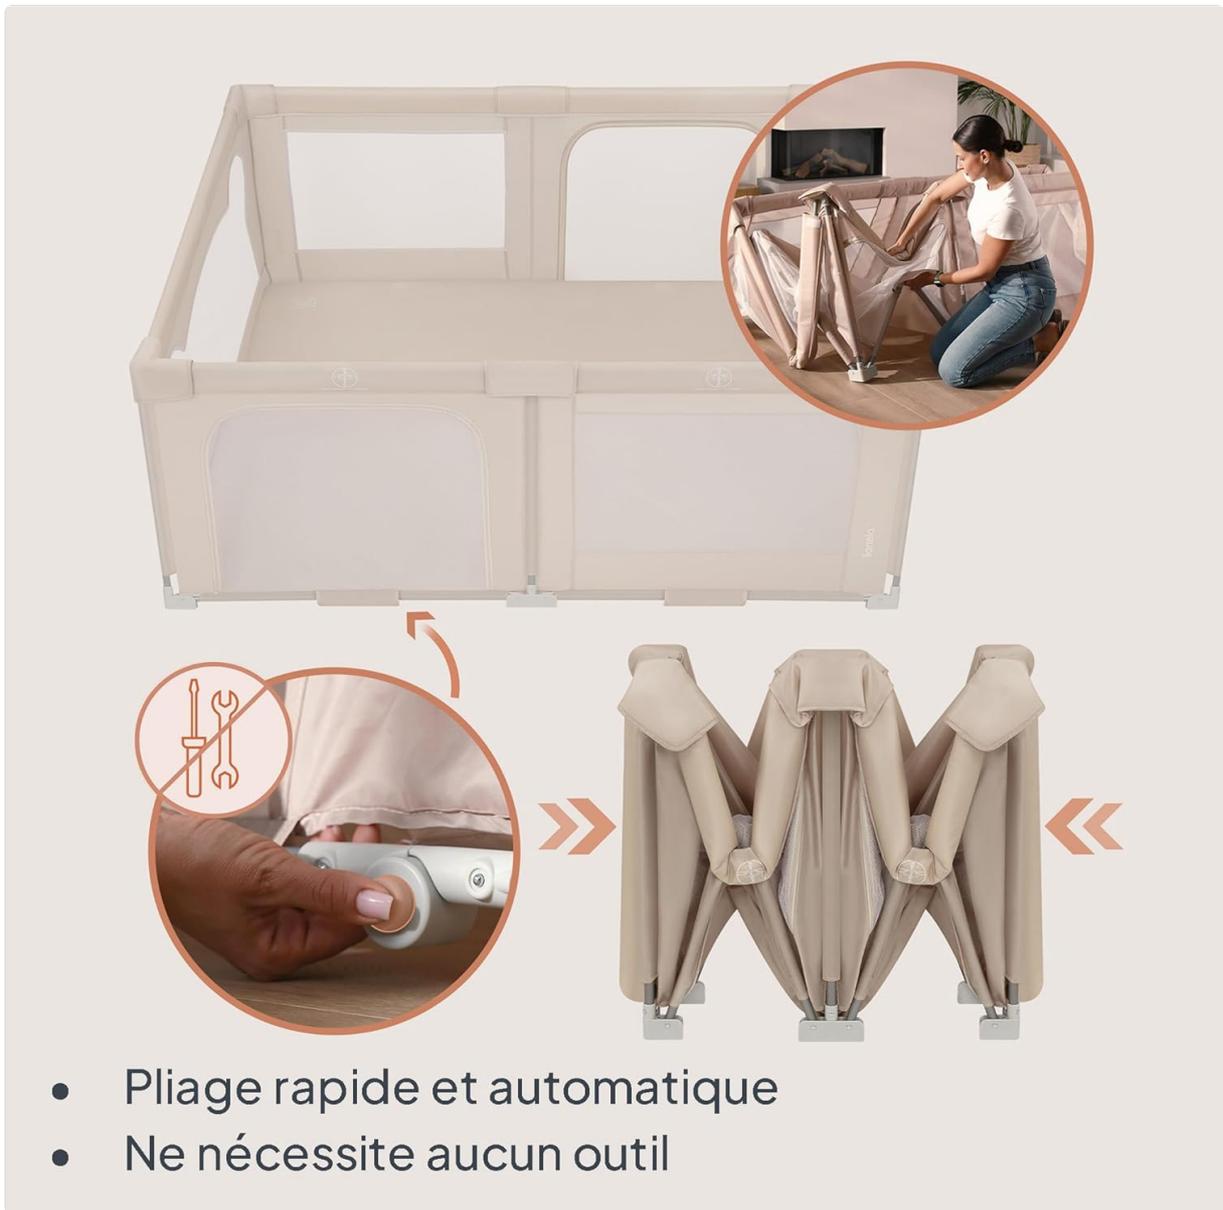


Image: A close-up of the playpen's quick-fold mechanism, demonstrating how it collapses for storage. This mechanism allows for rapid setup and takedown without the need for tools.

OPERATING INSTRUCTIONS

Using the Play Area

The playpen provides a large and secure space for your child to play. The high mesh walls ensure visibility and breathability, allowing you to easily monitor your child while they move freely.



- Grand espace de jeu
- Emplacement pour tapis d'éveil

Image: A mother and baby are shown inside the spacious playpen, highlighting the large play area and the mesh sides that allow for interaction and visibility.

Zippered Entrances

The playpen features two zippered side entrances. These allow older children to enter and exit independently, promoting their development and reducing the need for adults to lift them in and out. Always ensure zippers are fully closed when the child is inside and unsupervised.



Image: A close-up view of one of the playpen's zippered side entrances, with a baby peeking through. This illustrates the convenience for children to enter and exit.



Image: A mother assists a baby in entering the playpen through the zippered side entrance, set up outdoors on a grassy area, demonstrating its versatility for different environments.

FOLDING AND STORAGE

The playpen is designed to fold quickly and compactly for easy storage and transport.

1. **Release the Base:** Lift the center of the playpen's base to disengage the locking mechanism.
2. **Fold the Sides:** Press the release buttons on the side rails (if applicable, refer to specific mechanism) and push the sides inwards until they collapse.
3. **Compact Folding:** Continue to fold the playpen until it forms a compact bundle.
4. **Store in Carry Bag:** Place the folded playpen into the provided carry bag for convenient transport and storage.



- Taille compacte une fois pliée
- Sac de transport

Image: The playpen is shown folded and neatly packed into its dedicated carry bag, illustrating its portability and ease of storage.

MAINTENANCE

Regular cleaning and maintenance will prolong the life of your playpen.

- **Cleaning:** The playpen is easy to clean. Wipe down fabric surfaces with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before folding or storing.
- **Inspection:** Periodically check all parts for wear and tear, especially the mesh, zippers, and frame connections. Ensure all locking mechanisms function correctly.
- **Storage:** When not in use, store the playpen in its carry bag in a dry, cool place, away from direct sunlight and extreme temperatures.



- Tissu en maille respirant
- Matériau facile à nettoyer
- Éléments protégés par une mousse souple

Image: This composite image highlights key features: the breathable mesh fabric, the soft foam protection on the frame, and a visual representation of the easy cleaning process for the playpen.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Playpen does not fully unfold/lock.	Side rails not fully extended before pressing down the base.	Ensure all side rails are pulled up and locked into place before pushing the center of the base down.
Difficulty folding the playpen.	Base not released or side rail locks engaged.	Lift the center of the base first, then release the side rail locks as per instructions.
Zippers are stuck or difficult to operate.	Fabric caught in zipper or zipper mechanism dirty.	Gently pull fabric away from the zipper. Clean zipper teeth with a small brush if necessary. Do not force the zipper.

SPECIFICATIONS

Feature	Detail
Model Number	LO-FLORENCE EASY FOLD
Brand	Lionelo
Material	Aluminum, Polyester
Unfolded Dimensions (L x W x H)	185 x 151 x 76.5 cm
Folded Dimensions (L x W x H)	75 x 24 x 26 cm
Item Weight	8.2 kg
Age Range	0-48 Months (Toddler)
Special Features	Easy fold mechanism, 2 zippered entrances, breathable mesh walls, portable with carry bag

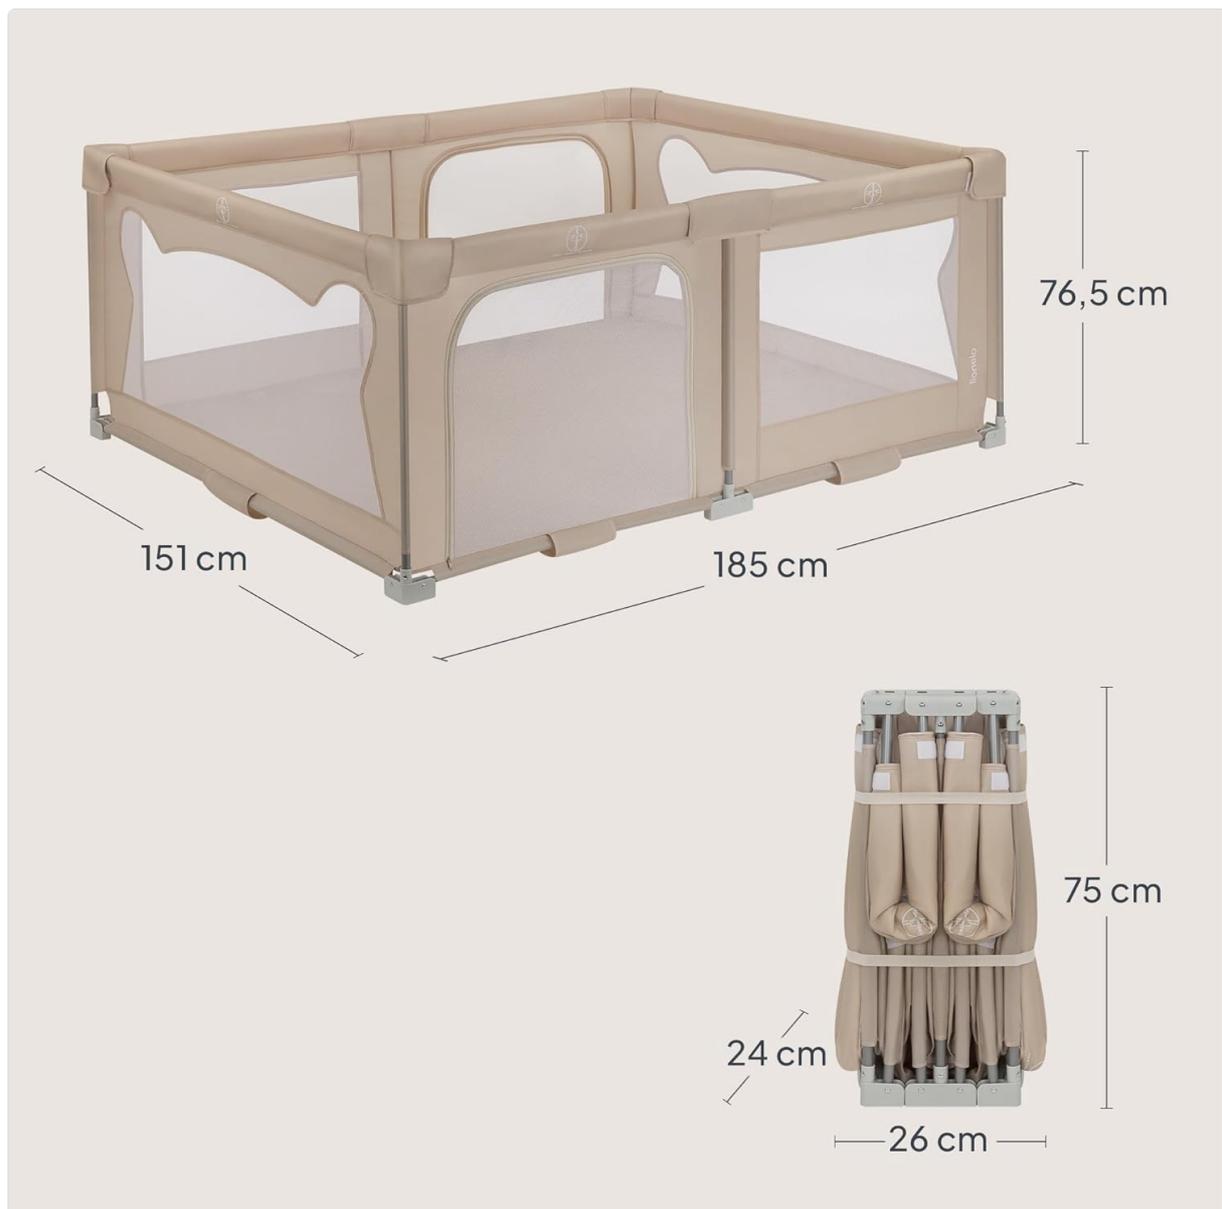


Image: A diagram illustrating the dimensions of the playpen when unfolded (185 cm length, 151 cm width, 76.5 cm height)

and when folded (75 cm height, 24 cm width, 26 cm depth).

WARRANTY INFORMATION

This product comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your purchase or visit the official Lionelo website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a problem with your Lionelo Florence Easy Fold Playpen, please contact Lionelo customer support. Contact information can typically be found on the product packaging, the official Lionelo website, or your purchase documentation.