

[manuals.plus](#) /› [Hiicam](#) /› [Hiicam Speed10 4K Action Camera User Manual](#)

Hiicam Speed10

Hiicam Speed10 4K Action Camera User Manual

Model: Speed10

INTRODUCTION

Thank you for choosing the Hiicam Speed10 4K Action Camera. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure proper functionality and to maximize your camera's performance.

The Hiicam Speed10 is designed to capture high-quality video and photos in various environments, featuring 4K 60FPS video recording, 20MP photo resolution, Electronic Image Stabilization (EIS), and waterproof capabilities up to 131 feet (40 meters) with the included housing. It also includes dual screens, remote control, and WiFi connectivity for enhanced usability.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Speed10 Action Camera x 1
- Remote Control x 1
- 1350 mAh Battery x 2
- Quick Guide x 1
- Useful Accessories (various mounts and cables)

Package Including



Image: The Hiicam Speed10 Action Camera and its complete set of accessories, including batteries, remote, and various mounting options.

SETUP

1. Charging the Battery

1. Insert the 1350mAh batteries into the dual battery charger.
2. Connect the charger to a USB power source using the provided cable.
3. The indicator light on the charger will show charging status. A full charge typically takes approximately 120 minutes.



170° WIDE ANGLE

Catch every moment in full definition

Image: A 1350mAh battery for the Hiicam Speed10 camera, illustrating its capacity and charging process.

2. Inserting the Battery and Micro SD Card

1. Open the battery compartment cover on the bottom of the camera.
2. Insert a fully charged 1350mAh battery, ensuring correct polarity.
3. Insert a Micro SD card (up to 256GB, not included) into the designated slot until it clicks into place.
Ensure the card is formatted correctly (FAT32 or exFAT).
4. Close the battery compartment cover securely.

1350mAh Long-Lasting Battery

Up to 2 hours of continuous shooting per charge



1350 mAh

Image: A 1350mAh battery being inserted into the Hiicam Speed10 action camera.

3. Powering On/Off

- To power on: Press and hold the Power/Mode button (usually on the front or top) for 3 seconds.
- To power off: Press and hold the Power/Mode button for 3 seconds.

OPERATING INSTRUCTIONS

1. Navigating the Menus

- The Hiicam Speed10 features a 2-inch rear IPS touch screen and a 1.4-inch front display.
- Use the touch screen to navigate through modes and settings. Swipe left/right or tap icons to select options.
- The front screen is useful for framing selfies or vlogging.

Dual Screens for Easy Selfies

Capture your adventures from both sides with ease



Image: The Hiicam Speed10 action camera displaying its front and rear screens, useful for framing shots and selfies.

2. Video Recording

- Press the Power/Mode button repeatedly to cycle to Video Mode.
- Press the Shutter/OK button to start recording. Press again to stop.
- The camera supports 4K resolution at 60 frames per second (FPS).

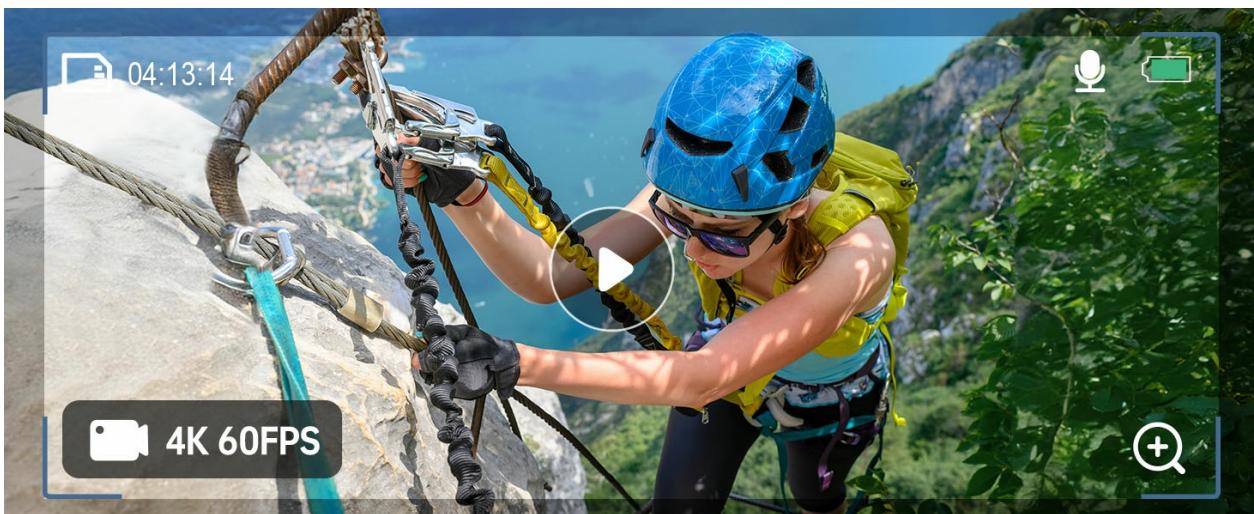


Image: The Hiicam Speed10 action camera recording a snowboarder, demonstrating its 4K 60FPS video capability.

3. Photo Capture

- Press the Power/Mode button repeatedly to cycle to Photo Mode.
- Press the Shutter/OK button to take a photo.
- The camera captures 20MP images.

4. Electronic Image Stabilization (EIS)

- EIS helps to stabilize footage, reducing shake and blur.
- EIS is supported at 4K30FPS resolution or lower. It is not available at 4K60FPS.
- To enable/disable EIS, navigate to the video settings menu and select the EIS option.


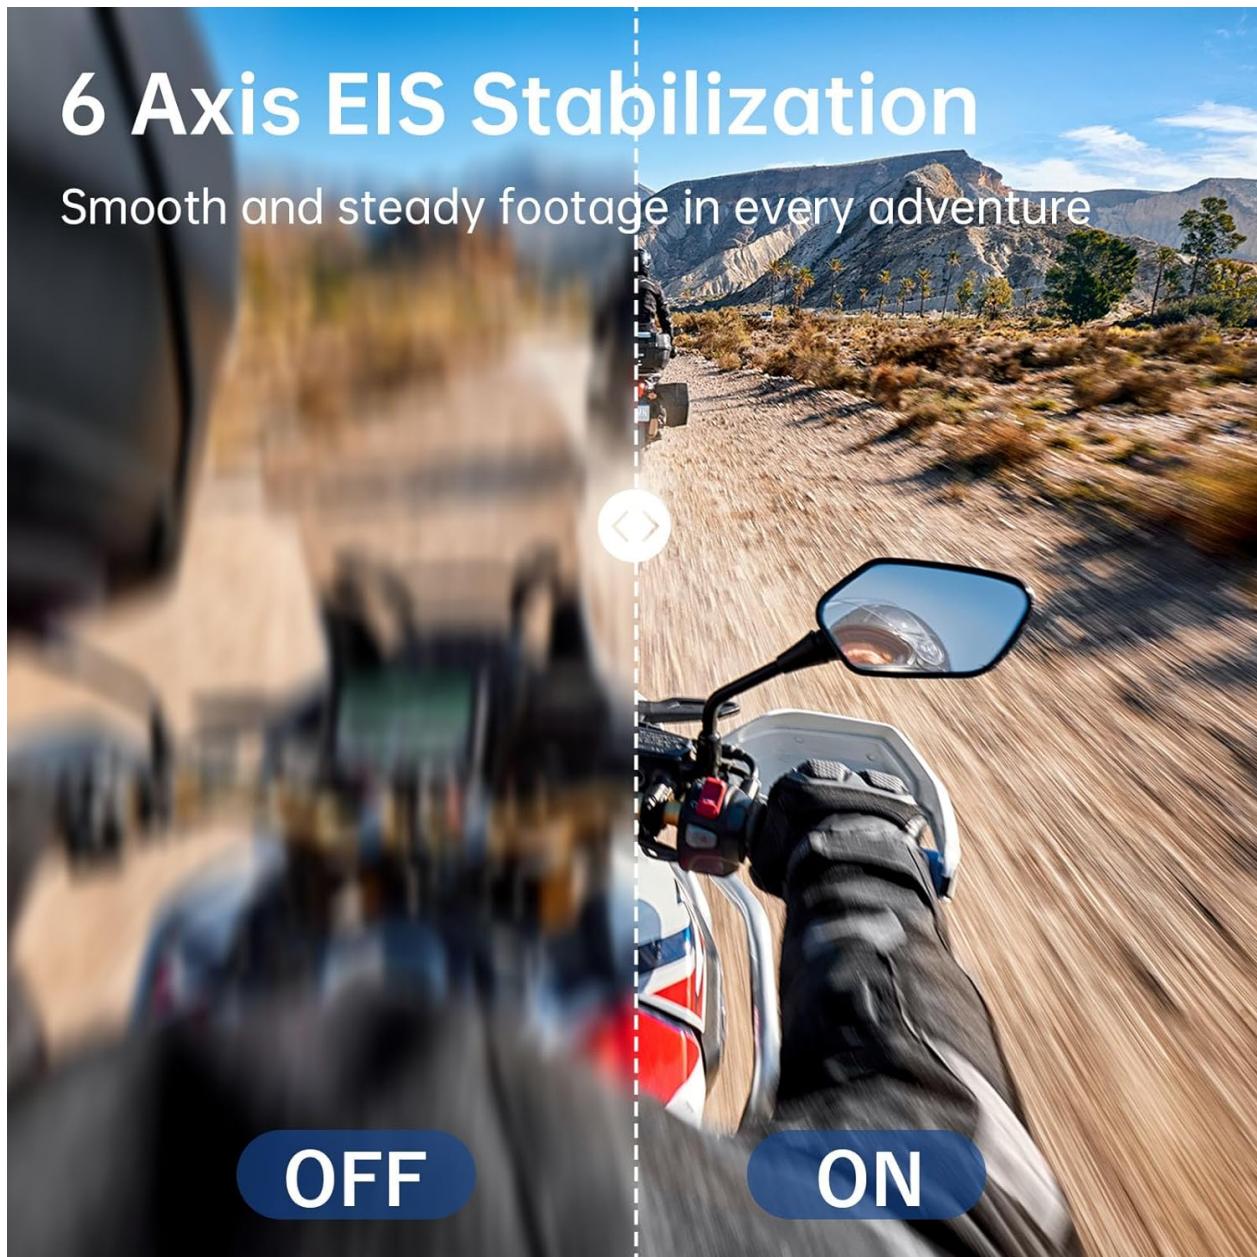


Image: A visual comparison demonstrating the effect of Electronic Image Stabilization (EIS) on video footage, showing a clear difference between unstable (EIS off) and stable (EIS on) recording.

5. Waterproof Operation

- The camera is waterproof up to 131 feet (40 meters) only when enclosed in its waterproof housing.
- Before submerging, ensure the waterproof housing is properly sealed and free from debris.
- After underwater use, rinse the housing with fresh water and allow it to dry completely.

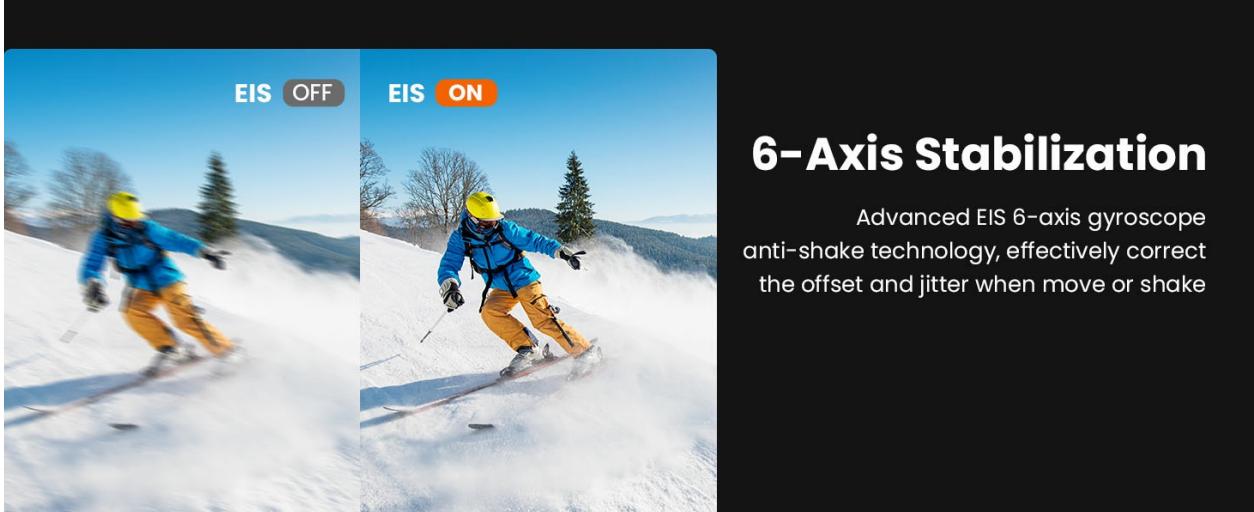

6-Axis Stabilization

Advanced EIS 6-axis gyroscope anti-shake technology, effectively correct the offset and jitter when move or shake

Image: A diver using the Hiicam Speed10 action camera in its waterproof housing during an underwater activity, highlighting its capability for deep dives.

6. Remote Control and WiFi Connectivity

- The included remote control allows for convenient start/stop recording and photo capture from a distance.
- Connect the camera to the dedicated smartphone app via WiFi to control settings, view live footage, and transfer files wirelessly.
- Refer to the Quick Guide for detailed instructions on pairing the remote and connecting to the app.

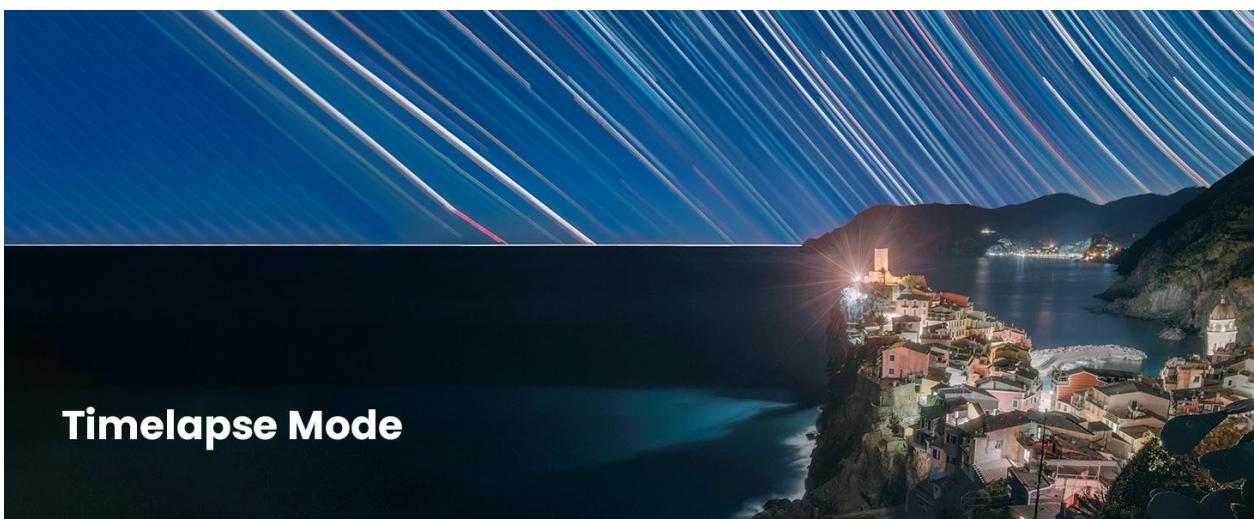


Image: A smartphone displaying the Hiicam Speed10 companion app interface, demonstrating wireless control and media management via WiFi.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the camera lens and screens. For stubborn smudges, a lens cleaning solution can be applied to the cloth (not directly to the lens).
- **Waterproof Housing:** Regularly inspect the waterproof housing's O-ring for dirt, hair, or damage. Clean and lubricate the O-ring as needed to maintain its seal.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- **Battery Care:** Avoid fully discharging the batteries. Recharge them regularly, even if not in use, to prolong their lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on	Battery is dead or incorrectly inserted.	Charge the battery fully. Reinsert the battery correctly.
Cannot record video/take photos	Micro SD card is full, corrupted, or not inserted.	Insert a new/formatted Micro SD card. Format the card in the camera settings.
Footage is shaky	EIS is off or resolution is 4K60FPS.	Enable EIS in settings (if resolution is 4K30FPS or lower).
Water leakage in housing	O-ring is dirty, damaged, or housing not sealed properly.	Inspect and clean O-ring. Ensure housing is securely latched.
WiFi connection issues	Incorrect password, camera WiFi not enabled, or app issues.	Ensure WiFi is enabled on camera. Re-enter password. Restart camera and app.

SPECIFICATIONS

- **Brand:** Hiicam
- **Model:** Speed10
- **Video Resolution:** Up to 4K 60FPS
- **Photo Resolution:** 20MP
- **Image Stabilization:** Electronic Image Stabilization (EIS) (supported at 4K30FPS or lower)
- **Waterproof Depth:** 131FT (40m) with waterproof housing
- **Display:** 2-inch Rear IPS Touch Screen, 1.4-inch Front Display
- **Connectivity:** WiFi, Remote Control
- **Storage:** Micro SD card, up to 256GB (not included)
- **Battery:** 2 x 1350mAh Lithium Ion (included)
- **Dimensions:** 2.28 x 0.94 x 1.61 inches
- **Weight:** 1.1 pounds

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Hiicam website or contact customer service through your purchase platform. Keep your proof of purchase for warranty claims.

Online Support: Visit the [Hiicam Store on Amazon](#) for additional resources and contact options.

Related Documents - Speed10

 <p>SPEED 50 ACTION CAMERA USER MANUAL V20240723</p>	<p><u>Speed 50 Action Camera User Manual</u></p> <p>User manual for the Speed 50 Action Camera, covering setup, operation, features, and maintenance.</p>
 <p>SPEED 50 ACTION CAMERA USER MANUAL V20240723</p>	<p><u>Speed 50 Action Camera User Manual</u></p> <p>Comprehensive user manual for the Speed 50 Action Camera by Hiicam, covering setup, operation, features, maintenance, and app connectivity. Learn how to use your action camera effectively.</p>
 <p>SPEED 50 ACTION CAMERA USER MANUAL V20240723</p>	<p><u>Hiicam SPEED 50 Action Camera User Manual</u></p> <p>Comprehensive user manual for the Hiicam SPEED 50 Action Camera, detailing setup, operation, features, specifications, maintenance, and troubleshooting. Learn how to capture high-quality video and photos.</p>
 <p>USER MANUAL ACTION CAMERA ENGLISH V20250110D16</p>	<p><u>Speed 20 Action Camera User Manual - Hiicam</u></p> <p>Comprehensive user manual for the Hiicam Speed 20 action camera. Learn how to operate your device, explore its features, specifications, video and photo modes, system settings, and connect to the Hiicam app for enhanced control.</p>
 <p>SPEED 50 ACTION CAMERA USER MANUAL V20240723</p>	<p><u>Speed 50 Action Camera User Manual</u></p> <p>User manual for the Speed 50 Action Camera, covering setup, operation, features, and maintenance.</p>
 <p>SPEED 50 ACTION CAMERA USER MANUAL V20240723</p>	<p><u>Speed 50 Action Camera User Manual</u></p> <p>Comprehensive user manual for the Speed 50 Action Camera by Hiicam, covering setup, operation, features, maintenance, and app connectivity. Learn how to use your action camera effectively.</p>



[\[pdf\]](#) Instructions

D66 5 Hiicam Download Center Manuals Hunting Cam App Haiita Speed10 hiicam 2024 04 SPEED10 In this mode press the Shutter button to record a slow motion video at set resolution and speed On preview screen long hold Up or Down to |||

SPEED 10 ACTION CAMERA V20231213 FCC COMPLIANCE STATEMENT This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: 1 This device may not cause harmful interference 2 This device must accept any interference received, including interference that my ...

lang:en score:25 filesize: 1.06 M page_count: 40 document date: 2024-04-30