

[manuals.plus](#) /

- › [Surge](#) /
- › [Surge Wireless Pro Controller SG60096 Instruction Manual](#)

Surge SG60096

Surge Wireless Pro Controller SG60096 Instruction Manual

Model: SG60096 | Brand: Surge

1. INTRODUCTION

Thank you for choosing the Surge Wireless Pro Controller. This multi-platform Bluetooth controller is designed to enhance your gaming experience across various devices, including Nintendo Switch/Switch 2, Windows PC, Android, and iOS. Featuring Hall Effect sticks and triggers, adjustable turbo functionality, and customizable vibration feedback, this controller offers precision and comfort. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.



Figure 1: Front view of the Surge Wireless Pro Controller in Grey Camo.

2. PRODUCT FEATURES

- Multi-Platform Compatibility:** Compatible with Nintendo Switch/Switch 2 (Note: No C Button/Audio Port), Windows PC, Steam Deck, Android, and iOS devices.
- Hall Effect Thumb Sticks & Triggers:** Delivers precision control and prevents stick drift, ensuring accurate input.
- Turbo Functionality:** Offers 3 adjustable turbo levels for rapid-fire control in compatible games.
- Vibration Feedback:** Choose from 4 vibration levels for tailored haptic feedback, enhancing immersion.
- Motion Controls:** Supports motion controls for compatible games on supported platforms.
- Console Wake Up:** Ability to wake your Nintendo Switch console from sleep mode instantly (Nintendo Switch Only).
- Rechargeable Battery:** A built-in 600mAh Li-polymer battery provides up to 10 hours of gameplay on a single charge.
- USB-C Charging Cable:** Includes a 1-meter USB-C cable for convenient recharging.

FEATURES

TURBO, MOTION CONTROLS, RUMBLE & MORE.



COMPATIBLE WITH

Figure 2: The controller highlighting its Hall Effect Thumb Sticks and Triggers for enhanced precision.

3. PACKAGE CONTENTS

Please ensure all items are present in your package:

- 1 x Surge Wireless Pro Controller (Model: SG60096)
- 1 x USB-C Charging Cable (1 meter)
- 1 x User Manual



Figure 3: The retail packaging of the Surge Wireless Pro Controller, indicating included items.

4. SETUP & PAIRING

4.1. Charging the Controller

Before first use, fully charge the controller using the provided USB-C cable. Connect the USB-C end to the controller's charging port and the USB-A end to a power source (e.g., console, PC, USB wall adapter). The LED indicators on the controller will show charging status.



RECHARGEABLE BATTERY

A built-in 600mAh Li-polymer battery delivers up to 10 hours of play on a single charge.

Figure 4: The bottom of the controller featuring the USB-C charging port.

4.2. Pairing with Nintendo Switch/Switch 2

1. From the HOME Menu, select **Controllers**, then **Change Grip/Order**.
2. On the controller, press and hold the **Pairing Button** (usually a small button on the top edge or back) for a few seconds until the player LEDs begin to flash.
3. Once paired, the player LED(s) corresponding to the controller number will remain lit.
4. To wake the console from sleep mode, press the **Home Button** on the controller.

4.3. Pairing with Windows PC

1. Ensure your PC has Bluetooth enabled.
2. On the controller, press and hold the **Pairing Button** until the LEDs flash rapidly.
3. On your PC, go to **Bluetooth & other devices settings**, then **Add Bluetooth or other device**.
4. Select **Bluetooth** and choose the

