

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Patoolio](#) /
- › Patoolio Electric Pressure Washer User Manual

## Patoolio W8

# Patoolio Electric Pressure Washer

MODEL: W8 - USER MANUAL

## 1. Introduction and Overview

The Patoolio W8 Electric Pressure Washer is a powerful and versatile cleaning tool designed for various outdoor and home cleaning tasks. With a maximum pressure of 4800 PSI and a water flow of 3.0 GPM, it efficiently removes dirt, grime, and tough stains from surfaces such as concrete, pavements, driveways, patios, decks, walkways, RVs, cars, boats, homes, fences, and furniture.

Its lightweight and portable design, coupled with sturdy wheels, ensures easy maneuverability and convenient storage. The unit features a Total Stop System (TSS) for energy saving and extended pump life, and a child-safe lock on the handle for enhanced safety.



Figure 1: Patoolio Electric Pressure Washer and included accessories.

## 2. Safety Instructions

**WARNING: Read all safety warnings and instructions before operating this pressure washer. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.**

- Always wear appropriate eye protection (safety goggles) and protective clothing when operating the pressure washer.
- Keep children and pets away from the operating area.
- Ensure the power cord is fully uncoiled and connected to a grounded outlet. Do not use damaged cords.
- Never point the spray gun at people, pets, or electrical devices. The high-pressure stream can cause severe injury.
- Ensure the water supply is clean and free of debris to prevent damage to the pump.

- Always disconnect the power supply and water supply when the pressure washer is not in use or before performing any maintenance.
- The unit features a child-safe lock on the handle to prevent accidental operation. Always engage the lock when not actively spraying.

### 3. Package Contents

---

Carefully unpack all components and ensure you have received the following items:

- Patoolio W8 Electric Pressure Washer Unit
- High-Pressure Spray Gun
- Adjustable Spray Wand
- 4 Quick-Connect Nozzles (0°, 15°, 25°, 40°)
- External Foam Cannon
- 23-foot High-Pressure Hose
- 24.6-foot UL Certified Power Cord
- Water Inlet Connector
- User Manual
- Small Screwdriver (for assembly)



Figure 2: All components included with the Patoolio W8 Pressure Washer.

#### 4. Setup and Assembly

Assembly of the Patoolio W8 Pressure Washer is straightforward and can be completed by one person in minutes. Follow these steps:

1. **Attach the Handle:** Slide the main handle into the designated slots on top of the pressure washer unit until it clicks into place. Secure it with the provided screws using the included screwdriver.
2. **Assemble the Spray Gun and Wand:** Connect the adjustable spray wand to the high-pressure spray gun. Ensure the connection is secure and flush.
3. **Connect High-Pressure Hose:** Attach one end of the 23-foot high-pressure hose to the high-pressure spray gun. Securely tighten the connection.
4. **Connect Hose to Unit:** Attach the other end of the high-pressure hose to the front outlet of the pressure washer unit. Push it in firmly and tighten the connection.

5. **Connect Water Inlet:** Screw the water inlet connector to the water intake port on the pressure washer unit. Connect your garden hose to this connector.
6. **Organize Cables and Accessories:** Utilize the integrated holders on the unit for the power cord, high-pressure hose, and quick-connect nozzles for neat storage.



Figure 3: The pressure washer's upright compact design allows for integrated storage of accessories.

## 5. Operating Instructions

Before starting, ensure all connections are secure and the water supply is turned on. Prime the pump by squeezing the spray gun trigger until a steady stream of water emerges, then turn on the power switch.

### 5.1 Nozzle Selection

The Patoolio W8 comes with 4 quick-connect nozzles, each designed for specific cleaning tasks:

- **0° (Red):** For tough, concentrated cleaning on small, stubborn spots. Use with extreme caution as it delivers the highest pressure.
- **15° (Yellow):** For intense cleaning of hard surfaces like concrete and brick.
- **25° (Green):** For general cleaning of fences and wood decks.
- **40° (White):** For gentle cleaning of delicate surfaces like windows and vehicles.

# 4 SPRAY MODES



Cracks and hard surface



Concrete and brick



Fences and wood decks



Windows and vehicles

Figure 4: Select the appropriate nozzle for your cleaning needs.

## 5.2 Using the Foam Cannon

The external foam cannon allows for easy application of detergent, producing dense foam for effective cleaning, especially for vehicles. Fill the foam cannon with your desired detergent and attach it to the spray gun. The external design ensures detergent does not pass through the pump, extending its lifespan.

# Foam Cannon

Efficient Clean in Seconds  
at Your Fingertips



Figure 5: The external foam cannon provides efficient cleaning in seconds.

## 5.3 Total Stop System (TSS)

The integrated TSS automatically shuts off the pump when the trigger is not engaged. This feature saves energy, reduces noise, and prolongs the life of the pump and motor.

## Upgraded Convenient Design



Figure 6: The TSS and safety lock enhance user convenience and product longevity.

## 6. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your pressure washer:

- After each use, flush the system with clean water to remove any detergent residue.
- Clean the nozzles regularly to prevent blockages.
- Store the pressure washer in a dry, frost-free environment.
- Before long-term storage, drain all water from the pump and hoses to prevent freezing and damage.
- Inspect the high-pressure hose and power cord for any signs of wear or damage before each use.

## 7. Troubleshooting

Problem	Possible Cause	Solution
Motor does not start	No power supply; Power switch off; Thermal overload activated	Check power connection; Turn power switch ON; Allow unit to cool down
No water pressure	Water supply off; Kinked hose; Clogged nozzle; Air in pump	Turn on water supply; Straighten hose; Clean/replace nozzle; Squeeze trigger to purge air
Pulsating pressure	Air in pump; Insufficient water supply; Clogged nozzle	Squeeze trigger to purge air; Check water flow; Clean/replace nozzle
Water leaks	Loose connections; Damaged O-rings	Tighten all connections; Replace damaged O-rings (extra provided)

## 8. Specifications

- **Brand:** Patoolio
- **Model Number:** W8
- **Power Source:** Electric Pressure Washer
- **Color:** Light Grey
- **Maximum Pressure:** 4800 Pound per Square Inch (PSI)
- **Maximum Flow Rate:** 3 Gallons Per Minute (GPM)
- **Item Weight:** 16 Pounds
- **Hose Length:** 25 Feet
- **Product Dimensions:** 15"L x 12"W x 12"H
- **Manufacturer:** Shenzhen Patoolio Technology Co., Ltd.

## 9. Warranty and Support

---

Patoolio is committed to providing customers with the best shopping experience and professional after-sales service. If you encounter any product or operational problems, please contact our dedicated customer service team. We are here to provide excellent support to all customers.

For further assistance, please refer to the contact information provided on the product packaging or visit the official Patoolio website.