

YESHOMY YH-0913

YESHOMY YH-0913 7-Drawer Dresser Instruction Manual

Model: YH-0913

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions and safety warnings before assembling and using this product. Failure to follow these instructions may result in injury or damage to the product.

- **Anti-Toppling Device:** It is crucial to install the included anti-toppling device to prevent the dresser from tipping over. Tipping furniture can cause serious or fatal crushing injuries. Always secure the dresser to a wall using the provided hardware.
- **Weight Limits:** Do not exceed the maximum weight capacity for the dresser top (250 lbs) and individual drawers (22 lbs). Overloading can compromise stability and structural integrity.
- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all parts are correctly aligned and fasteners are tightened securely before use.
- **Children's Safety:** Keep children away from the assembly area. Do not allow children to climb on or play with the dresser. Always supervise children around furniture.



Image 1.1: Anti-Toppling Device Installation. This diagram shows the correct method for securing the dresser to a wall using the anti-toppling device to prevent accidental tipping. It contrasts correct installation with an unsafe scenario where a child attempts to climb an unsecured dresser.

2. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Dresser components (panels, drawers, hardware)
- Assembly tool kit
- Instruction manual
- Anti-toppling device and hardware

3. ASSEMBLY AND SETUP

Follow the step-by-step instructions provided in the separate installation manual included with your package. Assembly typically requires two individuals and can take approximately 2-3 hours. Ensure you have adequate space and the necessary tools (e.g., screwdriver, hammer) before starting.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a protected surface. Check against the parts list.
2. **Assemble Frame:** Follow the manual to construct the main frame of the dresser, ensuring all connections are tight and stable.
3. **Install Drawer Slides:** Attach the drawer slides to the dresser frame according to the manual's diagrams.
4. **Assemble Drawers:** Construct each of the seven drawers, ensuring the bottom panels are securely seated and the metal handles are attached.
5. **Insert Drawers:** Carefully slide the assembled drawers into their respective slots on the dresser frame.
6. **Install Anti-Toppling Device:** This is a critical safety step. Securely attach the anti-toppling device to the back of the dresser and to a wall stud using the provided hardware. Refer to Image 1.1 for guidance.



Image 3.1: Assembled Dresser. A view of the YESHOMY 7-Drawer Dresser after successful assembly, showcasing its design and functionality.

4. OPERATING INSTRUCTIONS

The YESHOMY 7-Drawer Dresser is designed for versatile storage and can function as a bedroom dresser, TV stand, or general storage unit in various rooms.

- **Drawer Operation:** The drawers are equipped with smooth sliding tracks for easy opening and closing. Avoid forcing drawers if they feel stiff; check for obstructions or misalignment.
- **Storage Capacity:** The dresser features seven drawers in two sizes. The three smaller top drawers are suitable for organizing smaller items like accessories or remote controls. The four larger bottom drawers are ideal for clothing, bedding, or larger personal items.
- **Versatile Placement:** This dresser can be used in bedrooms, living rooms as a TV stand (supporting up to 250 lbs), closets, or hallways for additional storage.



Image 4.1: Drawer Storage and Features. This image illustrates the internal capacity of the drawers, demonstrating how various items can be organized. It also highlights the smooth slide rails and metal handles for user convenience.

5. MAINTENANCE

Proper care will ensure the longevity and appearance of your YESHOMY dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish. The surface is designed to be easy to clean.
- **Spills:** Clean spills immediately to prevent staining or damage to the wood material.

- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration.
- **Humidity:** Maintain a stable humidity level in the room to prevent wood from warping or cracking.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary.

6. TROUBLESHOOTING

If you encounter any issues with your dresser, refer to the following common solutions:

- **Drawers are Stiff or Not Closing Properly:**
 - Check for obstructions inside the drawer or along the slide rails.
 - Ensure the drawer slides are correctly installed and aligned.
 - Verify that the drawer itself is assembled squarely.
- **Dresser Feels Unstable/Wobbly:**
 - Confirm all assembly screws are fully tightened.
 - Ensure the dresser is placed on a level surface.
 - Verify the anti-toppling device is securely installed to both the dresser and the wall.
- **Missing or Damaged Parts:** If you discover missing or damaged parts during assembly, do not proceed. Contact customer support immediately for assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	YESHOMY
Model Name	Dresser for Bedroom with 7 Drawers
Model Number	YH-0913
Product Dimensions (D x W x H)	15.7" x 52" x 30.75"
Color	Black
Material	Wood, etc.
Item Weight	92.6 pounds
Assembly Required	Yes
Dresser Top Weight Capacity	Up to 250 lbs
Drawer Weight Capacity	Up to 22 lbs per drawer



Image 7.1: Product Dimensions. This graphic provides detailed measurements for the dresser and its drawers, along with weight capacities for the top surface and individual drawers.

8. WARRANTY AND SUPPORT

YESHOMY is committed to providing quality products and customer satisfaction. If you have any questions, concerns, or require assistance with your dresser, please do not hesitate to contact our customer support team.

For prompt assistance, please have your model number (YH-0913) and purchase information ready when contacting support.

Contact Information:

- Refer to your purchase documentation or the YESHOMY official website for the most current customer service contact details.
- Please contact us promptly if you have any issues, and we will assist you patiently.

