

NINJA ON500EUSTGD

Ninja Speedi ON500EUSTGD 10-in-1 Rapid Cooker User Manual

Model: ON500EUSTGD

1. INTRODUCTION

Welcome to the user manual for your Ninja Speedi ON500EUSTGD 10-in-1 Rapid Cooker. This versatile 5.7-liter appliance is designed to simplify your cooking process by combining multiple functions into one unit. It allows you to prepare a wide variety of meals efficiently, utilizing technologies such as steam cooking and hot air frying. Please read this manual thoroughly before using the appliance to ensure safe and optimal operation.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury. Please observe the following:

- Read all instructions before use.
- Ensure the voltage in your outlet corresponds to the voltage stated on the appliance's rating label.
- Do not immerse the power cord, plug, or main unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Always ensure the lid is properly closed and locked before operating.
- Use caution when opening the lid after cooking, as steam can be released.

3. PRODUCT OVERVIEW

The Ninja Speedi ON500EUSTGD is a compact yet powerful multicooker. Below is an image of the appliance and a description of its key components and control panel.



This image displays the Ninja Speedi ON500EUSTGD 10-in-1 Rapid Cooker. The appliance features a sleek stone gold finish with a prominent digital control panel on the front. The control panel shows options for 'Rapid Cooker' modes like Speedi Meals, Steam Air Fry, Steam Bake, Steam, and Prove, alongside 'Air Fry / Hob' modes including Grill, Air Fry, Bake/Roast, Dehydrate, Sear/Sauté, Slow Cook, and Reheat. Temperature and time adjustments are available, along with a 'Start/Stop' button and a power button. A blue and white switch is visible on the top right for mode selection.

3.1 Components

- **Main Unit:** Houses the heating elements and control panel.
- **Cooking Pot (5.7 Liters):** Non-stick and dishwasher-safe for easy cleaning.
- **Crisping Plate:** Used for air frying and other functions requiring elevated cooking.
- **Lid:** Features a SmartSwitch for selecting cooking modes.

3.2 Control Panel

The digital control panel allows you to select cooking functions, adjust settings, and monitor cooking progress.

- **Power Button:** Turns the unit on/off.
- **TEMP Buttons (Up/Down):** Adjust cooking temperature.
- **TIME Buttons (Up/Down):** Adjust cooking duration.
- **START/STOP Button:** Initiates or cancels a cooking program.
- **SmartSwitch:** Located on the lid, this switch toggles between 'Rapid Cooker' (Steam) and 'Air Fry / Hob' modes.

- **Function Selection Buttons:** Allow selection of specific cooking programs within the chosen mode.

4. SETUP

Before first use, follow these steps:

1. Unpack the appliance and all accessories. Remove any packaging materials, stickers, or labels.
2. Wash the cooking pot and crisping plate in warm, soapy water, then rinse and dry thoroughly. The cooking pot and crisping plate are dishwasher safe.
3. Wipe the interior and exterior of the main unit with a soft, damp cloth.
4. Place the main unit on a clean, dry, level surface away from the edge of a countertop. Ensure adequate clearance around the unit for proper ventilation.
5. Insert the cooking pot into the main unit.

5. OPERATING INSTRUCTIONS

The Ninja Speedi offers 10 distinct cooking functions, accessible via the SmartSwitch on the lid.

5.1 Rapid Cooker Mode (SmartSwitch in upper position)

This mode combines steam with convection heat to cook ingredients quickly and efficiently, often simultaneously.

- **Speedi Meals:** Designed for preparing complete meals with grains, vegetables, and proteins in one pot.
- **Steam Air Fry:** Steams food to lock in moisture, then finishes with air frying for a crispy texture.
- **Steam Bake:** Combines steam with baking for moist cakes and breads.
- **Steam:** Gently cooks food with steam, ideal for vegetables and delicate items.
- **Prove:** Creates an optimal environment for dough to rise.

5.2 Air Fry / Hob Mode (SmartSwitch in lower position)

This mode utilizes dry heat for various cooking methods.

- **Grill:** For direct high-heat cooking, ideal for searing and charring.
- **Air Fry:** Circulates hot air to cook food with little to no oil, resulting in crispy results. Reduces fat by up to 75% compared to traditional frying methods.
- **Bake/Roast:** For baking and roasting various foods, from desserts to meats.
- **Dehydrate:** Removes moisture from food for making dried fruits, jerky, and more.
- **Sear/Sauté:** For browning ingredients and developing flavors before other cooking processes.
- **Slow Cook:** Cooks food slowly over an extended period at a low temperature.
- **Reheat:** Warms up leftovers while maintaining texture and flavor.

5.3 General Operation Steps

1. Place ingredients into the cooking pot or on the crisping plate as required by your recipe.
2. Close the lid and ensure the SmartSwitch is in the correct position for your desired cooking mode.
3. Press the Power button to turn on the unit.
4. Select your desired cooking function using the function buttons.

5. Adjust the temperature and time using the TEMP and TIME buttons.
6. Press the START/STOP button to begin cooking.
7. The unit will beep when cooking is complete. Carefully open the lid, being mindful of steam.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your Ninja Speedi.

- Always unplug the unit and allow it to cool completely before cleaning.
- The cooking pot and crisping plate are dishwasher safe. Alternatively, wash them with warm, soapy water and a non-abrasive sponge.
- Wipe the main unit and lid (exterior and interior) with a clean, damp cloth. Do not immerse the main unit in water.
- Ensure all parts are thoroughly dry before storing or next use.
- Do not use abrasive cleaning pads, steel wool, or harsh detergents.

7. TROUBLESHOOTING

If you encounter issues with your Ninja Speedi, refer to the following common solutions:

- **Unit does not power on:** Ensure the power cord is securely plugged into a functioning electrical outlet.
- **Cooking function does not start:** Verify that the lid is fully closed and the SmartSwitch is in the correct position for the selected mode. Press the START/STOP button.
- **Food not cooking evenly:** Ensure food is not overcrowded in the pot or on the crisping plate. For air frying, shake or flip food halfway through cooking.
- **Excessive steam or leakage:** Check that the lid is properly sealed and the cooking pot is correctly seated.

For persistent issues, contact Ninja customer support.

8. SPECIFICATIONS

Brand:

NINJA

Model Number:

ON500EUSTGD

Color:

Stone Gold

Product Dimensions:

35 x 33 x 31 cm

Capacity:

5.7 Liters

Power / Wattage:

1760 watts

Voltage:

230 Volts

Material:

Metal

Special Features:

Multifunctional Cooking Programs

Item Weight:

7.29 Kilograms

Recommended uses for product:

Bake, Fry, Dehydrate, Sauté

9. WARRANTY AND SUPPORT

For information regarding your product's warranty, please refer to the warranty card included with your purchase or visit the official Ninja website. For customer support, troubleshooting assistance, or to order replacement parts, please contact Ninja customer service through their official channels.

You can visit the official Ninja store for more products and support: [Ninja Store](#)