

[Manuals.plus](#) /

> [Xgody](#) /

> Xgody Gimbal 3 Smart Mini Projector User Manual

Xgody Gimbal 3

Xgody Gimbal 3 Smart Mini Projector User Manual

Model: Gimbal 3

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Xgody Gimbal 3 Smart Mini Projector. Please read this manual thoroughly before using the device and retain it for future reference.

The Xgody Gimbal 3 is a portable smart projector featuring WiFi6, Bluetooth 5.0, 4K support, built-in Android TV, auto keystone correction, and a 180° rotatable stand, designed for home cinema use.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Xgody Gimbal 3 Smart Mini Projector
- Remote Control
- Power Cord
- HDMI Cable
- User Manual (this document)



Image: The Xgody Gimbal 3 Smart Mini Projector shown with its included accessories: remote control, power cord, and HDMI cable.

3. SAFETY INFORMATION

Please observe the following safety precautions to prevent damage to the projector and ensure user safety:

- Do not block ventilation openings.
- Do not expose the projector to rain or moisture.
- Avoid looking directly into the projector lens when the lamp is on.
- Use only the power adapter supplied with the device.
- Place the projector on a stable, level surface.
- Keep the projector away from heat sources.

4. SETUP

4.1 Power Connection

1. Connect the power cord to the projector's power input port.
2. Plug the other end of the power cord into a suitable electrical outlet.
3. The power indicator light will illuminate.

4.2 Initial Placement and Adjustment

The Gimbal 3 features a 180° rotatable stand for flexible placement.

1. Place the projector on a flat, stable surface.
2. Adjust the projector's angle using the integrated 180° rotatable stand to project onto your desired screen or wall.
3. Power on the projector by pressing the power button on the device or remote control.



Image: The Xgody Gimbal 3 projector positioned on a surface, demonstrating its 180-degree rotatable stand for flexible projection angles.

4.3 Focus and Keystone Correction

The projector supports automatic keystone correction for a clear, rectangular image.

- The projector will automatically adjust the keystone correction upon startup or movement.
- Manual focus adjustment may be available via the remote control or on-screen menu if needed.

4.4 Network Connection (Wi-Fi)

The projector supports WiFi6 for fast and stable wireless connectivity.

1. Navigate to the "Settings" menu on the projector's interface.
2. Select "Network & Internet".
3. Turn on Wi-Fi and select your desired network from the list.
4. Enter the Wi-Fi password if prompted.

5. OPERATING INSTRUCTIONS

5.1 Remote Control Overview

The included remote control allows for easy navigation and control of the projector's functions.

- **Power Button:** Turns the projector on/off.
- **Navigation Buttons:** Up, Down, Left, Right for menu navigation.
- **OK Button:** Confirms selections.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Returns to the main Android TV interface.
- **Volume Buttons:** Adjusts audio volume.
- **Source Button:** Selects input sources (HDMI, USB).

5.2 Input Sources

The projector supports various input sources:

- **HDMI:** Connect external devices like gaming consoles, laptops, or Blu-ray players.
- **USB:** Play media files directly from a USB drive.
- **Built-in Android TV:** Access streaming apps and services directly via Wi-Fi.
- **Bluetooth:** Connect external audio devices like speakers or headphones.

To switch input sources, press the "Source" button on the remote control and select the desired input.

5.3 Using Android TV

The built-in Android TV system provides access to a wide range of applications.

1. Ensure the projector is connected to Wi-Fi.
2. From the home screen, navigate to the app launcher.
3. Select and open your desired streaming application (e.g., Netflix, YouTube).
4. Log in with your account credentials if required.

5.4 Bluetooth Connectivity

Connect Bluetooth audio devices for an enhanced sound experience.

1. Go to "Settings" > "Connected Devices" > "Pair new device".
2. Put your Bluetooth device into pairing mode.
3. Select your device from the list on the projector screen to pair.

6. MAINTENANCE

6.1 Cleaning the Lens

To maintain optimal image quality, keep the projector lens clean.

- Use a soft, lint-free cloth specifically designed for optical lenses.
- Gently wipe the lens in a circular motion.
- Do not use abrasive cleaners or solvents.

6.2 Cleaning the Projector Body

Wipe the exterior of the projector with a soft, dry cloth.

- Do not use liquid cleaners directly on the projector.
- Ensure ventilation ports are free from dust and obstructions.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet faulty	Ensure power cord is securely connected; Try a different outlet.
No image	Incorrect input source; Device not connected; Lens cap on	Select correct input source; Check HDMI/USB connections; Remove lens cap.
Blurry image	Out of focus; Incorrect keystone correction	Adjust focus manually if available; Reposition projector for auto keystone.
No sound	Volume too low; Muted; Incorrect audio output selected	Increase volume; Unmute; Check audio settings in Android TV or connected device.
Wi-Fi connection issues	Incorrect password; Router too far; Interference	Re-enter password; Move projector closer to router; Restart router.

8. SPECIFICATIONS

Feature	Detail
Model Name	Gimbal 3
Brand	Xgody
Native Resolution	1280 x 720 Pixels (Supports 4K/1080P)
Brightness	12000 Lumen
Contrast Ratio	10000:1

Feature	Detail
Connectivity Technology	3.5mm Jack, Bluetooth 5.0, HDMI, USB, Wi-Fi 6
Special Features	Built-In Android TV, Auto Keystone Correction, 180° Rotatable Stand
Recommended Uses	Home Cinema
Compatible Devices	Gaming Console, Laptop, Smartphone
Throw Distance	0.8 - 4 Meters
Item Weight	0.4 Kilograms

9. WARRANTY AND SUPPORT

The Xgody Gimbal 3 Smart Mini Projector comes with a **1-Year Manufacturer Warranty**.

For technical support, warranty claims, or further assistance, please contact Xgody customer service through their official website or the retailer where the product was purchased.

Please retain your proof of purchase for warranty purposes.