

[manuals.plus](#) /

› [ASHATA](#) /

› [ASHATA Big Buttons Landline Phone User Manual](#)

ASHATA ASHATA6nfc9rx4wb

ASHATA Big Buttons Landline Phone User Manual

Model: ASHATA6nfc9rx4wb

1. INTRODUCTION

This manual provides instructions for the ASHATA Big Buttons Landline Phone, designed for ease of use, especially for the elderly and visually impaired. It features large buttons, adjustable volume, and emergency calling functions to enhance communication and safety.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Handset
- 1 x Telephone Base
- 1 x Handset Cord
- 1 x Remote SOS Controller
- 1 x Keychain
- 1 x Instruction Manual (this document)
- 1 x Telephone Cord



BIG BUTTONS PHONE

Automatically dials 5 preset SOS numbers in emergencies, with remote control support for convenient remote distress signaling.



Image: The ASHATA Big Buttons Phone, showing the main unit, handset, and cords, representing the complete package contents.

3. PRODUCT FEATURES

- Large Illuminated Buttons:** Easy to see and press for improved usability.
- Bright Incoming Call Indicator:** Provides a clear visual alert for incoming calls.
- Two One-Touch Family Number Buttons:** Allows for quick dialing of two important contacts.
- Five Preset SOS Numbers:** Automatically dials emergency contacts in sequence during an SOS event.
- Remote SOS Controller:** Enables convenient distress signaling from a distance.
- 3-Level Adjustable Volume:** Customizable audio settings for clear conversations.
- Durable ABS Plastic Construction:** Ensures the phone's longevity and reliability.



3 levels of volume control

Adjust the volume level and save it automatically.



5 SOS numbers

Automatically dials 5 preset SOS numbers.

Support 2 groups of family number one key dialing,
convenient and quick connect with relatives.

Incoming call ring light reminder function

Reminds the user during calls, incoming calls and
stored numbers

Image: The ASHATA Big Buttons Phone in a home setting, illustrating its user-friendly design for family communication.

4. SETUP

The ASHATA Big Buttons Phone is designed for simple "Plug and Play" setup.

- 1. Connect Handset:** Plug one end of the coiled handset cord into the handset and the other end into the designated port on the telephone base.
- 2. Connect Telephone Line:** Plug one end of the telephone cord into the telephone base and the other end into your wall telephone jack.
- 3. Power Connection:** This phone is typically powered by the telephone line. No external power adapter is usually required.



Image: The ASHATA Big Buttons Phone with the handset detached, showing the connection points for the handset cord and telephone line.

5. OPERATING INSTRUCTIONS

5.1 Making a Call

1. Lift the handset.
2. Dial the desired phone number using the large numeric keypad.
3. Wait for the call to connect.
4. To end the call, place the handset back on the base.

5.2 Answering a Call

1. When the phone rings and the incoming call indicator light flashes, lift the handset.
2. To end the call, place the handset back on the base.

3 LEVEL VOLUME

Our large key wired telephone offers long distance calling with 3 level volume adjustment, ensuring clear audio during conversations.



Image: Close-up of the ASHATA Big Buttons Phone, highlighting the large keys and the volume control button, demonstrating ease of use.

5.3 Adjusting Volume

The phone features a 3-level adjustable volume control. Press the **VOL** button during a call to cycle through the volume levels. The phone will automatically save your preferred setting.



Image: The ASHATA Big Buttons Phone, emphasizing the volume control button for clear audio during conversations.

5.4 Programming Family Emergency Numbers (M1, M2)

The phone supports two one-touch family number buttons (M1 and M2) for quick dialing.

1. Lift the handset.
2. Press the **STORE** button (usually located near the M1/M2 buttons).
3. Dial the desired phone number you wish to save.
4. Press either the **M1** or **M2** button to save the number to that memory slot.
5. Replace the handset.

To dial a stored family number, simply lift the handset and press the corresponding **M1** or **M2** button.

2 FAMILY EMERGENCY NUMBERS

Enables fast connection to loved ones with two dedicated one touch family number buttons for swift communication.



Image: The ASHATA Big Buttons Phone, highlighting the two dedicated one-touch family number buttons for swift communication.

5.5 Programming SOS Numbers (Up to 5)

The phone can automatically dial up to 5 preset SOS numbers in an emergency.

1. Lift the handset.
2. Press the **STORE** button.
3. Dial the first SOS number.
4. Press the **SOS** button. The number is now saved as the first SOS contact.
5. Repeat steps 2-4 for up to four additional SOS numbers. The phone will dial them in sequence if the first number is unavailable.
6. Replace the handset.

To activate the SOS function, press the large **SOS** button on the phone base or the remote controller. The phone will automatically dial the preset SOS numbers in sequence until a connection is made.

CALL ALERT LIGHT

Includes an incoming call indicator light to alert users during calls, number storage, and usage, ensuring no important calls are missed.



Image: The ASHATA Big Buttons Phone, prominently featuring the large red SOS button for emergency dialing.

5.6 Remote SOS Controller

The included remote SOS controller allows for convenient distress signaling from anywhere within range in your home.

- To activate: Press the button on the remote SOS controller. The phone will initiate the SOS dialing sequence.
- Battery: The remote controller uses a CR2016 cell battery (included). Replace when the indicator light on the remote no longer illuminates or its range decreases significantly.



Image: The ASHATA Big Buttons Phone alongside its remote SOS controller, demonstrating the convenience of remote emergency signaling.

6. MAINTENANCE

- **Cleaning:** Wipe the phone with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cord Care:** Avoid tangling or excessive pulling of the handset and telephone cords to prevent damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Telephone cord not connected properly.	Ensure the telephone cord is securely plugged into both the phone base and the wall jack.
Cannot hear caller / Caller cannot hear me	Handset cord loose; Volume too low.	Check handset cord connection. Adjust volume using the VOL button.

Problem	Possible Cause	Solution
SOS function not working	SOS numbers not programmed; Remote controller battery low.	Refer to Section 5.5 to program SOS numbers. Replace remote controller battery (CR2016).
Incoming call indicator not flashing	Phone line issue; Indicator light malfunction.	Check if other phones on the line ring. If problem persists, contact your telephone service provider or ASHATA support.

8. SPECIFICATIONS

- **Item Type:** Big Buttons Phone
- **Material:** ABS
- **Family Emergency Contacts:** Supports 2 stored numbers (M1, M2)
- **SOS Numbers:** Supports up to 5 emergency numbers
- **Volume Control:** 3-level adjustment
- **Indicators:** Incoming call, Usage, and Storage status lights
- **Remote Controller Battery Type:** CR2016 cell (included)
- **Remote Controller Battery Capacity:** 80mAh
- **Product Dimensions:** 9.44 x 8.66 x 5.11 inches
- **Item Weight:** 2.22 pounds
- **Model Number:** ASHATA6nfc9rx4wb

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your package or contact ASHATA customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.