

[Manuals.plus](#) /

› [Baby Einstein](#) /

› Baby Einstein Take Along Opus Octopus Soother Instruction Manual

Baby Einstein 17488-000

Baby Einstein Take Along Opus Octopus Soother Instruction Manual

INTRODUCTION

The Baby Einstein Take Along Opus Octopus Soother is designed to comfort and engage babies from birth onwards, both at home and on the go. This multisensory plush toy features music, calming sounds, and various textures to encourage self-soothing, sensory exploration, and fine motor skill development.

TEACHES



Self Soothing



Sensory Skills



Fine Motor Skills



20+ melodies & sounds to calm & delight baby

Image: A baby happily holding the blue Opus Octopus Soother, highlighting its educational benefits for self-soothing, sensory skills, and fine motor skills.

PRODUCT FEATURES

- **Multisensory Engagement:** Designed to comfort and engage babies aged 0+ months.
- **Interactive Sounds:** Squeeze Opus to activate music and calming sounds.
- **Variety of Melodies & Sounds:** Features 20 melodies and 4 soothing sounds, including water sounds, shushing, and pink noise.
- **Continuous Play:** Provides up to 15 minutes of continuous music and sounds.
- **Volume Control:** Adjustable volume settings for different environments.
- **Portable Design:** Includes a clip for easy attachment to strollers, carriers, or diaper bags.
- **Versatile Use:** Can be used on flat surfaces for playtime or soothing.
- **Tactile Exploration:** Features stretchy arms and various textures for sensory development.
- **Easy to Clean:** Surface wipes clean for hygiene.

Engage with various textures

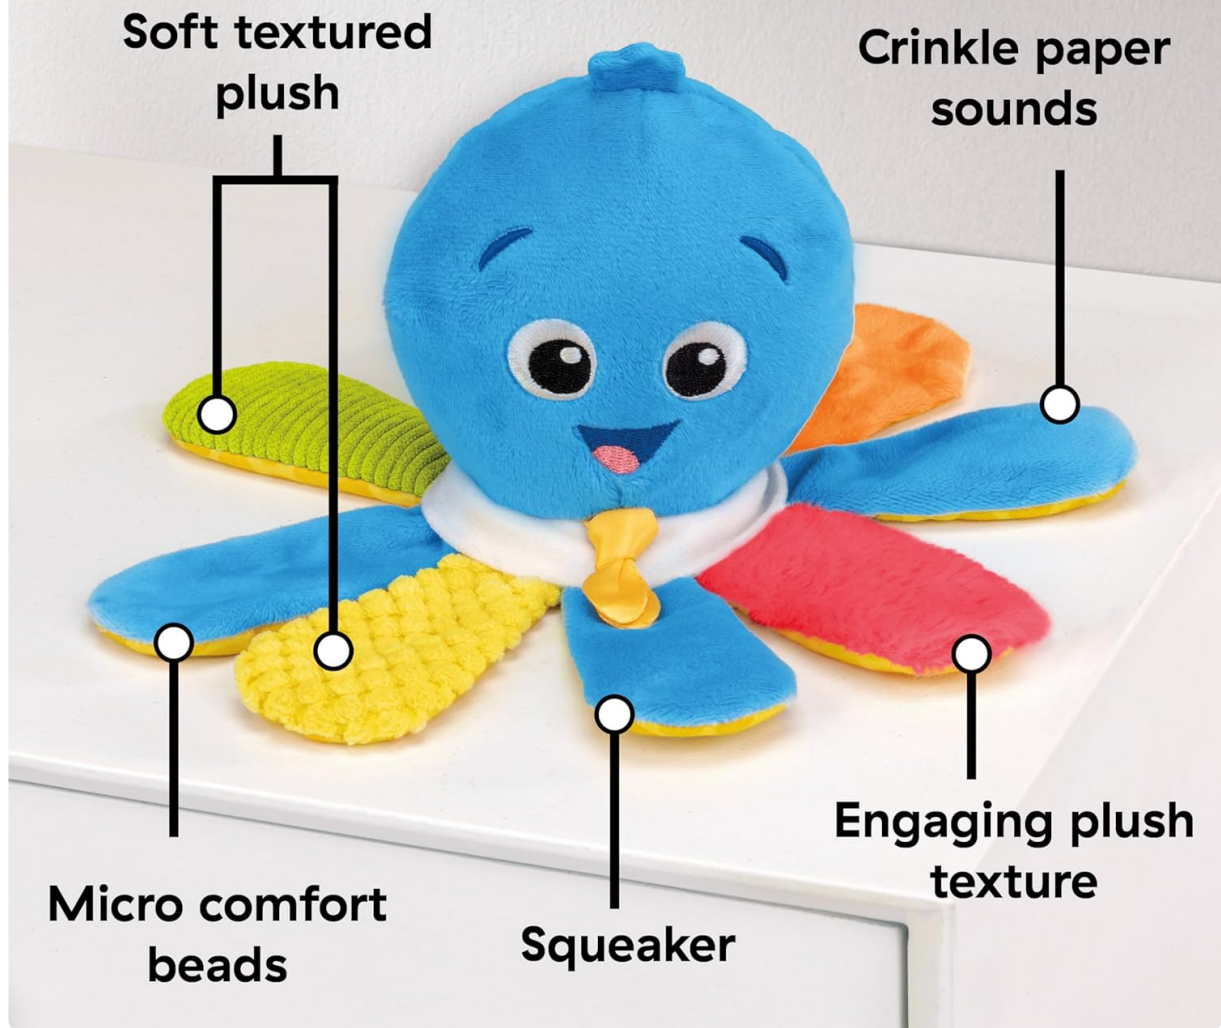


Image: A detailed view of the Opus Octopus Soother, highlighting its various engaging textures and features like the squeaker and crinkle paper sounds.



**Clip it or carry it.
Comfort on-the-go!**

Image: The Opus Octopus Soother clipped to a diaper bag, illustrating its convenient portability for on-the-go use.

SETUP

Battery Installation

The Opus Octopus Soother requires 2 AA batteries. Demo batteries are included, but it is recommended to replace them for optimal performance. To install or replace batteries:

1. Locate the battery compartment on the back of the soother.
2. Use a screwdriver to open the battery compartment cover.
3. Insert 2 new AA batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover with the screw.

**5 volume levels, just right
for every moment!**



Image: The back of the Opus Octopus Soother, showing the battery compartment and controls for volume and sound options.

OPERATING INSTRUCTIONS

Follow these steps to operate your Opus Octopus Soother:

1. **Power On:** Squeeze Opus the Octopus to power on the unit and activate sounds/melodies.
2. **Change Sounds:** Squeeze Opus again to cycle through different sounds and melodies.
3. **Volume Control:** Use the dedicated volume button on the back of the unit to adjust the sound level. There are 5 volume levels available.
4. **Timer Function:** Press and hold the volume button to set a timer for continuous play (up to 15 minutes).
5. **Portability:** Use the integrated clip on the back to attach Opus to a stroller, carrier, or diaper bag.
6. **Stationary Use:** Place Opus on a flat surface to play music and sounds while stationary.

- 1 8 soft sensory legs
- 2 Clip for portability
- 3 Volume control
- 4 Sounds options
- 5 On/off switch



Image: A visual guide to the Opus Octopus Soother's controls and features, including the on/off switch, volume control, and sound options.

Your browser does not support the video tag.

Video: An official product video from Kids II, Inc. demonstrating the features and use of the Baby Einstein Take Along Opus Soother.

MAINTENANCE

Cleaning Instructions

To maintain the cleanliness of your Opus Octopus Soother, simply wipe the surface clean with a damp cloth. Do not immerse the product in water or machine wash, as this may damage the electronic components.

TROUBLESHOOTING

If the soother is not functioning as expected, please check the following:

- **No Sound/Light:** Ensure that the batteries are correctly installed and are not depleted. Replace with fresh AA batteries if necessary.

- **Intermittent Function:** Check the battery compartment for secure connection. If issues persist, try replacing the batteries.
- **Volume Issues:** Verify that the volume is not set to the lowest level or muted. Adjust using the volume control button.

For further assistance, please refer to the manufacturer's contact information.

SPECIFICATIONS

Brand Name	Baby Einstein
Manufacturer	Kids2, Inc.
Model Number	17488-000
UPC	074451174887
Item Weight	0.4 Pounds
Item Dimensions (LxWxH)	2.76 x 3.94 x 12.01 inches
Power Source	Battery Powered (2 AA batteries)
Color	Blue
Material Type	Plastic

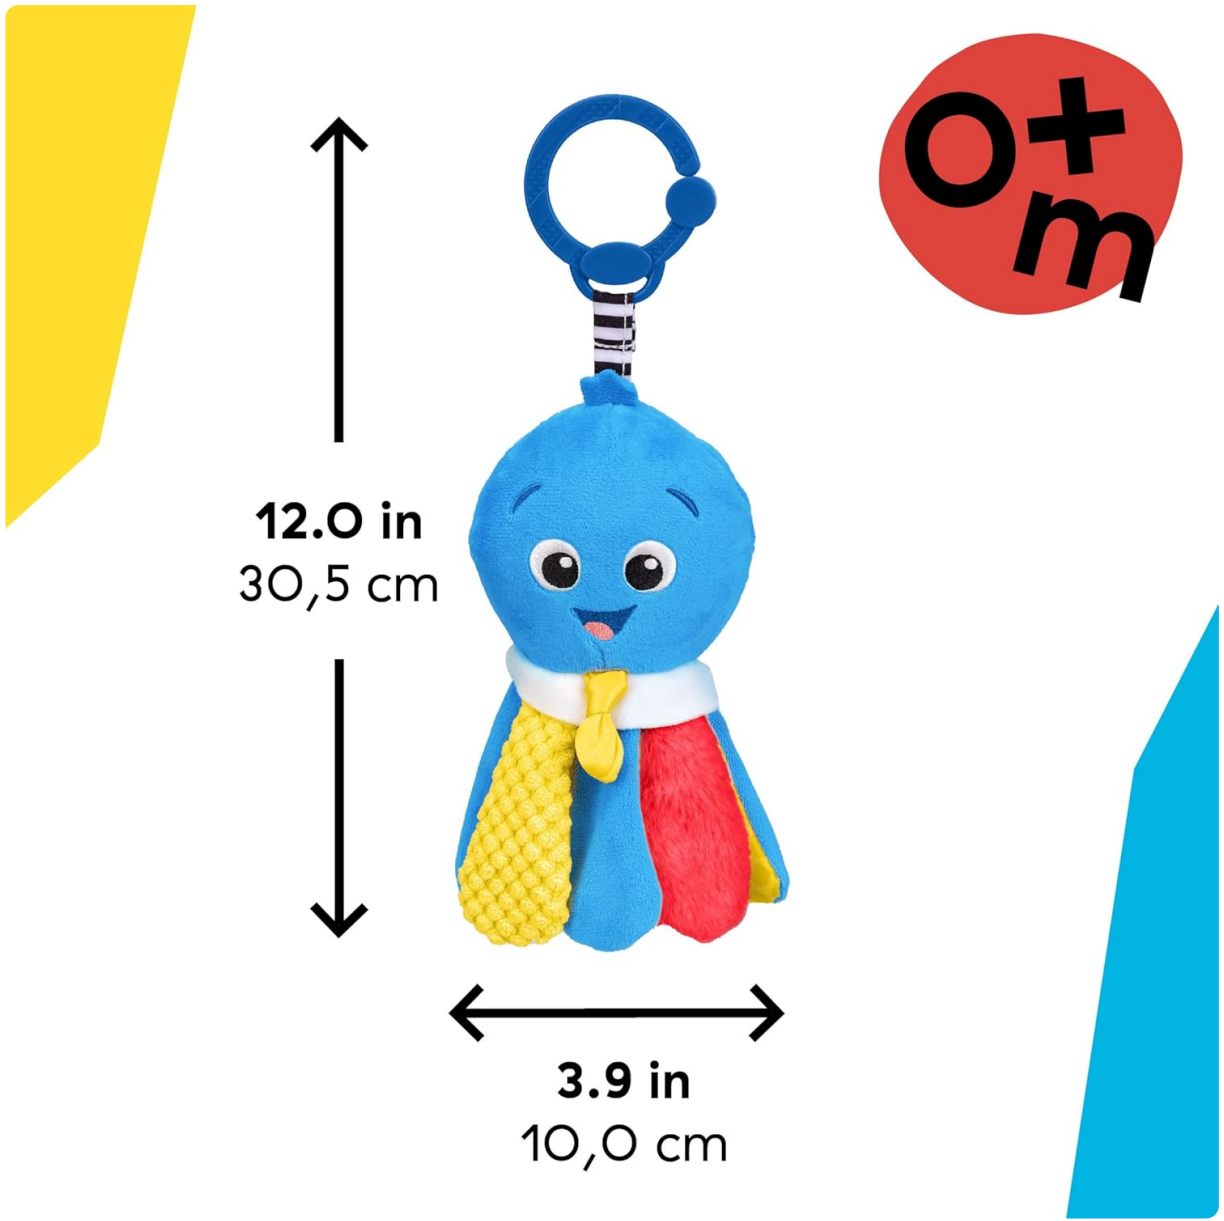


Image: Visual representation of the Opus Octopus Soother's dimensions.

WARRANTY AND SUPPORT

Specific warranty information for the Baby Einstein Take Along Opus Octopus Soother is not provided in the product details. For warranty claims, product support, or further inquiries, please contact Kids2, Inc., the manufacturer, directly. Their contact information can typically be found on their official website or on the product packaging.