

## Philips BRL137/00

# Philips Lady Shaver Series 6000 User Manual

Model: BRL137/00

Brand: Philips

## 1. IMPORTANT SAFETY INFORMATION

Please read this user manual carefully before using the appliance and save it for future reference. Improper use may lead to hazards or serious injuries.

- Avoid using the shaver on broken skin or irritated areas.
- Always allow the shaver to fully charge before use. Do not use it while charging.
- After each use, clean the shaver thoroughly and dry it completely to prevent bacterial growth.
- Keep the shaver away from water while charging.
- This appliance is suitable for use in a bath or shower. For safety reasons, the appliance can only be used cordless.

## 2. PRODUCT OVERVIEW

The Philips Lady Shaver Series 6000 (BRL137/00) is a cordless, wet & dry electric shaver designed for gentle hair removal on legs, body, and bikini areas. It features a 3-blade shaving system to minimize skin irritation.

### What's in the Box:

- 1x Lady Shaver
- 1x Shaving Head (pre-attached)
- 1x Trimming Comb
- 1x Bikini Trimmer Head
- 1x Bikini Trimmer Comb
- 1x Pouch
- 1x USB-A Charging Cable (power adapter not included)

# ACCESSORIES INCLUDED



SHAVING HEAD



BIKINI TRIMMER HEAD



POUCH



TRIMMING COMB



BIKINI COMB



USB-A CABLE INCLUDED  
Power adapter **not** included

Figure 1: Philips Lady Shaver Series 6000 and Included Accessories

## 3. SETUP

### Charging the Shaver:

1. Ensure the shaver is turned off.
2. Connect the USB-A charging cable to the charging port on the shaver.
3. Plug the other end of the USB-A cable into a compatible USB power adapter (not included) or a USB port.
4. The charging indicator light will illuminate. A full charge takes approximately 8 hours and provides up to 80 minutes of cordless use.



BUY ONCE,  
USE FOR YEARS<sup>3</sup>

Plastic parts made with  
>55% recycled plastics,  
paper-based packaging



Figure 2: USB-A Charging Cable

## 4. OPERATING INSTRUCTIONS

### General Shaving (Legs and Body):

1. For best results, gently exfoliate your skin one day before shaving to remove dead skin and help prevent ingrown hairs.
2. Ensure the shaving head is securely attached to the shaver.
3. If hair is longer than 3mm, pre-trim it using the trimming comb attachment for optimal performance.
4. Press the power button to turn on the shaver.
5. Place the shaver flat on your skin. Shave and trim against the direction of hair growth.
6. Be gentle and move the shaver slowly from your ankle to your knee. Use your free hand to stretch the skin for a closer shave.
7. The shaver can be used wet (in the shower or bath) or dry, according to your preference.



# GENTLE, CLEAN SHAVE

even on  
sensitive areas



Figure 3: Gentle Shaving Technique



## PREVENT NICKS & CUTS

Rounded trimmer tips glide smoothly over the skin and prevent nicks & cuts

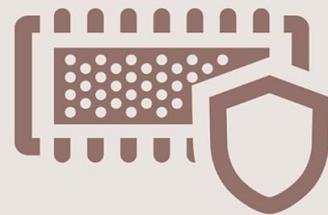


Figure 4: Shaver Head Design for Nick Prevention

# WET & DRY

Wet for the shower,  
dry for on-the-go



Figure 5: Wet & Dry Use

## **Using the Bikini Trimmer Head and Comb:**

1. Turn off the shaver and remove the shaving head.
2. Attach the bikini trimmer head to the shaver.
3. For precise trimming, attach the bikini trimmer comb to the bikini trimmer head.
4. Turn on the shaver. Use your free hand to stretch the skin in the bikini area.
5. Move the trimmer slowly and gently to trim and shape the bikini area as desired.

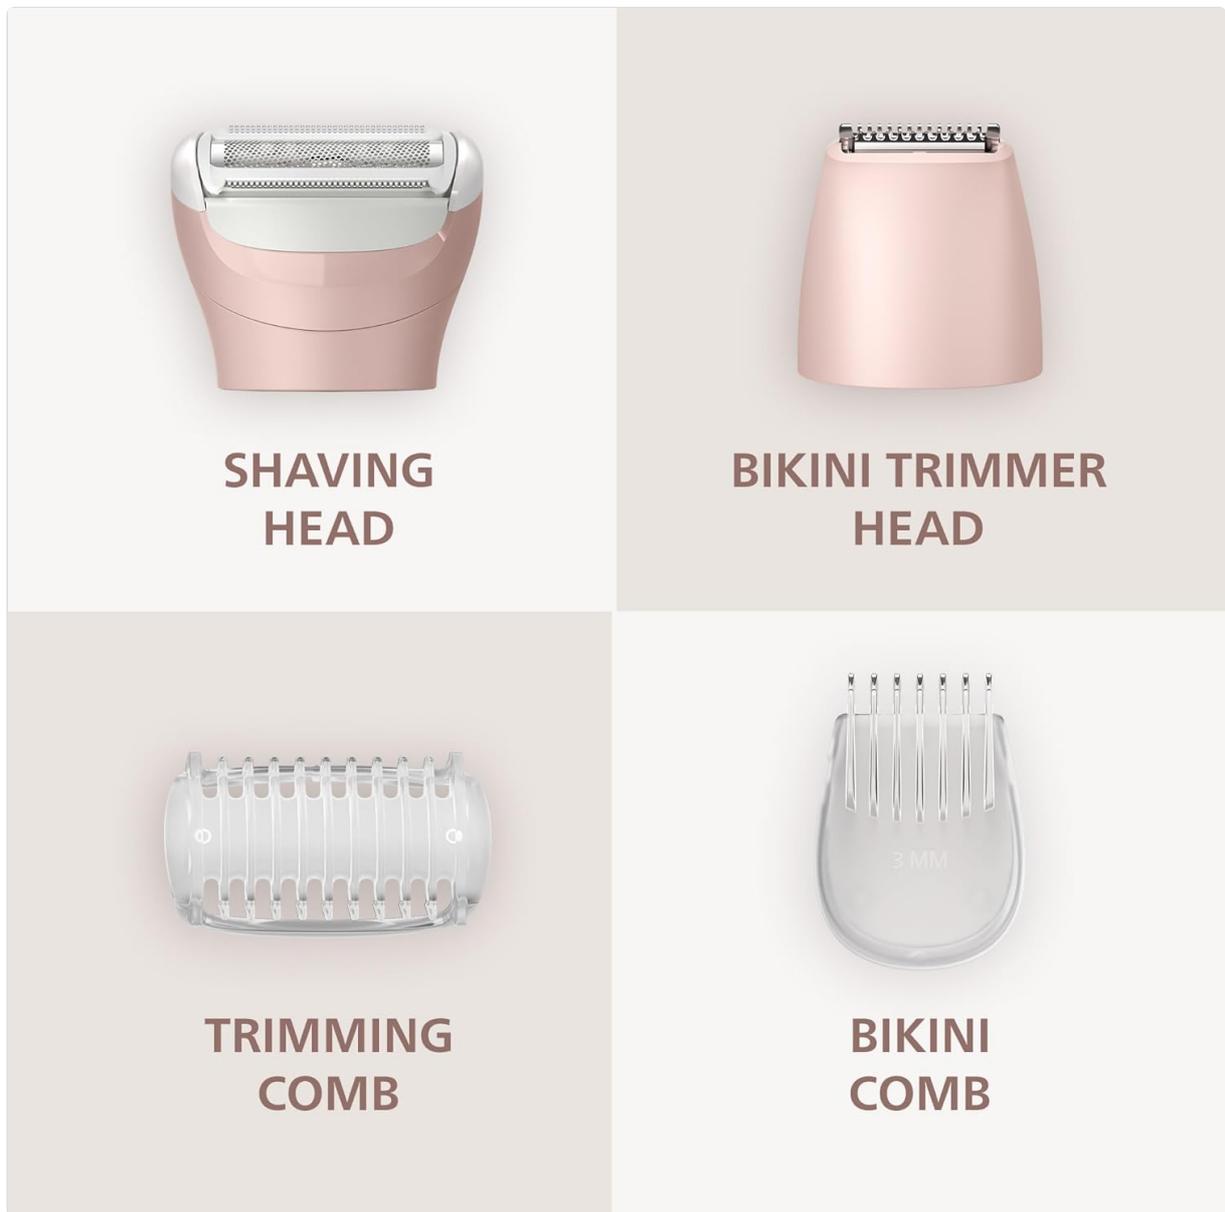


Figure 6: Shaving and Trimming Sensitive Areas

### Official Product Video:

Video 1: Philips Lady Shaver 6000 & 8000 Series - How to Shave Gently. This video demonstrates the proper use of the shaver for various body parts and attachment changes.

## 5. MAINTENANCE AND CLEANING

1. After each use, turn off the shaver and remove the shaving head or trimmer head.
2. Gently blow away any loose hair from the shaver body and the head.
3. Rinse the shaving head and trimmer heads under lukewarm running water. Ensure all hair residues are removed.
4. Let all attachments air dry completely before reattaching them to the device or storing them.
5. For optimal performance, replace the shaving foil once a year.

## 6. TROUBLESHOOTING

- **Shaver not turning on:** Ensure the shaver is fully charged. Check if the power button is pressed correctly.

- **Shaver not charging:** Verify that the USB-A cable is securely connected to both the shaver and a working USB power source. Remember, a power adapter is not included.
- **Poor shaving performance / pulling hair:** Ensure the shaving foil is clean and free of debris. If the foil is damaged or worn, replace it. For longer hair, pre-trim with the appropriate comb attachment.
- **Skin irritation:** Ensure the shaver head is clean and undamaged. Always shave on clean skin. If irritation persists, consult a dermatologist.

## 7. SPECIFICATIONS

Feature	Specification
Model Number	BRL137/00
Power Source	Battery Powered (Cordless)
Battery Type	Rechargeable
Battery Runtime	Up to 80 minutes
Charging Time	8 hours
Shaving System	3-Blade System, Foil Head
Wet & Dry Use	Yes
Blade Material	Stainless Steel
Recommended Uses	Legs, Body, Bikini Line, Underarm

## 8. WARRANTY AND SUPPORT

This Philips Lady Shaver Series 6000 (BRL137/00) comes with a 2-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

For product support, troubleshooting assistance, or to inquire about replacement parts, please visit the official Philips website or contact Philips customer service in your region. You can find contact information on the Philips website or in the packaging materials.